



---

[Home](#) » [iGear](#) » **iGear Apollo Bluetooth Party Speaker User Guide** 

**Contents** [ [hide](#) ]

- [1 iGear Apollo Bluetooth Party Speaker](#)
- [2 SPECIFICATIONS](#)
- [3 IDENTIFYING PARTS](#)
- [4 CHARGING](#)
- [5 BLUETOOTH PAIRING](#)
- [6 CONTROLS](#)
- [7 WARRANTY](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)



## **iGear Apollo Bluetooth Party Speaker**



## PACKAGE CONTENTS






- Bluetooth Speaker
- TYPE- A to C Charging Cable
- Aux Cable
- Warranty Card
- User Guide

## SPECIFICATIONS

- **Bluetooth Version:** 5.3
- **Chipset:** JL
- **Range:** Up to 10 m
- **Profiles:** A2DP HFP, HSP, AVRCP
- **Driver:** 2 x low
- **Impedance:** 4Ω
- **Frequency Response:** 90 Hz – 20 kHz
- **Signal to Noise Ratio:** 80 dB
- **Total Power Output:** 20W
- **Charge Input:** DC 5V, 1 A
- **Battery Capacity:** 3000 mAh
- **Charge Time :**6 Hours

- **Playback Time:** 3 – 5 Hours
- **Max Size for USB Input:** 64
- **Max Size for SD Input:** 64 GB

## IDENTIFYING PARTS

-  Power On / Power Off / RGB Light
-  Volume Up / Next Track Button
-  Volume Down / Previous Track Button
-  Mode Switch / TWS Connection
-  Play / Pause

## CHARGING

- Please fully charge the Bluetooth speaker before using it for the first time.
- The red indicator light will be lit while the speaker is charging.
- When the battery is full, the red indicator light will switch off automatically.
- Avoid charging the speaker for more than 8 hours.

## BLUETOOTH PAIRING

Your speaker must be paired to a Bluetooth device before it can be used. It is only necessary to pair your speaker once with each device.

1. Press the power on button. The LED light will flash blue and a welcome tone will be heard.
2. Press the M Button to switch to Bluetooth mode. The speaker will beep, indicating it's ready to pair with your Bluetooth playback device.

### Pairing a second speaker:

1. Both speakers need to be paired with each other before connecting to your Bluetooth device.
2. When both speakers are in Bluetooth mode, press the Button on one of the speakers

to pair them together. You'll hear a connection tone once both speakers are paired. This pairing only needs to be done once.

### Connecting to your Bluetooth device:

1. Activate Bluetooth on your playback device and search for "iGear Apollo". Select "iGear Apollo" from the device list to connect. You'll hear a connection tone after successful pairing.
2. You can now play audio through the speaker.
3. Music tracks can be selected either on the speaker or your playback device (smartphone, computer, tablet, etc.). Press the A Button to skip to the next song, or the V Button to play the previous song.
4. Volume can be controlled either on the speaker or your playback device. Press and hold the A Button or the V Button to adjust the volume.
5. Press the Button on the speaker to play or pause the music.

## CONTROLS

### Function Operation

Function	Operation
Increase Volume	Press the $\wedge$ Button once
Decrease Volume	Press the $\vee$ Button once
Switch to Next Track	Long press the $\wedge$ Button
Switch to Previous Track	Long press the $\vee$ Button
Play or Pause Track	Press the $> $ Button once
Navigate between the USB, SD, FM Radio, Bluetooth and Aux modes	Short press the M Button
RGB Light	Short press the RGB Light Button

TWS Connection	Double press the M Button
----------------	---------------------------

## Bluetooth and USB Mode

Function	Operation
Increase Volume	Press the $\wedge$ Button once
Decrease Volume	Press the $\vee$ Button once
Switch to Next Track	Long press the $\wedge$ Button
Switch to Previous Track	Long press the $\vee$ Button
Play or Pause Track	Press the $> $ Button once

**Note:** None of these buttons will work in AUX Input mode, except for the volume buttons.

## FM RADIO

Function	Operation
Increase Volume	Press the $\wedge$ Button once
Decrease Volume	Press the $\vee$ Button once
Navigate up through saved channels	Long press the $\wedge$ Button
Navigate down through saved channels	Long press the $\vee$ Button
Automatic Station Scan	Press the $> $ Button once

## PLAYING MP3'S FROM A USB FLASH DRIVE OR SD CARD

1. Power on.

2. Insert USB flash disk into the slot. The music stored will be played automatically.
3. Press the A button on the speaker to skip to the next song, or the V button to play the previous song.
4. Press the button on the speaker to play or pause the music.
5. Press and hold the A button or the V button to adjust the volume.

**Note;** In Bluetooth mode, inserting a USB flash drive will disconnect Bluetooth and switch to playing from the USB flash drive. Press the M Button to switch back to Bluetooth mode.

## **ALIX-IN**

1. Plug the provided audio cable into the compatible device's Aux input and then into the Aux input of the speaker.
2. Press and hold the A button or the V button to adjust the volume.

## **FM Radio**

1. Once the device is turned on, press the M Button to cycle to FM radio mode.
2. Long press the button to search for all available FM channels and store them automatically
3. To switch between radio stations, press the A button or the V button to select radio stations.

**Note:** Insert the AUX cable into the speaker to receive good signal reception. Inserting the AUX cable while the speaker in FM mode will cause the speaker to automatically switch to Aux mode. Pressing the M button again will cycle back to FM mode.

## **LOCATING THE BLUETOOTH MENU**

For iPhone, iPad, and iPod Touch:

- Go to Settings on your device.
- Select Bluetooth. If Bluetooth is off, switch it on.
- Your iPhone/iPad/iPod will automatically search for new devices.

## For Android Phones and Tablets:

- Go to the Settings Menu on your device.
- Choose Bluetooth (on older Android devices, Bluetooth is located in the Wireless & Networks menu).

If Bluetooth is off, toggle it on.

- Select “Search for devices” if your phone or tablet does not automatically search for new devices.

**CAUTION:** Do not remove panel covers by unscrewing them.

To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to a qualified service personnel only.

## WARRANTY

- **Warranty period:** 1 Year
- In case of consumer complaints:
- **Customer Care** – +91 9372667193
- **Email:** [support@igear.asia](mailto:support@igear.asia)  
(Between 10am to 5pm, Mon-Fri)
- [www.igearworld.com](http://www.igearworld.com)

For Warranty Scan the QR Code



## Documents / Resources

	<a href="#">iGear Apollo Bluetooth Party Speaker [pdf]</a> User Guide Apollo Bluetooth Party Speaker, Apollo, Bluetooth Party Speaker, Party Speaker
-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------

## References

- [User Manual](#)

 Apollo, Apollo Bluetooth Party Speaker, Bluetooth Party Speaker, iGear, Party Speaker

 iGear Speaker



# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:



e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.