



iGear Dynamo Wireless Bluetooth Speaker User Manual

[Home](#) » [iGear](#) » iGear Dynamo Wireless Bluetooth Speaker User Manual 

Contents

- [1 iGear Dynamo Wireless Bluetooth Speaker](#)
- [2 SPECIFICATIONS](#)
- [3 CONNECT TO BLUETOOTH DEVICE](#)
- [4 TWS OPERATION](#)
- [5 INSTALLATION](#)
- [6 ACCESSORIES](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

igear

iGear Dynamo Wireless Bluetooth Speaker



SPECIFICATIONS

- **Bluetooth version:** 5.0
- **Speaker driver unit size:** 4 INCH
- **Output power:** 16W
- **Frequency response:** 100Hz-20KHz
- **Signal-to-noise ratio:** >8SdB
- **FM scan range:** 87.5-108.0Mhz
- **Wireless range:** 10 meter
- **Max memory USB/SD:** 32GB
- **USB charging:** DC 5V
- **Battery capacity:** 1200mAh
- **Playtime:** Upto 4 hours at 50% Volume
- **Charging via USB port (PC):** 2-3 hours charging time

CONNECT TO BLUETOOTH DEVICE

1. Turn on the iGear Dynamo.
2. Switch ON your mobile device's Bluetooth.
3. search for the name "iGear Dynamo" and pair the device.
4. Once the device is paired, Bluetooth will automatically connect when the unit is turned on.


TWS OPERATION

1. Turn on both speakers at the same time.
2. Choose one of them, on one of the speakers press and hold the "M" button for a few seconds, then a notification sound will indicate of pairing.

Note: TWS works in Bluetooth Mode only

INSTALLATION

1. Digital Display
2. TF Card slot
3. Previous/Back Button
4. Play/ Pause Button
5. Forward/ Next Button
6. Mode Button
7. USB slot
8. SV Charging Port
9. AUX Port
10. Mic Port
11. Power (ON/ OFF) /Master volume knob

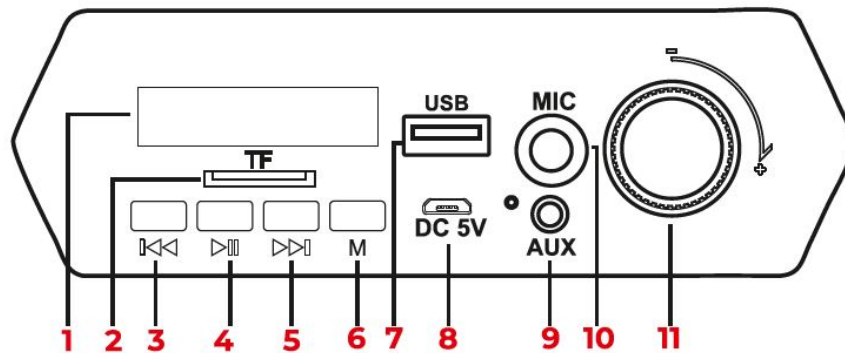

NOTE: If FM mode reception is not good, connect a Micro USB cable for better FM reception.

ACCESSORIES

- **Charging cable:** 1 piece
- **Remote:** 1 piece
- **Corded Mic:** 1 piece
- **Aux cable:** piece.

AUX-IN

To use AUX-IN, simply plug in the audio cable into the AUX jack, and press 'M' to switch to AUX-IN mode. You can long press ⏮ and ⏭ to turn down and turn up the volume. Please note that under AUX-IN mode, you will not be able to shift to Prev. and Next through the buttons on the Bluetooth speaker, it can be controlled by the connected devices.

USB/TF CARD

Insert the USB/TF card into the USB/TF slot. It will read the MP3 format music automatically. Press ⏮ to Play/Pause. Short Press ⏭ or ⏮ switch to Prev or Next Song. Long press ⏭ or ⏮ increase or decrease the volume.

FM RADIO

Long press the Play/Pause ⏮ button, it will search for the available stations and save them automatically. Once the search is completed, Short press ⏭ the button ⏮ to switch between the saved stations. Long press ⏭ or


 increase or decrease the volume.

CHARGING

Use the original charging cable to charge the device A Red LED lights up when the device is charging.

- **Warranty period:** 1 Year
- **In case of consumer complaints:** Toll-free number -1800 22 8495
- **Email:** sales@igear.asia (Between 10 am to 5 pm, Mon-Fri)

Documents / Resources

	iGear Dynamo Wireless Bluetooth Speaker [pdf] User Manual Dynamo Wireless Bluetooth Speaker, Dynamo, Wireless Bluetooth Speaker, Bluetooth Speaker , Speaker
---	--

[Manuals+.](#)