



## iGear GRAPE Portable Bluetooth Speaker User Manual

[Home](#) » [iGear](#) » iGear GRAPE Portable Bluetooth Speaker User Manual 

### iGear GRAPE Portable Bluetooth Speaker

 


## Contents


- 1 Contents
- 2 Product structure
- 3 Power ON/OFF
- 4 Bluetooth connection
- 5 Answer incoming calls
- 6 Reject Incoming calls
- 7 End call
- 8 Redial call
- 9 Bluetooth disconnection
- 10 Light Modes
- 11 Voice Assistant
- 12 Mode switching
- 13 TF card mode
- 14 AUX mode
- 15 USB mode
- 16 Equalizer mode
- 17 Directions to play music
- 18 True Wireless Stereo (TWS)
- 19 Power Bank
- 20 Charging
- 21 Specifications
- 22 Microphone Mode MIC Functions
- 23 Microphone Specifications
- 24 MIC Functions
- 25 Precaution
- 26 Warranty
- 27 Documents / Resources
- 28 Related Posts

## Contents


- Bluetooth Speaker X I

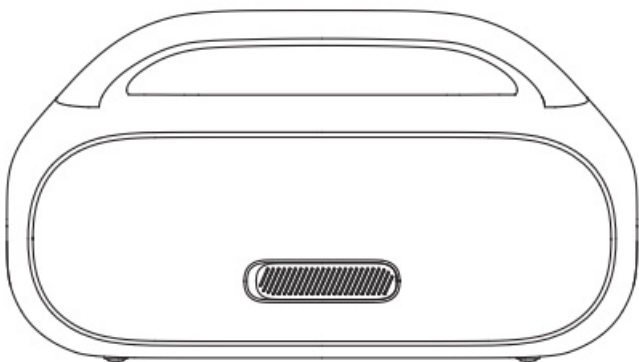

- Dual 35mm AUX cable X I

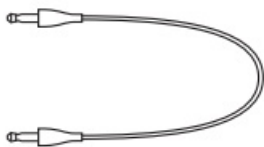 

- Type-C Charging Cable X I

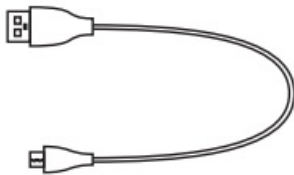 

- Microphone x 1




- User manual X 1



## Product structure

 1. Blue light
2. Power switch
3. Play/Pause button
4. PREVIOUS/VOL-
5. Power indicator (4 sections)
6. NEXTNOL+
7. Light mode button
8. EQ button
9. White light
10. USB port
11. AUX port
12. TF port
13. Type-C charging port

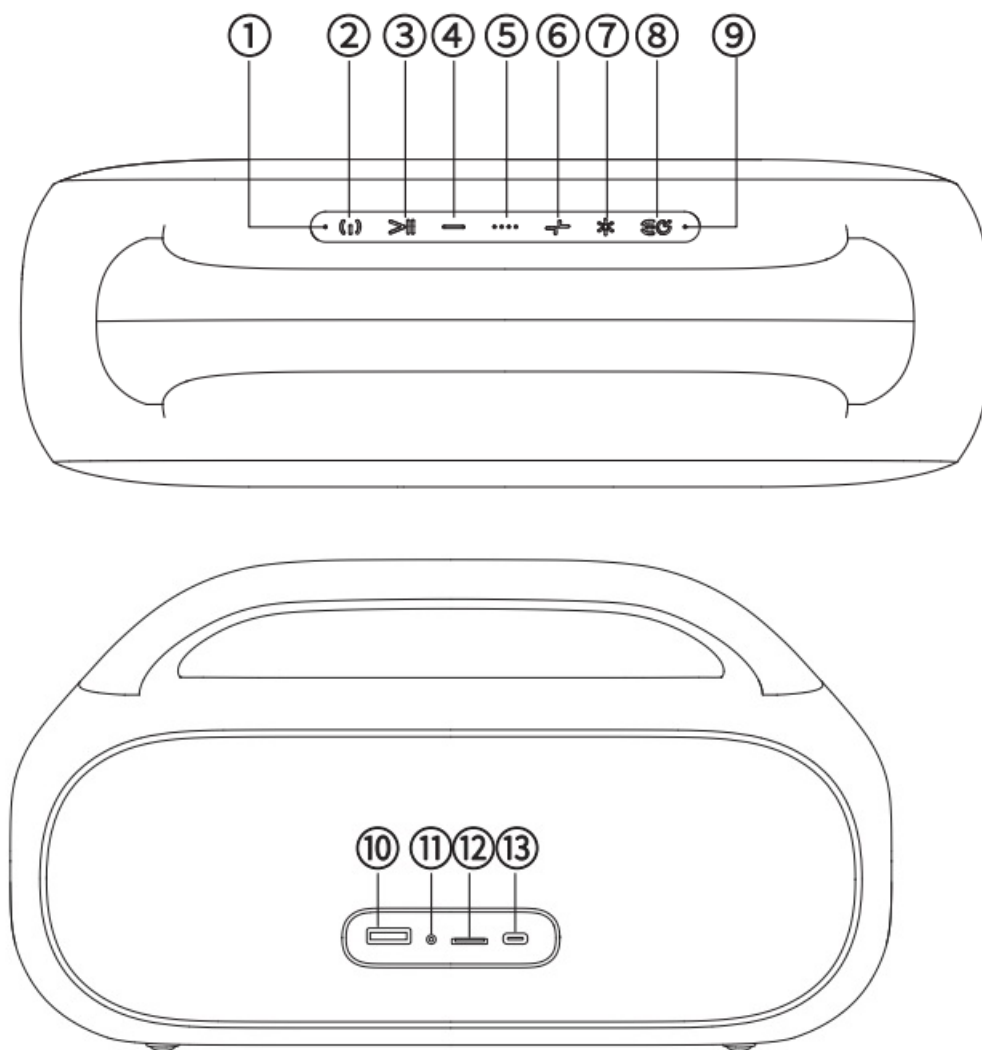

## Power ON/OFF

1. Long press the power switch for 2 seconds. to turn on, the LED indicator flashes blue.
2. Long press the power switch for 2 seconds to turn off, the LED status indicator goes off.
3. Double press the power switch, the power indicator lights up (30 seconds each time)

## Bluetooth connection

1. Turn on the Bluetooth speaker, the LED indicator flashes blue continuously while waiting for the speaker to be paired.
2. Then turn on the Bluetooth of your phone and search for " iGear Grape". Click manually to connect. If the connection is successful, the LED indicator will stop flashing
3. The speaker can automatically reconnect to the last paired device. So when the Bluetooth of your device turns on, (Just turn on the speaker), it will automatically reconnect.

## Answer incoming calls

Press the play/pause button to answer incoming calls.

## Reject Incoming calls

Long press the play/pause button for 2 seconds to reject the incoming call.

### **End call**

Press the play/pause button to end the ongoing call.

### **Redial call**

Press the play/pause button twice to redial the last call.

### **Bluetooth disconnection**

Long press the play/pause button to disconnect the Bluetooth connection.

### **Light Modes**

Short press the light mode button to switch on the light effect (there are 8 different lighting effects.) press the ninth time to turn off the lights.

### **Voice Assistant**

Long press the Light mode button to activate voice assistant.

### **Mode switching**

Short press the power button to switch between different modes.

### **TF card mode**

Simply insert the TF card into the TF card slot and the device will automatically recognize the TF card and play the music stored in it.

### **AUX mode**

Connect your music player/smartphone to the speaker with the 3.5mm AUX cable provided in the box and short press the power button on the speaker it will switch to the AUX mode.

### **USB mode**

Simply insert the USB drive into the USB slot and the device will automatically recognize the USB drive and play the music stored in it.

### **Equalizer mode**

Short press the EQ mode button switch between normal and Bass boost sound effects Long press the EQ mode button for 6 seconds to clear pairing records, restore the default volume and prompt tone, and automatically shut down.

### **Directions to play music**

1. Short press the play/pause button to pause/play;
2. Long press the “-“for PREV
3. Long press the “+”for NEXT
4. Short press the “-“for VOL –
5. Short press the “+”for VOL+

## True Wireless Stereo (TWS)

You can connect two “iGear Grape” speakers as a pair for stronger stereo and surrounding effect.

1. Make sure the Bluetooth is OFF on your smartphone/media player;
2. Turn on two iGear Grape speakers;
3. Press the EQ mode button twice on both the speakers and a prompt sound will appear, which means both speakers are now In TWS mode.
4. Then turn on the Bluetooth of your phone and search for “iGear Grape11” • Click manually to connect.

## Power Bank

Speaker also double as power bank for charging smartphones and other devices over USB cable (Input voltage: 5V/1A). If the Bluetooth function of the speaker is not turned on, the speaker can only charge other electronic devices for 30 minutes, and then automatically turn off.

## Charging

1. As the product has a built-in non-removeable and rechargeable battery, we recommend to use the Type-C cable provided with the speaker
2. The power LED lights up red while charging and goes off when charging is complete

## Specifications

IPX6 Waterproof

**Bluetooth version:** V5.3

**Rated power:** 70W

**Speaker frequency:** 80Hz-18KHz

**Speaker drivers :** 79mm X 2

**Tweeters:** 31mm X 2

**Play time:** Up to 18Hrs (50% Volume)

**Charging time:** 5Hrs

**Battery:** 7.2V/4000mAh

**Support:** BT, AUX, TWS, TF, SD, MIC, Hands-Free calls,

**Input voltage:** DC5V/24A (max)

**Charging port :** Type-C

**Product size:** 34.2cm X 11.5cm X 18.7cm

**Material:** ABS+Fabric

## Microphone Mode MIC Functions

Use for the first time: Turn on the Bluetooth speaker first, press and hold the light mode button for about 3 seconds, then turn on the microphone, and press the Power button on the microphone 3 times. Once the

connection is successful, the speaker and the microphone will be automatically paired for the next time use.

## Microphone Specifications

**Output power:** 4W

**Battery:** 3.7V /1800mAh

**Play time:** 4-5 Hours (Medium volume)

**Charging time:** 2-3 Hours

**Wireless working range:** 15M (without obstacles)

**Input voltage:** DC5V/1A

**Charging Port:** Type-C

**Product size:** 24.6 cm x 5.2cm

## MIC Functions

Button	Operation	Function Description
Power ON/ OF F	Short press	Power on
	Long press	Power off
	Triple click	Disconnect the speaker and mic.
PRI	Short press	Eliminate the original sound of vocals in music
	Long press for 3S	Super echo
		Karaoke function
		Female voice
		Male voice
		Baby sound
		Default soundtrack
Vol+	Short press	Volume increase
Vol-	Short press	Volume decrease
Ech+	Short press	Increase Echo intensity (Work s in Default Mode)
Ech-	Short press	Decrease Echo intensity (Works in Default Mode)
SET	Short press	Change frequency
	Lona press	A,B Channel Switching

## Precaution

1. Please follow the instructions to operate.
2. Please charge the product with input power of or below 5V/24A, in order to protect the battery.
3. In case of any malfunction, press and hold the play/pause button for 8 seconds to automatically reset the machine

4. Please store or use the product in a normal temperature environment.
5. Please keep the product away from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments.
6. Don't jam the ports of the product, such as charger port, LED port and microphone etc.

## Warranty

Warranty period: 1 Year  
In case of consumer complaints:  
Customer Care – +91 9372667193  
Email: [sales@igear.asia](mailto:sales@igear.asia)  
(Between 10am to 5pm, Mon-Fri)  
[www.igear.asia](http://www.igear.asia)



## Documents / Resources

	<p><a href="#">iGear GRAPE Portable Bluetooth Speaker</a> [pdf] User Manual GRAPE Portable Bluetooth Speaker, GRAPE Speaker, GRAPE, Speaker, Portable Speaker, Bluetooth Speaker, GRAPE Bluetooth Speaker, Portable Bluetooth Speaker</p>
--	---

[Manuals+.](#)