



## iGear iG-1023 Dynamo Build Your Party User Manual

[Home](#) » [iGear](#) » iGear iG-1023 Dynamo Build Your Party User Manual 

### Contents

- [1 iGear iG-1023 Dynamo Build Your Party](#)
- [2 Features](#)
- [3 Specifications](#)
- [4 Accessory](#)
- [5 Connect to Bluetooth device](#)
- [6 Bluetooth](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



## iGear iG-1023 Dynamo Build Your Party



### Features

Bluetooth wireless connectivity Supports USB/TF card AUX function Karaoke function Rechargeable Lithium battery

### Specifications

- Output power : 10W
- Driver unit size : 4Inch
- Impedance : 3 Ohm
- S/N ratio :  $\geq 85\text{dB}$
- Separation :  $\geq 80\text{dB}$
- Distortion :  $\leq 10\%$
- Frequency response : 10Hz-20KHz
- Bluetooth version : V5.0
- Bluetooth range : 10 meters
- Bluetooth pairing name : iGear-Dynamo
- Bluetooth profiles supported : A2DP


- USB & TF max. memory supported : 32 GB
- Battery capacity : Built-in 1200mAh
- Battery type : Li-ion
- Charging indicator : Yes
- Input power : DC 5V

## Accessory

- Charging cable : 1piece
- Aux cable : 1piece
- User manual : 1piece
- Remote : 1piece

## Connect to Bluetooth device

Turn on the speaker unit and the Bluetooth switch on your mobile/other device and search for the speaker model name "iGear-Dynamo". Pair the device. Once the device is paired, Bluetooth will automatically connect every time the unit is turned on subsequently.

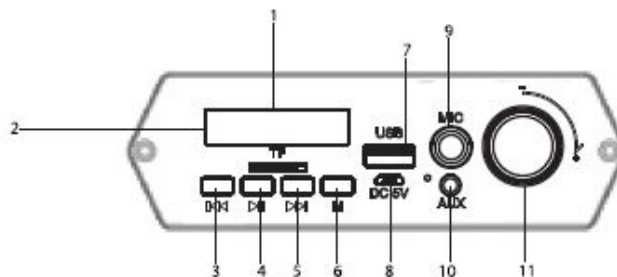

1. Digital Display
2. TF-card slot
3. Previous / Back button
4. Play / Pause button
5. Forward / Next button
6. Mode button
7. USB slot
8. 5V charging port
9. Mic jack
10. AUX-IN jack
11. Power on/off and Master volume knob

## Bluetooth

Turn on the speaker, it come into the Bluetooth mode directly. After pairing, the device can play music. Short time Pressto Pay/Pause, Short press and to surf through Prev. and Next. Long press and to turn down and turn up the volume.

## AUX-IN

AUX-IN using the audio cable into AUX jack, and press 'M' to switch to AUX-IN mode. Long press and to turn down and turn up the volume. Under AUX-IN, it can't shift to Prev. and Next by Bluetooth speaker, but can be controlled by connected devices.

## USB/TF card

Insert the U flash memory or TF card into the USB/TF slot. It will read the MP3 format music automatically. Press to Play/Pause. Short press and to surf Prev. and Next. Long press and to turn down and turn up the volume.

## FM Radio

Long press to search FM channels automatically. This operation will scan all FM stations and pre-record them to memory. The scan procedure will take several minutes to complete and should not be interrupted. Once complete, you can short press or to move forward or backward. Long press or to turn down or turn up Volume.

**Note:** AUX Port connection can receive the FM radio clearly as, it has the same function as the antenna.

## Charging

Please use the original charging cable to charge Red LED display when on charging.

iGear Tech Pvt. Ltd., 204, Sai Corporate Park, Laxmi Nagar, Off Link Road, Goregaon West, Mumbai – 400104.  
In case of consumer complaints: Toll free number – 1800 22 8495, Email: [sales@igear.asia](mailto:sales@igear.asia) (Between 10am to 5pm, Mon- Fri)

## Documents / Resources

	<p><a href="#">iGear iG-1023 Dynamo Build Your Party</a> [pdf] User Manual iG-1023 Dynamo Build Your Party, iG-1023, Dynamo Build Your Party</p>
---	--