



iGear ROLL Bluetooth Speaker User Manual

[Home](#) » [iGear](#) » iGear ROLL Bluetooth Speaker User Manual 

Contents

- [1 iGear ROLL Bluetooth Speaker](#)
- [2 HIGHLIGHTS](#)
- [3 SPECIFICATIONS](#)
- [4 IN THE BOX](#)
- [5 IDENTIFYING PARTS](#)
- [6 CHARGING](#)
- [7 BLUETOOTH PAIRING](#)
- [8 CONTROLS](#)
- [9 TWS Connections](#)
- [10 WARRANTY](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



iGear ROLL Bluetooth Speaker



HIGHLIGHTS

- RGB Light
- IPX5 Waterproof
- Micro SD Card Input
- Rechargeable Battery





SPECIFICATIONS

- Bluetooth Version: Range: 5.2
- Driver: Up to 10m
- Impedance: 1 x 0W
- Frequency Response: 4
- Signal to Noise Ratio: 80 Hz – 20 Khz
- Total Power Output: 85 dB
- Charge Input: 1ow
- Battery Capacity: DC 5V, 1A
- Charge Time: 1200 mAh 3 Hours
- Playback Time: 3 – 7 Hours
- Max Size for USB Input: 64 GB
- Max Size for SD Input: 64 GB

IN THE BOX

- Roll Speaker
- Type-C Charging Cable
- User Manual

IDENTIFYING PARTS


1.  Power On / Power Off
2.  Volume Up/ Next Track Button
3.  Volume Down/ Previous Track Button
4.  Mode Switch / TWS Connection

CHARGING


- Please fully charge the Bluetooth speaker before using it for the first time.
- The red indicator light will be lit while the speaker is charging. When the battery is full, the red indicator light will switch off automatically.

BLUETOOTH PAIRING

Your speaker must be paired to a Bluetooth device before it can be used. It is only necessary to pair your speaker once with each device,

1. Press the power on button. The LED light will flash blue and a welcome tone will be heard.
2. The speaker will beep, indicating that the speaker is ready to pair with your Bluetooth device.
3. Activate the Bluetooth on your device and search for “iGear Roll”. Select “iGear Roll” from the list to connect.
You will hear a connection tone after the speaker has been paired successfully.
4. You can now play audio through the speaker.
5. Music tracks can be selected either on the speaker or on your device (smartphone, computer, tablet, etc.).
Press and hold the – Button to skip to the previous song. Press and hold the + Button to play the next song.
6. Volume can be controlled on the speaker or on your device (smartphone, computer, tablet, etc.). Press the Button or the – Button to increase or decrease volume accordingly.
7. Press the  Button on the speaker to play or pause the music.

CONTROLS

Function	Operation
Increase Volume	Press the + Button once
Decrease Volume	Press the – Button once
Navigate to Next Track	Long press the + Button
Navigate to Previous Track	Long press the – Button
Play or Pause Track	Press the  Button once

Bluetooth and USB Mode

Function	Operation
Increase Volume	Press the + Button once
Decrease Volume	Press the - Button once
Navigate to Next Track	Long press the + Button
Navigate to Previous Track	Long press the - Button
Play or Pause Track	Press the ⏮ Button once

Note: None of these buttons will work in AUX Input mode, except for the volume buttons.

PLAYING MP3S FROM A USB FLASH DRIVE OR SD CARD

1. Power on.
2. Insert a USB flash disk into the slot. The music stored will be played automatically.
3. Press and hold the – button on the speaker to skip to the previous song. Press and hold the + button on the speaker to play the next song.
4. Press the <D button on the speaker to play or pause music.
5. Press the + button or the – button to increase or decrease volume accordingly.

TWS Connections

1. Turn on two Roll speakers and enter Bluetooth mode.
2. Press and hold the Multi-function button of one of the speakers to connect to the other speaker.
3. After the TWS connection is successful, the speaker will emit a beeping sound.
 - To reduce the risk of fire or electric shock, keep the speaker away from all liquids. Use and store only in locations that are not exposed to the risk of dripping or splashing liquids, and do not place any liquid containers on top of the speaker

CAUTION: Do not remove panel covers by unscrewing them. To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to qualified service personnel only.

WARRANTY

Warranty period: 1 Year

In case of consumer complaints: Customer Care -+91 9372667193 Email: support@igear.asia
(Between 10 am to 5 pm, Mon-Fri) www.igearworld.com

For Warranty Support,
Scan the QR Code



Documents / Resources



[iGear ROLL Bluetooth Speaker](#) [pdf] User Manual
ROLL Bluetooth Speaker, ROLL, Bluetooth Speaker, Speaker

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.