




IGLOO IGLICEB26HNSS Automatic 26-Pound Ice Maker with Carry Handle Instructions

[Home](#) » [Igloo](#) » IGLOO IGLICEB26HNSS Automatic 26-Pound Ice Maker with Carry Handle Instructions 

Contents

- [1 IGLOO IGLICEB26HNSS Automatic 26-Pound Ice Maker with Carry Handle](#)
- [2 SAFETY](#)
- [3 IMPORTANT SAFEGUARDS](#)
- [4 Operating Safety Precautions](#)
- [5 INTRODUCTION](#)
- [6 Features](#)
- [7 PARTS & ASSEMBLY](#)
- [8 HOW TO OPERATE](#)
- [9 HELPFUL TIPS](#)
- [10 CLEANING & MAINTENANCE](#)
- [11 RECIPES](#)
- [12 RETURNS & WARRANTY](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

IGLOO®

IGLOO IGLICEB26HNSS Automatic 26-Pound Ice Maker with Carry Handle



SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can cause serious injury to you and others. All safety messages will follow the safety alert symbol. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications: 120 Volts, 60 Hz

105 Watts, 1.7 Amps Refrigerant R600a

THIS PRODUCT IS FOR USE IN 120V AC OUTLETS ONLY.

Refer to www.nostalgiaproducts.com/user-manuals/ for the most updated manual.

IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance. When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.

10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

Operating Safety Precautions

1. DO NOT touch the Evaporator while the unit is in use or during the ice making process. This could cause severe burns.
2. DO NOT clean unit with flammable liquids. The fumes can create a fire hazard or explosion.
3. Check Ice Basket and Water Reservoir for presence of foreign objects prior to use.
4. DO NOT turn unit upside down while in use, or when filled with ice.

Instructions for the Electrical Cord and Plug

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
3. If a long detachable power-supply cord or extension cord is used:
 - Extension cords can be used if care is exercised in their use.
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance.
 - When using a longer cord or extension cord, make sure that the cord does not drape over a countertop or tabletop where it can be pulled on or tripped over unintentionally.
 - The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

INTRODUCTION

Congratulations! You are now the proud owner of the Igloo™ AUTOMATIC 26-POUND ICE MAKER WITH CARRY HANDLE! This stylish and portable ice maker allows you to make ice accessible virtually anywhere. With its intuitive, easy-to-use design, you'll be making ice cubes soon after you plug in your new appliance. Perfect for kitchens, RVs, club houses, home bars, and more!

Features

- Makes up to 26 lbs. of ice per day
- Produces 9 ice cubes every 7-15 minutes

- Carry handle for easy transportation
- **Water tank capacity:** 2 quarts
- **Ice basket capacity:** 1.25 pounds
- Automatic cleaning function
- **Multiple ice cube sizes:** small and large
- Control panel with LED indicator lights
- Compact and elegant design
- Transparent lid for easy viewing
- Removable ice basket
- Includes ice scoop
- **Refrigerant:** R600a

PARTS & ASSEMBLY



Before first use, be sure to remove all interior and exterior packaging, and follow the steps under **CLEANING & MAINTENANCE** to properly clean your unit.

LED Control Panel



- **ON/OFF** = powers the ice maker on or off
- **POWER** = illuminates to indicate when ice maker is on
- **ADD WATER** = illuminates to indicate when time to add water to Water Reservoir **ICE FULL** = illuminates to indicate when Ice Basket is full
- **SELECT** = press to select size of ice cubes or to place unit in cleaning mode

- **S** = Small ice cube indicator light
- **L** = Large ice cube indicator light
- **CLEAN** = illuminates to indicate when ice maker is in cleaning mode

HOW TO OPERATE

BEFORE FIRST USE

1. Follow the steps under CLEANING & MAINTENANCE before using this unit.
2. Place the unit on a flat, level surface in a location that is protected from direct sunlight and other sources of heat (i.e. stove, furnace, radiator). Ensure there is at least six inches of empty space on all sides of the unit.



3. Allow one hour for the refrigerant fluid to settle before plugging the cord into an electrical outlet for the first time.

USING YOUR ICE CUBE MAKER

1. Ensure the Water Drain Plug is inserted into the drain area.
2. Open the Clear Lid to remove the Ice Basket and pour water into the Water Reservoir. Keep the water level below the MAX level mark. If water levels exceed the MAX level mark, drain any excess water by removing the Water Drain Plug.
3. Replace the Ice Basket and close the Clear Lid.
4. Press the ON/OFF button on the LED Control Panel to begin the ice-making cycle. NOTE: The unit will automatically begin making ice after 20 minutes if user does not restart the unit after filling with water.
5. Select the desired size of the ice cubes by pressing the SELECT button (S = small, L = large). If the room temperature is lower than 60°F (16°C), it is recommended to select the small-sized ice cubes in order to keep ice from sticking together.
6. Each ice-making cycle lasts 7 to 15 minutes, depending on the size of the ice cube selected and the ambient temperature of the room. In extremely hot temperatures, ice-making time may vary considerably.
7. While the ice maker is on, check the water level periodically. If the water pump is unable to pump water, the unit will stop automatically and the Add Water light will illuminate.
8. When the water level is low, press the ON/OFF button to turn the unit OFF, fill water up to the MAX level mark and press the ON/OFF button again to turn ON the unit again. NOTE: The unit will automatically begin making ice after 20 minutes if user does not restart the unit after filling with water.
9. The unit automatically stops working when the Ice Basket is full and the ICE FULL light will illuminate.
10. To ensure a reasonable hygiene level, change the water in the Water Reservoir every 24 hours. When the unit isn't in use, drain all water left in the Water Reservoir. If the unit requires a deeper cleaning, refer to the

CLEANING & MAINTENANCE section for step-by-step instructions.

IMPORTANT NOTE: In the event that the power is disconnected during the ice making cycle or that the LED lights on the Control Panel are blinking, press the ON/OFF button to stop the ice making cycle. Unplug the unit from the electrical outlet. Allow the unit to sit for a few minutes to let it warm up and allow ice to fall from the evaporator fingers. Empty the Water Tray and wait three minutes before restarting the unit.

DO NOT touch the Evaporator while the unit is in use or during the ice making process. This could cause severe burns.

HELPFUL TIPS

ADD WATER INDICATOR

If the Add Water Indicator comes on, try the following:

- Turn off the unit, add water, and press the ON/OFF button again to restart the unit.
- There may be too much ice. Turn off the Ice Maker, remove some ice from the Ice Basket.

ICE CUBES STICK TOGETHER

- The ice cycle may be too long. Stop the Ice Maker, then restart it when the ice cubes melt. Select the smaller sized ice cubes using the SELECT button.
- The water temperature in the Water Reservoir may be too low. Change the water in the Water Reservoir. The room temperature should be set between 45° F – 90° F.

ICE MAKER NOT WORKING

If the ice-making cycle seems to be running properly, but no ice is being made, try the following:

- The ambient temperature or water temperature in Water Reservoir may be too high. The unit must be in an environment below 90° F. Try pouring colder water (between 45° F – 90° F) into the Water Reservoir.
- If changing the water or allowing the unit to cool does not work, there may be a leakage of the refrigerant fluid, or a pipe in the cooling system may be blocked. Please take your ice maker to a qualified technician for repair.

LED LIGHTS

If the LED lights on the Control Panel are blinking, there may be a disruption in the power source. Press the ON/OFF button to stop the ice-making cycle. Let the ice maker sit for several minutes to let it warm up and allow ice to fall from the evaporator fingers. Empty the Water Tray and wait three minutes before restarting the unit.

CLEANING & MAINTENANCE

Your AUTOMATIC ICE MAKER is equipped with an automatic cleaning function to help clean the interior of your unit, including the water lines. Following these steps will help to maintain the unit and add to longevity.



1. Remove the Ice Basket, then drain any leftover water by unplugging the Water Drain Plug on the bottom of the unit. Replace the Water Drain Plug.
2. Prepare your cleaning solution. Common cleaning solutions:
 - Vinegar and water (ratio of 1:1)
 - Lemon and water (ratio of 1:1)
 - Bleach and water (ratio of 1 tsp. bleach : 2 qts. water)
 - Commercial ice maker descaling and cleaning solution
3. Make sure unit is plugged in and the POWER indicator light is not illuminated. Add cleaning solution to the Water Reservoir.
4. Press the SELECT button until the CLEAN indicator light is illuminated. Then press the ON/OFF button to start the cleaning cycles. The unit will automatically cycle the cleaning solution 5 times.
5. When the cleaning cycles have completed, drain the interior water by unplugging the Water Drain Plug on the bottom of the unit. Replace the Water Drain Plug.
6. Clean the remainder of the interior and the exterior of the unit using warm, soapy water and a non-abrasive towel.
7. Drain the interior of any remaining water by unplugging the Water Drain Plug on the bottom of the unit. Replace the Water Drain Plug.
8. Fill the Water Reservoir with fresh water.
9. Press the SELECT button until the CLEAN indicator light is illuminated. Then press the ON/OFF button to start the cleaning cycles. The unit will automatically cycle the fresh water 5 times.
10. Drain the interior of any remaining water by unplugging the Water Drain Plug on the bottom of the unit, then dry with a non-abrasive towel. Replace the Water Drain Plug.
11. Before storing, keep the Clear Lid open and allow unit to dry completely for 24 hours.

RECIPES

Your AUTOMATIC ICE MAKER can be used to instantly make ice cubes to be for a variety of beverages. Here are some delicious beverages that you can make at home.

MUDDY WATER

- **1 part cola**

Fill $\frac{1}{4}$ of each glass with ice made with your AUTOMATIC ICE MAKER.

- **1 part orange juice**

Pour orange juice until the glass is half full, or to taste.

- **Ice**

Pour cola until the glass is full. Stir well.

ROY ROGERS

- **6-8 oz. cola**

Fill glasses with ice from your AUTOMATIC ICE MAKER.

- **¼ oz. grenadine**

Add in Cola and grenadine.

- **Maraschino cherries**

Stir well.

- **Ice**

Add maraschino cherry as garnish.

STRAWBERRY LEMONADE

- 8 large strawberries, halved

Place strawberries in a blender and top with 2 tablespoons sugar. Pour 1 cup of water over sugared strawberries. Blend until strawberry chunks transform into juice.

- 1 1/8 cups white sugar

- 7 cups water

Combine strawberry juice, 6 cups water, 1 cup sugar and lemon juice in a large pitcher. Stir until well blended.

- 2 cups freshly squeezed lemon juice

Fill glasses with ice from your AUTOMATIC ICE MAKER.

- Lemon slices

Pour strawberry lemonade into glasses.

- Mint leaves

Garnish with a lemon slice and mint leaves, if desired.

GINGER BEER MOJITO MOCKTAIL

- 6 oz. ginger beer

Muddle the mint and lime juice in your glass.

- 2 oz. fresh lime juice

Fill glass ice from your AUTOMATIC ICE MAKER.

- 10 mint leaves

Add ginger beer to glass.

- Fresh lime slices

Stir thoroughly.

- Ice

Garnish with additional mint leaves and fresh lime slice.

BLACKBERRY BASIL ICED TEA

- 6 cups water

Combine water, tea bags, blackberries and basil leaves in a pitcher. Cover and refrigerate for 12-24 hours.

- 4 bags black tea

- 12 oz. fresh blackberries

When ready, remove tea bags and add liquid sweetener to taste.

- 8-12 basil leaves

Fill tall glass with ice from your AUTOMATIC ICE MAKER.

- Liquid sweetener to taste

Add iced tea to glass until full.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

AUTOMATIC 26-POUND ICE MAKER WITH CARRY HANDLE / IGLICEB26HNSS

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products LLC

1471 Partnership Dr.

Green Bay, WI 54304-5685

Customer Service

Phone: (833) 258-4210

Web: www.nostalgiaproducts.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaproducts.com and fill out the Customer Service Inquiry form and click the Submit button. A representative will contact you as soon as possible.

Product Warranty Terms

Nostalgia Products LLC (the "Company") hereby warrants that for a period of one (1) year from the date of original purchase, this product will be free of defects in material and workmanship under normal home use, provided that the product is operated and maintained in accordance with the operating instructions. As the sole and exclusive remedy under this warranty, the Company will

at its discretion either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. This warranty is only available to the original retail purchaser of the product from the date of initial retail purchase, and is only valid with the original sales receipt, as proof of purchase date is required to obtain warranty benefits. All warranty claims must be brought to the attention of the Company within the warranty period and no later than 30 days of the failure to perform. This warranty does not cover normal wear or damage caused by shipping, mishandling, misuse, accident, alteration, improper replacement parts, or other than ordinary household use. You may be required to return the product (with shipping prepaid by you) for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns damaged or lost in transit. Unless otherwise specifically permitted by the operating instructions, this warranty applies to indoor household use only. In order to obtain service under this warranty, please contact the Company at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaproducts.com. Warranty valid only in USA and Canada. This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, which are hereby excluded to the extent permitted by law. In no event shall the Company be liable for any indirect, incidental, consequential, or special damages arising out of or in connection with this product or the use thereof. Some states, provinces or jurisdictions do not permit the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion or limitation may not apply to you. This warranty does not apply to re-manufactured merchandise. Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.


For more information, visit us online at www.nostalgiaproducts.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.

Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.

Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.

Documents / Resources

	<p>IGLOO IGLICEB26HNSS Automatic 26-Pound Ice Maker with Carry Handle [pdf] Instructions</p> <p>IGLICEB26HNSS, Automatic 26-Pound Ice Maker with Carry Handle, IGLICEB26HNSS Automatic 26-Pound Ice Maker with Carry Handle</p>
---	---

References

- [N Nostalgia Products | Fun and Entertaining Products with a Retro Flair](#)