



IGLOO IGLICEB33SL Large-Capacity 33-Pound Automatic Ice Maker Instructions

[Home](#) » [Igloo](#) » IGLOO IGLICEB33SL Large-Capacity 33-Pound Automatic Ice Maker Instructions 

Contents

- 1 IGLOO IGLICEB33SL Large-Capacity 33-Pound Automatic Ice Maker Instructions**
- 2 SAFETY**
- 3 IMPORTANT SAFEGUARDS**
- 4 ADDITIONAL IMPORTANT SAFEGUARDS**
 - 4.1 Operating Safety Precautions**
- 5 Instructions for the Electrical Cord and Plug**
- 6 SAVE THESE INSTRUCTIONS!**
 - 6.1 INTRODUCTION**
- 7 Features:**
- 8 PARTS & ASSEMBLY**
- 9 HOW TO OPERATE**
 - 9.1 BEFORE FIRST USE**
- 10 USING YOUR ICE CUBE MAKER**
 - 10.1 HELPFUL TIPS ADD WATER INDICATOR**
- 11 ICE CUBES STICK TOGETHER**
- 12 ICE MAKER NOT WORKING**
- 13 LED LIGHTS**
- 14 CLEANING & MAINTENANCE**
- 15 RECIPES**
- 16 MUDDY WATER**
- 17 ROY ROGERS**
- 18 STRAWBERRY LEMONADE**
- 19 GINGER BEER MOJITO MOCKTAIL**
- 20 BLACKBERRY BASIL ICED TEA**
- 21 RETURNS & WARRANTY**
- 22 AUTOMATIC ICE MAKER / IGLICEB33SL**
- 23 Distributed by:**
- 24 Customer Service Inquiry**
- 25 Product Warranty Terms**
- 26 This warranty does not apply to re-manufactured merchandise.**
- 27 For more information, visit us online at www.nostalgiaproducts.com.**
- 28 Read More About This Manual & Download PDF:**
- 29 Documents / Resources**
 - 29.1 References**
- 30 Related Posts**

IGLOO IGLICEB33SL Large-Capacity 33-Pound Automatic Ice Maker Instructions



SAFETY



Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.



IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance. When using electrical appliances, basic safety precautions should always be followed, including.

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
5. Close supervision is necessary when any appliance is used by or near children.
6. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
7. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
8. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination,

repair or adjustment.

9. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
10. DO NOT use the appliance for other than its intended use.
11. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
12. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
13. DO NOT let cord hang over edge of table or counter, or touch hot surfaces.
14. NEVER leave unit unattended while in use or when plugged into an outlet.
15. Extreme caution must be used when moving an appliance containing hot food.
16. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.



ADDITIONAL IMPORTANT SAFEGUARDS

Operating Safety Precautions

1. DO NOT touch the Evaporator while the unit is in use or during the ice making process. This could cause severe burns.
2. DO NOT clean unit with flammable liquids. The fumes can create a fire hazard or explosion.
3. Check Ice Hopper for presence of foreign objects prior to use.
4. DO NOT turn unit upside down while in use, or when filled with ice.
5. Installation and operating instructions shall be provided with cautionary statements concerning the handling, moving, and use of the ice maker to avoid either damaging the refrigerant tubing, or increasing the risk of a leak. Please don't damage the ice maker while moving it.
6. The installation and operating instructions shall indicate that component parts shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.
7. The installation instructions shall indicate the ice maker is to be installed in accordance with the Safety Standard for Refrigeration Systems, ASHRAE 15. In addition, the instructions shall indicate the ice maker shall not be installed in corridors or hallways of public buildings. Instructions for the Electrical Cord and Plug

Instructions for the Electrical Cord and Plug

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
3. If a long detachable power-supply cord or extension cord is used:
 - Extension cords can be used if care is exercised in their use.
 - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of

the appliance.

- When using a longer cord or extension cord, make sure that the cord does not drape over a countertop or tabletop where it can be pulled on or tripped over unintentionally.
4. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Congratulations! You are now the proud owner of the AUTOMATIC ICE MAKER from Igloo®!

This stylish and portable ice maker allows you to make ice accessible virtually anywhere.

With its intuitive, easy-to-use design, you'll be making ice cubes soon after you plug in your new appliance.


Perfect for the kitchen, RVs, club houses, home bars, and more!

Features:

- Makes up to 33 lbs. of ice per day
- Produces 9 ice cubes every 7-15 minutes
- Water tank capacity: 2.5 quarts
- Ice basket capacity: 2 pounds
- Multiple ice cube sizes: small and large
- Control panel with LED indicator lights
- Compact and elegant design
- Transparent lid for easy viewing
- Removable ice basket
- Includes ice scoop
- Refrigerant: R600A

PARTS & ASSEMBLY

Before first use, be sure to remove all interior and exterior packaging, and follow the steps under CLEANING & MAINTENANCE to properly clean your unit.

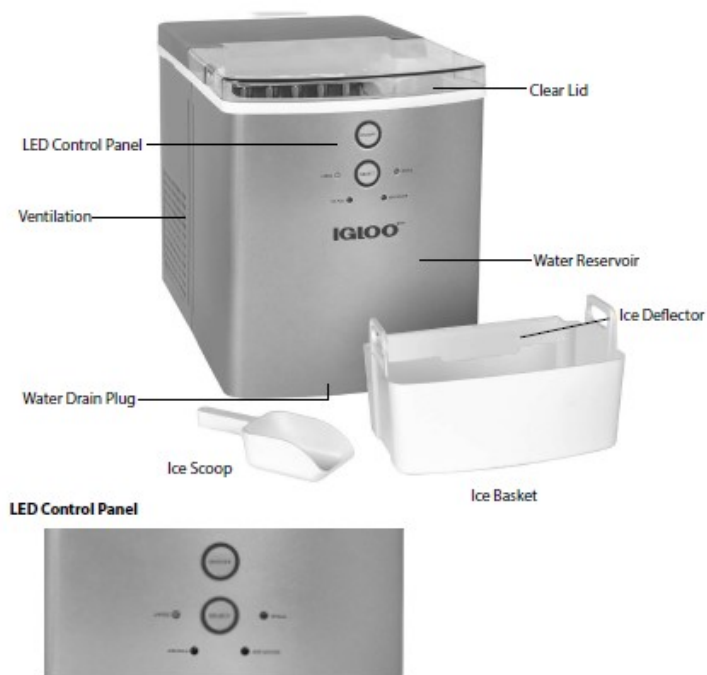

ADD WATER = illuminates when time to add water to Water Reservoir

ICE FULL = illuminates when Ice Basket is full

S = Small ice cube indicator

L = Large ice cube indicator

SELECT = press to select size of ice cubes

ON/OFF = press button to turn unit ON/OFF

HOW TO OPERATE

BEFORE FIRST USE

1. Follow the steps under CLEANING & MAINTENANCE before using this unit.
2. Place the unit on a flat, level surface in a location that is protected from direct sunlight and other sources of heat (i.e. stove, furnace, radiator). Ensure there is at least four inches of empty space on all sides of the unit.
3. Allow one hour for the refrigerant fluid to settle before plugging the cord into an electrical outlet for the first time.

USING YOUR ICE CUBE MAKER

1. Open the Clear Lid to remove the Ice Basket and pour water into the Water Reservoir. Keep the water level below the MAX level mark. If water levels exceed the MAX level mark, drain any excess water by removing the Water Drain Plug.

NOTE: To maximize ice cube capacity, use cold water and make sure Ice Deflector is connected to ice basket so ice doesn't block the infrared beam.



2. Press the ON/OFF button on the LED Control Panel to begin the ice-making cycle. NOTE: Once started, you cannot press the ON/OFF button again to stop it. You must wait 30 seconds to allow the unit to melt the unfinished ice cube. Also, while unit is running, you can press the ON/OFF to turn it off, but you cannot press the ON/OFF immediately to restart unit – you must wait 1 minute to allow unit to get back into position while protecting compressor.
3. Select the desired size of the ice cubes by pressing the SELECT button. If the room temperature is lower than 60°F (16°C), it is recommended to select the small-sized ice cubes in order to keep ice from sticking together.
4. Each ice-making cycle lasts 6 to 15 minutes, depending on the size of the ice cube selected and the ambient temperature of the room. In extremely hot temperatures, ice-making time may vary considerably.
5. While the ice maker is on, check the water level periodically. If the water pump is unable to pump water, the unit will stop automatically and the ADD WATER light will illuminate.
6. If the water level is low, press the ON/OFF button to turn the unit OFF, fill water up to the MAX level mark and press the ON/OFF button again to turn ON the unit again.
7. The unit automatically stops working when the Ice Basket is full and the ICE FULL light will illuminate.
8. To ensure a reasonable hygiene level, change the water in the Water Reservoir every 24 hours. If the unit isn't in use, drain all water left in the Water Reservoir.

IMPORTANT NOTE: In the event that the power is disconnected during the ice making cycle or that the LED lights on the Control Panel are blinking, press the POWER button to stop the ice making cycle. Unplug the unit from the electrical outlet. Allow the unit to sit for a few minutes to let it warm up and allow ice to fall from the evaporator fingers. Empty the Water Tray and wait three minutes before restarting the unit.



DO NOT touch the Evaporator while the unit is in use or during the ice making process. This could cause severe burns.

HELPFUL TIPS

ADD WATER INDICATOR

If the ADD WATER Indicator comes on, try the following:

- Turn off the unit, add water, and press the ON/OFF button again to restart the unit.
- There may be too much ice. Turn off the Ice Maker, remove some ice from the Ice Basket.

ICE CUBES STICK TOGETHER

- The ice cycle may be too long. Stop the Ice Maker, then restart it when the ice cubes melt. Select the smaller sized ice cubes using the SELECT button.

- The water temperature in the Water Reservoir may be too low. Change the water in the Water Reservoir. The room temperature should be set between 45° F – 90° F.

ICE MAKER NOT WORKING

If the ice-making cycle seems to be running properly, but no ice is being made, try the following:

- The ambient temperature or water temperature in Water Reservoir may be too high. The unit must be in an environment below 90° F. Try pouring colder water (between 45° F – 90° F) into the Water Reservoir.
- If changing the water or allowing the unit to cool does not work, there may be a leakage of the refrigerant fluid, or a pipe in the cooling system may be blocked. Please take your ice maker to a qualified technician for repair.

LED LIGHTS

- If the LED lights on the Control Panel are blinking, there may be a disruption in the power source. Press the ON/OFF button to stop the ice-making cycle. Let the ice maker sit for several minutes to let it warm up and allow ice to fall from the evaporator fingers. Empty the Water Tray and wait three minutes before restarting the unit.

CLEANING & MAINTENANCE

Your AUTOMATIC ICE MAKER should be cleaned before storing. Following these steps will help to maintain the unit and add to longevity.

1. Unplug the unit from the electrical outlet.
2. Remove the Ice Basket, then clean the Ice Basket and Ice Scoop using warm, soapy water, and a soft cloth. Wipe dry with a non-abrasive, dry towel.
3. Clean the interior and exterior of the unit using warm, soapy water, and a non-abrasive towel.
4. Drain the interior water by unplugging the Water Drain Plug on the bottom of the unit.
5. Dry the interior and exterior with a soft, non-abrasive cloth.
6. If the unit has not been in use for a long time, always open the Water Drain Plug and completely drain the water from the Water Reservoir.

RECIPES

Your AUTOMATIC ICE MAKER can be used to instantly make ice cubes to be for a variety of beverages. Here are some delicious beverages that you can make at home.

MUDDY WATER

- 1 part cola Fill 1/4 of each glass with ice made with
- 1 part orange juice your AUTOMATIC ICE MAKER.
- Ice Pour orange juice until the glass is half full, or to taste.
Pour cola until glass is full. Stir well.

ROY ROGERS

- 6-8 oz. cola Fill glasses with ice from your AUTOMATIC ICE MAKER.
- 1/4 oz. grenadine Add in Cola and grenadine.
- Maraschino cherries Stir well.
- Ice Add maraschino cherry as garnish.

STRAWBERRY LEMONADE

- 8 large strawberries, halved Place strawberries in a blender and top with 2 tablespoons sugar.
Pour 1 cup of water over sugared strawberries. Blend until strawberry chunks transform into juice.
- 1 1/8 cups white sugar Combine strawberry juice, 6 cups water, 1 cup sugar and lemon juice
in a large pitcher. Stir until well blended.
- 7 cups water Fill glasses with ice from your AUTOMATIC ICE MAKER. Pour
strawberry lemonade into glasses.
- 2 cups freshly squeezed lemon juice Garnish with a lemon slice and mint leaves, if desired.
- Lemon slices
- Mint leave

GINGER BEER MOJITO MOCKTAIL

- 6 oz. ginger beer Muddle the mint and lime juice in your glass.
- 2 oz. fresh lime juice Fill glass ice from your AUTOMATIC ICE MAKER
- 10 mint leaves Add ginger beer to glass.
- Fresh lime slices Stir thoroughly
- Ice Garnish with additional mint leaves and fresh lime slice

BLACKBERRY BASIL ICED TEA

- 6 cups water Combine water, tea bags, blackberries and basil leaves
- 4 bags black tea in a pitcher. Cover and refrigerate for 12-24 hours.
- 12 oz. fresh blackberries When ready, remove tea bags and add liquid sweetener to taste.
- 8-12 basil leaves Fill tall glass with ice from your AUTOMATIC ICE MAKER.
- Liquid sweetener to taste Add iced tea to glass until full.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

AUTOMATIC ICE MAKER / IGLICEB33SL

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products LLC 1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (833) 258-4210
Web: www.nostalgiaproducts.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaproducts.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

Product Warranty Terms

Nostalgia Products LLC (the "Company") hereby warrants that for a period of one (1) year from the date of original purchase, this product will be free of defects in material and workmanship under normal home use, provided that the product is operated and maintained in accordance with the operating instructions. As the sole and exclusive remedy under this warranty, the Company will at its discretion either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

This warranty is only available to the original retail purchaser of the product from the date of initial retail purchase, and is only valid with the original sales receipt, as proof of purchase date is required to obtain warranty benefits. All warranty claims must be brought to the attention of the Company within the warranty period and no later than 30 days of the failure to perform. This warranty does not cover normal wear or damage caused by shipping, mishandling, misuse, accident, alteration, improper replacement parts, or other than ordinary household use. You may be required to return the product (with shipping prepaid by you) for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns damaged or lost in transit. Unless otherwise specifically permitted by the operating instructions, this warranty applies to indoor household use only. In order to obtain service under this warranty, please contact the Company at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaproducts.com. Warranty valid only in USA and Canada.

This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, which are hereby excluded to the extent permitted by law. In no event shall the Company be liable for any indirect, incidental, consequential, or special damages arising out of or in connection with this product or the use thereof. Some states, provinces or jurisdictions do not permit the exclusion or limitation of incidental or consequential damages, so the foregoing exclusion or limitation may not apply to you.


This warranty does not apply to re-manufactured merchandise.

Please read the operating instructions carefully. Failure to comply with the operating instructions will void this warranty.

For more information, visit us online at www.nostalgiaproducts.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.
Follow our boards on Pinterest at www.pinterest.com/nostalgiaelctrx.
Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.

Read More About This Manual & Download PDF:

	<p>IGLOO IGLICEB33SL Large-Capacity 33-Pound Automatic Ice Maker [pdf] Instructions IGLICEB33SL, Large-Capacity 33-Pound Automatic Ice Maker, IGLICEB33SL Large-Capacity 33-Pound Automatic Ice Maker</p>
---	---

References

- [N Nostalgia Products | Fun and Entertaining Products with a Retro Flair](#)