

iGOODS Fixed Snap Action Selfie Stick User Manual

Home » iGOODS » iGOODS Fixed Snap Action Selfie Stick User Manual



iGOODS Fixed Snap Action Selfie Stick



Thank you for purchasing the FIXED Snap Action selfie stick. The integrated tripod and single-axis stabilizer always ensure sharp photos and videos. Read this manual before use.

Contents

- 1 WIRELESS TRIGGER PAIRING
- **2 SINGLE-AXIS STABILIZER ADJUSTMENT**
- **3 USING SELFIE STICK AS A TRIPOD**
- (OPTIONAL)
- **4 SPECIFICATIONS**
- **5 PRODUCT CARE**
- **6 NOTES**
- **7 TROUBLESHOOTING**
- 8 Documents / Resources
- 9 Related Posts

WIRELESS TRIGGER PAIRING

Before using the selfie stick for the first time, it is necessary to pair the wireless trigger.


- a) Press and hold the trigger button for 3 seconds until the LED flashes blue flashing indicates that pairing is on.
- b) Pair your device with "FIXED Snap Action". Once the devices are paired, the LED stays blue.
- c) Press and hold the trigger button for another 3 seconds, the trigger will turn off.
- d) You can charge the trigger using the USB-C connector.
- e) The trigger switches to sleep mode after ten minutes of inactivity.
- f) When the battery in the trigger is running low, the LED will flash red.

SINGLE-AXIS STABILIZER ADJUSTMENT

Completely simple stabilizer adjustment:

- Tilt the head of the selfie stick (stabilizer) upwards.
- The rotating stabilizer head can be fixed in both horizontal and vertical positions.
- Extend the stabilizer pliers in both directions and fasten the phone securely in the middle of the head so that it can rotate 360 °. If your phone has buttons there, place them in the prepared slots.
- Unfix the stabilizer head and press and hold the button on the left side. The green LED indicates that the stabilizer is on.
- You can also use the button to switch between horizontal and vertical position. The stabilizer itself switches between positions when tilted to an angle of 90°.
- Then you can extend the selfie stick, there are 5 extension sections, up to a distance of 48 cm.
- To switch off the stabilizer, press and hold the button again. Below the button you will find the USB-C connector for charging.
- When the battery in the stabilizer is running low, the LED will flash red.

If you switch on the stabilizer head without placing the phone in it, the head can cause vibrations and louder noises, this is not damage! The stabilizer head switches off after 15 seconds without the phone inserted!

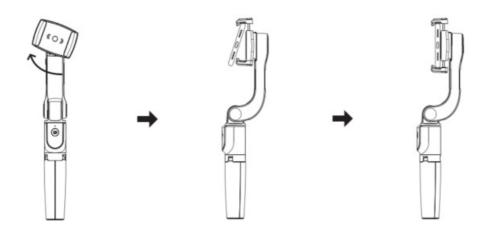


USING SELFIE STICK AS A TRIPOD (OPTIONAL)

This product can also serve as a tripod. Unfold the selfie stick handle from the bottom and place it on a stable horizontal surface, then you can use the removable selfie stick trigger and shoot comfortably from a distance.

SPECIFICATIONS

230 g
5V / IA
aluminium alloy
60.6×65.4×167 mm
45 – 90 mm
> Android 4.3 / iOS 5.0
167 mm – 480 mm
5
2.4 GHz~ 2.48 GHz
65mAh
900mAh

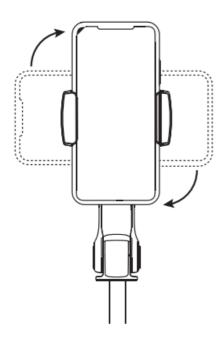

PRODUCT CARE

Clean the selfie stick with a dry cloth. Do not use any chemical detergents or cleaning sprays. Avoid contact with water and other liquids. Do not I,eave the selfie stick near heat sources (radiators, etc.).

NOTES

The product is warranted in accordance with the regulations in force in the countries where it is sold. In case of service problems, contact the dealer from which you have purchased the product. FIXED assumes no liability for damage caused by improper use of the product.

Keep the manual.

TROUBLESHOOTING

In case of problems with the product, you can contact our support at www.fixed.zone/podpora
TROUBLESHOOTING In case of problems with the product, you can contact our support at www.fixed.zone/podpora

This product is CE marked in accordance with EMC Directive EMC 2014/30/EU and RoHS 2011/65/EU. FIXED.zone a.s. hereby declares that this product is in compliance with essential requirements and other relevant provisions of EMC Directives EMC 2014/30/EU and RoHS 2011/65/EU.

Documents / Resources

<u>iGOODS Fixed Snap Action Selfie Stick</u> [pdf] User Manual Fixed Snap Action Selfie Stick