

Contents [[hide](#)]

- [1 IINE L977 Wireless Controller](#)
- [2 Button Layout](#)
- [3 Instructions Before Use](#)
- [4 How to Connect](#)
- [5 Connection to Phone/Tablet](#)
- [6 Controller Function Setting](#)
- [7 Turbo/Auto-fire Settings](#)
- [8 Routine maintenance](#)
- [9 FCC Warning](#)
- [10 Controller Q&A](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

IINE

IINE L977 Wireless Controller



Button Layout



Description of Switch button layout differences:

- [Share]= **[-]** [options] = [+]
- [PS] =[Home) Touch pad =screenshot

Instructions Before Use

Before using the controller, it is important to follow these preparation steps to ensure optimal performance and functionality.

Compatibility



PS3/PS4



Phone/Pad



Switch



PC

Note: Can only support native gamepad games on iOS APP Store

Check steps

1. Package Checking

Before using the product, please check that everything is complete. Open the package and inspect the product and accessories for completeness and condition. If you find any issues or missing items, contact our customer service immediately for assistance.

2. Controller Inspection

Before proceeding with the setup, check that the controller is in good condition and has no obvious damage or cracks.

3. Check the Hardware

Check if the buttons are not sticking, the joysticks rotate smoothly, and the trigger buttons operate seamlessly.

4. Reading the Product Manual

Before using the product, carefully read the instruction manual. It provides essential information, usage guidelines, and important considerations. Thoroughly understanding the manual helps grasp the product's features, functions, and prevents unnecessary mistakes.

5. Power Supply and Charging

Cable Checking Examine the included charging cable for any issues. Firstly, inspect its appearance for abnormalities. Next, connect the charging cable to the charger and assess its functionality to ensure there are no issues.

6. Environment

 
When using this product, it's crucial to ensure the safety of the operating environment. For instance, extreme temperatures or high humidity may impact its performance. Before usage, assess the operating environment and take necessary safety precautions.

How to Connect

Connection to PS3/PS4

- **Wired Connection**

For the first connection of this controller to a PS3/PS4, use the included USB cable to connect the controller to the console.

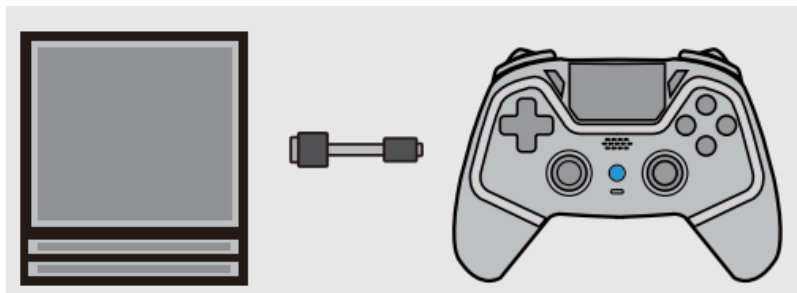


- **Wireless Connection**

(Must be wired connection first to activate wireless mode): Press and hold the [PS] button until the top LED indicator flashes briefly then stays on.



Connection to Switch Wired Connection

 
- **Wired Connection in TV Mode:** Use the included USB cable connect controller and Switch console. The top LED will flash briefly then stay on once connected successfully. (In wired connection to Switch, the controller supports 3.5mm audio.)

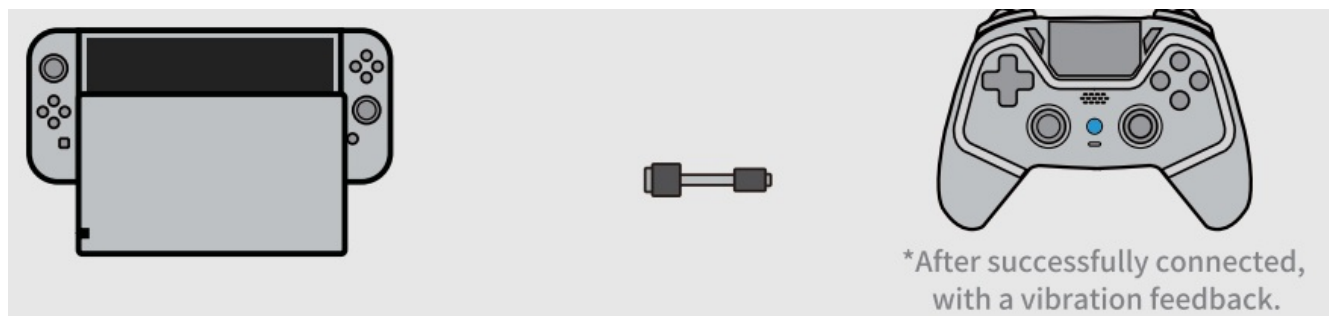

- **Wired Connection in Handheld Mode:** Use the included USB cable connect controller and Switch, The top LED will flash briefly then stay on once connected successfully. (To wake up the controller when powered off press any button).



 - After successfully connected, with a vibration feedback.
- Select [Controller-Change Grip/Order] on the console's main menu.

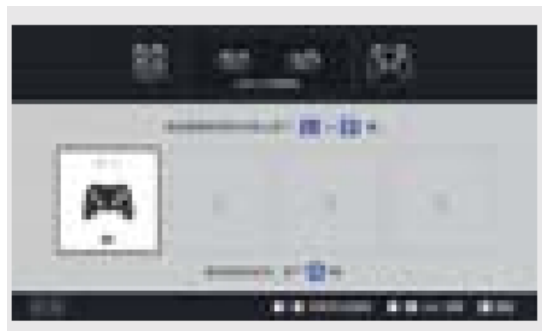

- When the controller is in powered off mode, press and hold [Option] + [PS] buttons. The LED light will flash then stay on, indicating successful connection to console.



After successfully connected, with a vibration feedback.

 
Controller Automatically Shuts Down

- When the controller is on, holding the "PS" button for 10 seconds turns it off
- In reconnecting mode, if it can't connect within 15 seconds, it shuts down.
- During gameplay, if there's no input for 10 minutes, it shuts down. Exceeding a 10-meter connection range also triggers shutdown.

Connection to PC

Wireless Connection

1. Open computer settings, choose “Bluetooth & devices”

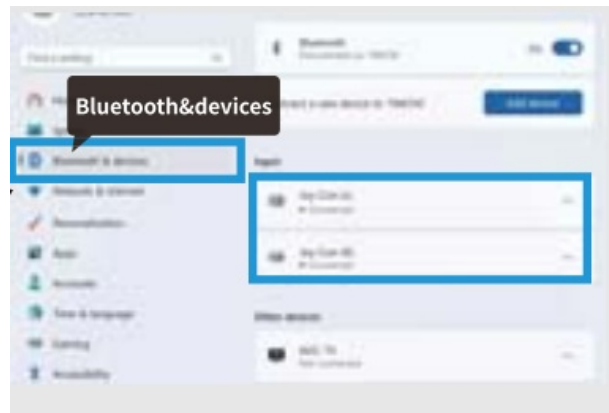

2. Press and hold the [Share] + [PS] button of the controller for 5-10 seconds.



3. Select [DUALSHOCK 4 Wireless Controller]. (There are stay-on LED light and vibration feedback when connected successfully).

Wired Connection

1. Plug the USB cable into the computer and the USB-C end into the controller to automatically connected to the PC platform.

 


2. When connected successfully, the LED stays on and with vibration feedback.


(In wired connection to PC, the controller supports 3.5mm audio; Press and hold [Share] + [Options] for 3s to change to X-input mode.)

Connection to Phone/Tablet

Android System

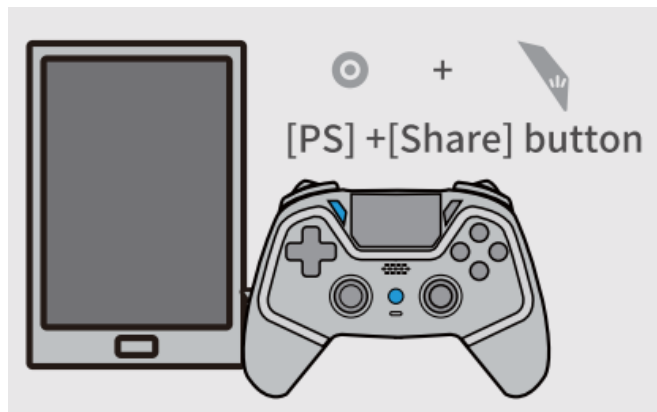

 1. Open your phone settings and turn on Bluetooth

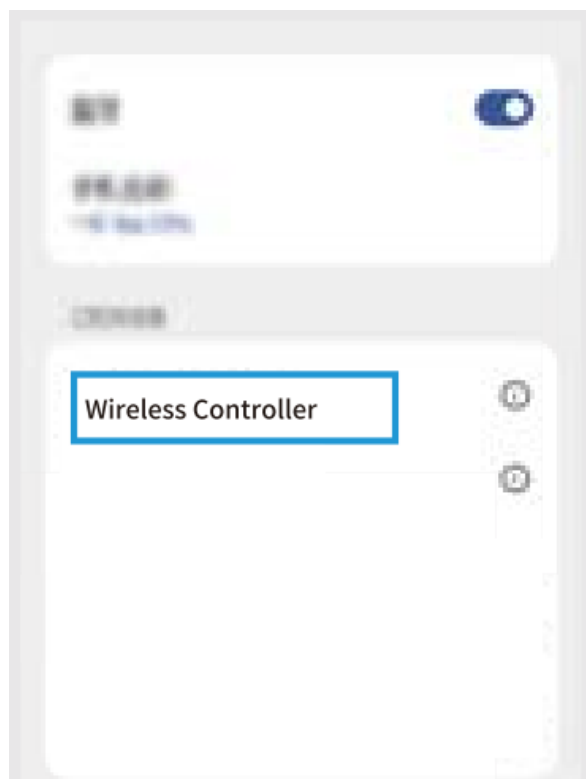


2. Press and hold the [Share] + [PS] button. When the light flashes briefly and then stays on, the connection is successful.

(Supported games include PPTV Game Hall, YY Play, Metal Slug 2, Cadillacs and Dinosaurs, Contra, and more.)

IOS System (10S13.0 or above version)



 1. Open your phone settings and turn on Bluetooth

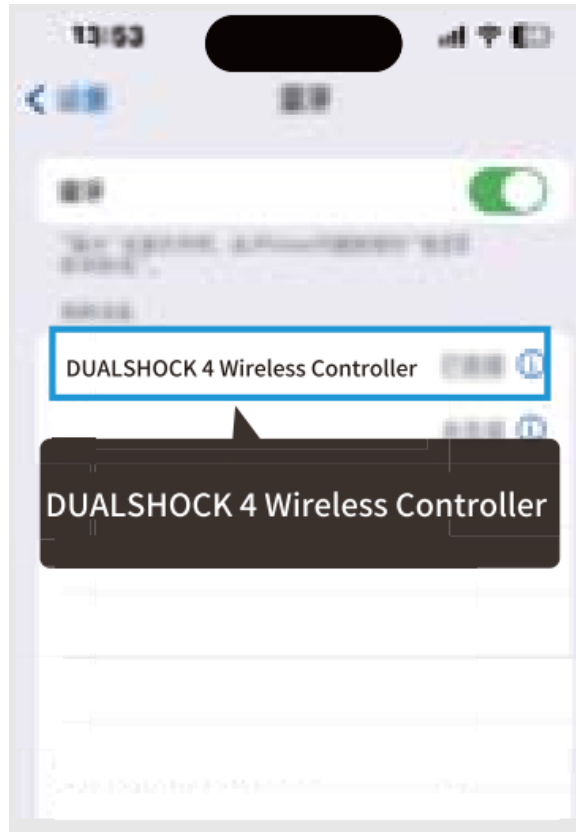

2. Press and hold the [Share] + [PS] button. When the light flashes briefly and then stays on, the connection is successful.

(Supports Metal Slug 3, Minecraft, and other iOS native games.)

 
Controller Function Setting

Controller Macro Function

(set macros for one-button combo execution)

- **Start Macro:** Hold the MR/ML button for 3s until the controller LED flashes.
- **Set Macro:** Press the action button which you need to set in turn, the macro will record the button press intervals. (Up to 21 buttons can be programmed in a macro.)
- **Complete Macro:** After setting up, press MR/ML once to complete the macro setting.


- **Clean Macro:** Hold [MR]/[ML] for 8s; the LED will flash and with vibration feedback.

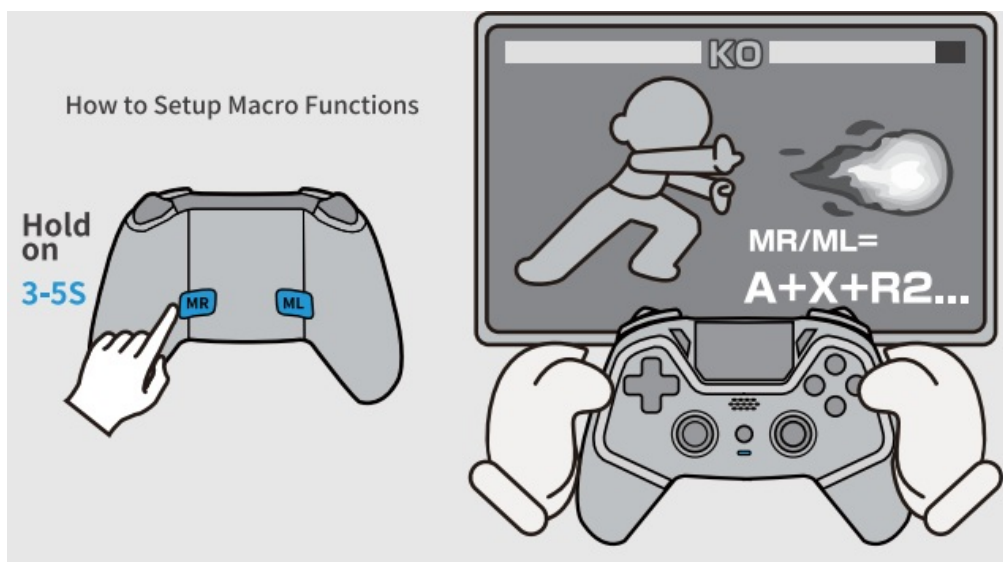

Macro Loop:

(Please set up the macro settings before starting the macro looping.)

 Enable/Disable: Hold down the Turbo button, then press the macro setting button(MR/ML) to activate macro looping.

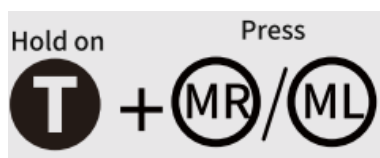

Turbo/Auto-fire Settings

- **Manual Fire**

 
Press (Turbo) button+ any action button, you can set the specified action button as manual fire.

- **Auto Fire Repeat**

press (Turbo) button+ any action button, the manual fire turn into auto fire.


- **Clean Fire**

Repeat the operation for the third time to cancel this button fire setting. Press and hold the [Turbo) button for 10s to clean all button fire. The indicator from flashes to stay on.)

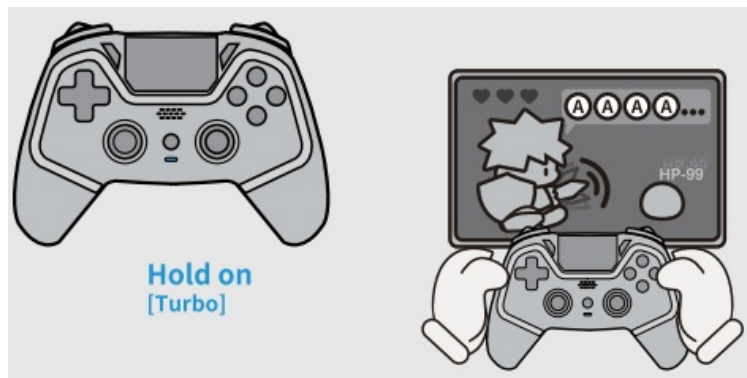

Turbo Rate Adjustment:

 - (Speed up the turbo rate: Press[Turbo] + push the right joystick upwards)
- (Slow down the turbo rate: Press[Turbo] + push the right joystick downwards)

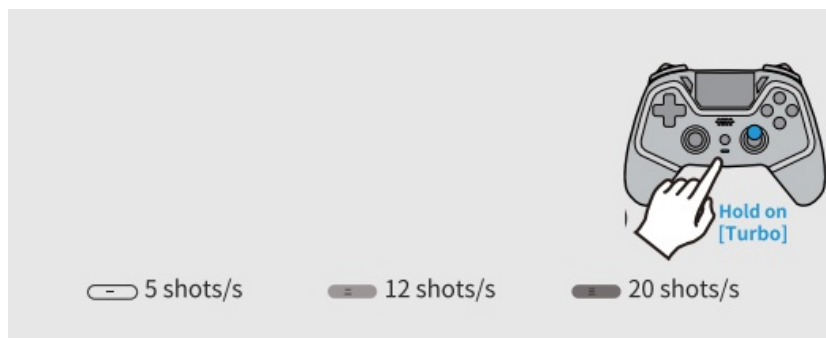

Light Function

• Change Light Color

Hold [Turbo] + press [L3 joystick](each press will changes the light color)

 
•



Adjust Brightness

Hold [Turbo] + [L3 joystick] (hold both buttons for gradual brightness adjustment.

Release to maintain current brightness.)

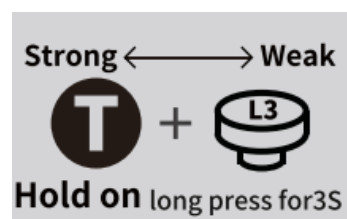


• Change Light Mode

Hold [Turbo] + press [L3 joystick] twice (each operation will changes the light mode



Other Functions

 Charging Function

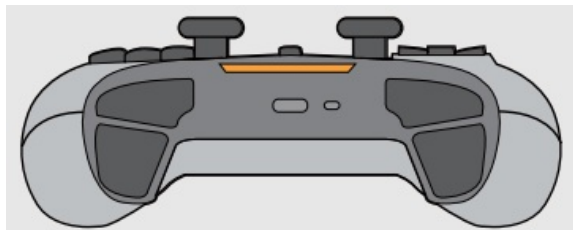

Please use a 5V 1A charger for charging. The breathing light is on during charging, and the light goes off when fully charged

Controller Reset



Long press the reset button to reset the controller. After resetting, follow the time connection method to connect the controller.

Routine maintenance

About Charging:

Recommend to use the 5V 1A charger to prevent damage to the controller circuit, and avoid high-power or PD fast charging chargers due to different charging protocols.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Controller Q&A

Q: How to calibrate the controller's triggers and joysticks?

Frequent use and long periods of operation may cause wear and performance degradation, which can result in reduced accuracy. Follow these steps to calibrate the controller's triggers and joysticks:

Step 1:

With the controller powered off, set the triggers to analog trigger mode. Then press [Turbo + Options + PS] simultaneously. The LED light will flash quickly, indicating that the controller has entered calibration mode.



Step 2:

Calibrate Triggers and Joysticks

Once in calibration mode, press both the left and right triggers four times simultaneously (this action calibrates the triggers). Then, rotate both the left and right joysticks in a circular motion three times (this action calibrates the joysticks). The LED light will stay on for 2 seconds, and the controller will automatically power off, completing the calibration.

What should I do if the joystick drifts?

Calibrating Joysticks on Switch: Go to Switch Settings > Controllers and Sensors then follow the prompts to calibrate the joysticks. Calibrating Joysticks on PC: Follow the Game Controllers settings window to calibrate the joysticks.

How long can the controller be used?

Under normal conditions, our controller can last for proximately 10 hours. Usage of features like vibration and Auto-fire affects battery consumption.

How to Charge the Controller?

Charging with Charging Cable: Plug the provided charging cable into the controller's type-C port to charge it.


What is the operating current and Voltage?

Working Voltage:4.5V-5.5V;Working Current:4.5V-5.5V;

How to reset the controller?

Long press the reset button to reset the controller.

Documents / Resources

	IINE L977 Wireless Controller [pdf] Instruction Manual 2BGZI-L977, 2BGZIL977, L977 Wireless Controller, L977, Wireless Controller, Controller
---	--

References

- [User Manual](#)

◆ 2BGZI-L977, 2BGZIL977, controller, IINE, L977, L977 Wireless Controller, Wireless

■ IINE Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.