

iJOY S1 Echo Wireless Speaker User Manual

Home » iJOY » iJOY S1 Echo Wireless Speaker User Manual



Contents

- 1 iJOY S1 Echo Wireless Speaker User Manual
 - 1.1 YOUR IJOY PRODUCT
 - 1.2 FCC STATEMENT
 - **1.3 BATTERY CAUTION**
 - 1.4 BATTERY DISPOSAL
 - 1.5 SPECS
 - 1.6 OTHER IMPORTANT SAFETY
 - **INFORMATION**
 - 1.7 INSTRUCTIONS
 - 1.8 LIMITED LIFETIME WARRANTY
- 2 Documents / Resources
- **3 Related Posts**

iJOY S1 Echo Wireless Speaker User Manual





FCC ID: 2A3E7-51

for use with Bluetooth enabled devices

YOUR IJOY PRODUCT

Thank you for purchasing and using the "JOY ECHO" wireless Bluetooth ® speaker. This product can provide a high quality listening experience for your mobile phone, computer and other media devices. Before using this product, carefully read this manual to correctly operate this device. Please ask your local dealer if you have any questions.

JOY ECHO Bluetooth® Speaker X 1 Cable X 1 User Manual X 1

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) Chis device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference lo radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation, This equipment generates uses and

can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general F exposure requirement.

The device can be used in portable exposure condition without restriction.

BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

SPECS

Voltage: 3.7V

Charging voltage/current: 5V by USB

Power: 3WResistance: 4Ω

Frequency: 50Hz-20KHZ Signal & noise ratio: 88dB

RF Range: 10m

Bluetooth® Specification: 5.0

OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children, This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing it over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handing. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.







INSTRUCTIONS

POWERING ON

• Connect your media device with the speaker using the audio line and turn the power switch to ON. The blue indicator light will turn on and you should hear a sound indicating the device has turned on. Please make sure the speaker is charged sufficiently.

PAIRING THE DEVICE

• Enable Bluetooth® on the device you want to connect the speaker to and connect your device to JOY ECHO. Once the connection is successful, music will start playing from the speaker.

CHARGING

• Low power will be indicated by a multi-frequency beep sound. Use the charging cable provided with this product and connect it to a power source with output voltage 5V. Do not use high voltage charging. The red light indicator shows that it is charging and will go out once charging is complete.

POWERING OFF

• Turn the power switch to OFF to turn off.

LIMITED LIFETIME WARRANTY

Our product is warranted for a One (1) year limited warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 12 months does not apply to decrease in the accumulator's effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator. WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS. For more information please visit, www.goijoy.com

Quest USA CORP 495 Flatbush Ave. Brooklyn, NY 11225

© GOIJOY & JOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners.

Designed by GOIJOY & NJOY in New York. All rights reserved Quest USA Corp. One (1) year limited warranty, To activate your product warranty go to our website www.goijoy.com & register this product.

Made in China. LOT# 8001609

Documents / Resources



iJOY S1 Echo Wireless Speaker [pdf] User Manual S1, 2A3E7-S1, 2A3E7S1, S1 Echo Wireless Speaker, Echo Wireless Speaker

Manuals+,