

**ikan Teleprompter Controller**



# ikan Teleprompter Controller Instruction Manual

[Home](#) » [ikan](#) » ikan Teleprompter Controller Instruction Manual 

## Contents

- 1 [ikan Teleprompter Controller](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Operation](#)
- 5 [Care and Maintenance](#)
- 6 [Frequently Asked Questions](#)
- 7 [Documents / Resources](#)
  - 7.1 [References](#)
- 8 [Related Posts](#)

ikan

## ikan Teleprompter Controller



## Product Information


### Specifications

- Model: ScriptScroll Pro
- Scrolling Speed: Adjustable
- Sensitivity Levels: Slow, Fast
- Buttons: Rotary Knob, Sensitivity Button, Rewind Button, Start/Stop Button, Fast-Forward Button

Thank you for choosing the IKAN Teleprompter Controller, designed for seamless integration with Prompter Pro 4 software. This device enhances your prompting experience with intuitive controls and multiple speed settings.

### Product Usage Instructions

1. Rotary Knob: Located at the center, this knob adjusts the script's scrolling speed. Rotate clockwise to increase speed, or counter-clockwise to decrease speed.
2. Sensitivity Button (Slow/Fast): Press this button to toggle the knob's sensitivity.
3. Indicator Lights (I, II, III): These lights correspond to the sensitivity levels of the rotary knob.
4. Rewind Button: Press to rewind the script by one page.
5. Start/Stop Button: Press to begin or pause script scrolling.
6. Fast-Forward Button: Press to advance the script by one page.

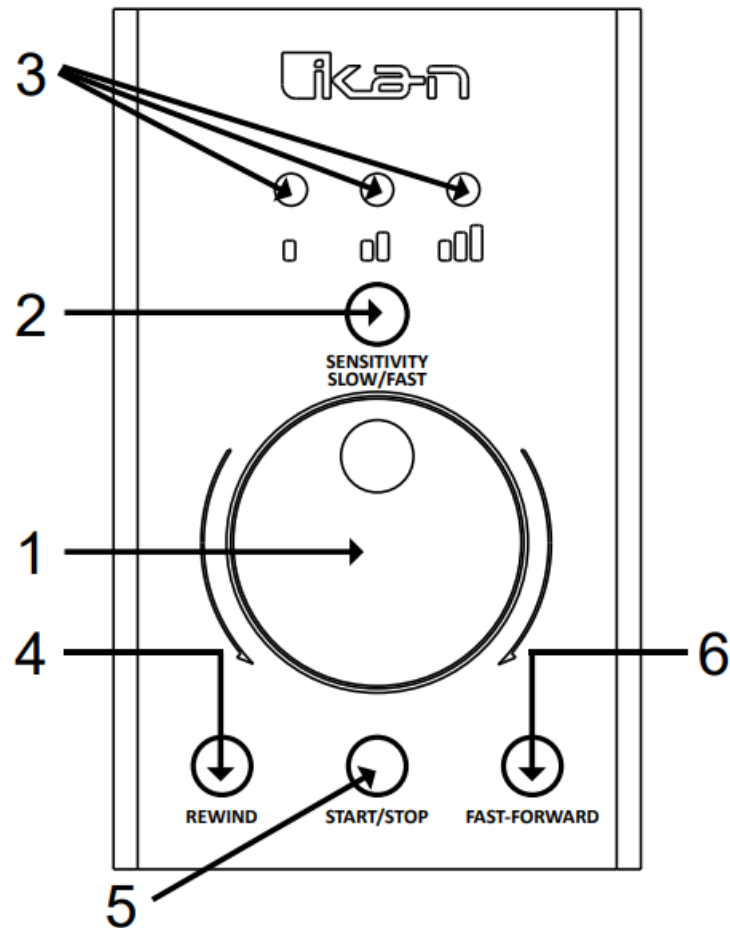

## What's Included

- Teleprompter Controller
- USB cable
- Instruction Manual

**Connection:** Connect the Teleprompter Controller to your computer using the provided USB cable.

**Software:** Ensure Prompter Pro 4 software is installed on your computer. The controller is plug and play and does not require additional drivers.

## Operation

### Adjusting Scroll Speed

- Turn the Rotary Knob gently to find the desired scroll speed for your script.
- A clockwise turn increases the scroll speed, while a counter-clockwise turn decreases it.

### Setting Sensitivity

- Press the Sensitivity Button to cycle through the sensitivity settings (I – Slow, II -Medium, III – Fast).
- Choose the setting that best fits your control preference. The corresponding Indicator Light will illuminate.

### Script Navigation

- To rewind or advance your script by one page, use the Rewind or Fast-Forward buttons respectively.
- To start or stop the script scrolling, press the Start/Stop Button.

## Care and Maintenance

- Keep the device free of dust and moisture.
- Do not disassemble the controller.
- Store in a cool, dry place when not in use. For further assistance, visit the [ikancorp.com](http://ikancorp.com)

For a digital version of this manual please scan the QR code below



## Frequently Asked Questions


**Q: How do I change the sensitivity level on the ScriptScroll Pro?**

A: Press the Sensitivity Button to toggle between slow and fast modes.

**Q: Can I adjust the scrolling speed while the script is paused?**

A: Yes, you can adjust the scrolling speed using the Rotary Knob even when the script is paused.

## Documents / Resources

 <p><b>ikAn</b> TELEPROMPTER CONTROLLER</p> <p><small>©2018 Ikan Corp. All rights reserved. This document is the property of Ikan Corp. and is not to be distributed or reproduced without the written permission of Ikan Corp. The information contained herein is confidential and may be subject to change without notice. The information contained herein is for informational purposes only and does not constitute an offer or recommendation. The information contained herein is for informational purposes only and does not constitute an offer or recommendation. The information contained herein is for informational purposes only and does not constitute an offer or recommendation.</small></p>	<p><a href="#">ikan Teleprompter Controller</a> [pdf] Instruction Manual Teleprompter Controller, Controller</p>
--	--

## References

- [i Professional Video Production Equipment for Sale | Ikan](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.