

IKEA 204.873.16 SYMFONISK Picture Frame with WiFi Speaker **Instructions**

Home » Ikea » IKEA 204.873.16 SYMFONISK Picture Frame with WiFi Speaker Instructions





204.873.16 SYMFONISK Picture Frame with WiFi Speaker Instructions





Contents


- 1 204.873.16 SYMFONISK Picture Frame with WiFi Speaker
- 2 Documents / Resources


204.873.16 SYMFONISK Picture Frame with WiFi Speaker


As wall materials vary, screws for fixing to wall are not included. For advice on suitable screw systems, contact your local specialised dealer.

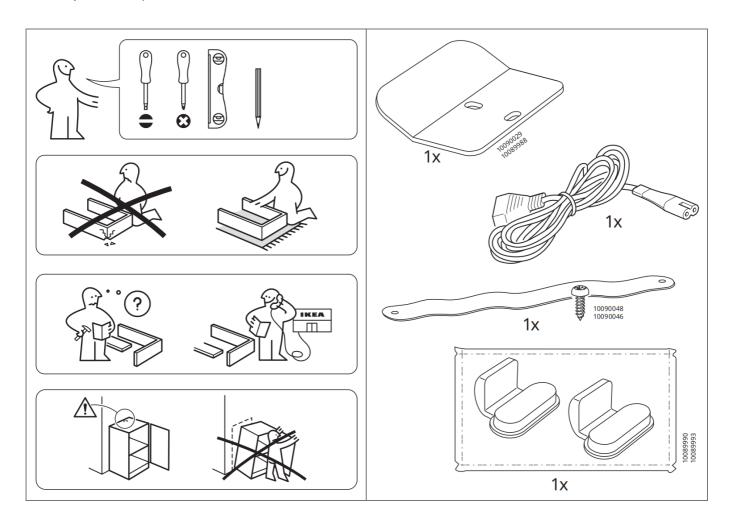


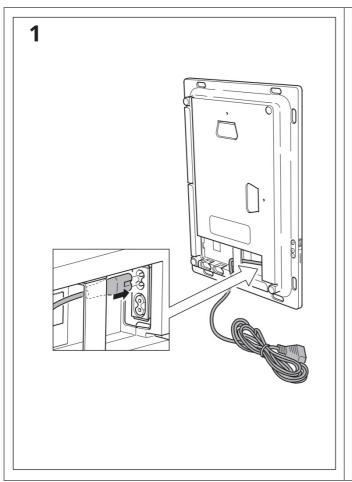


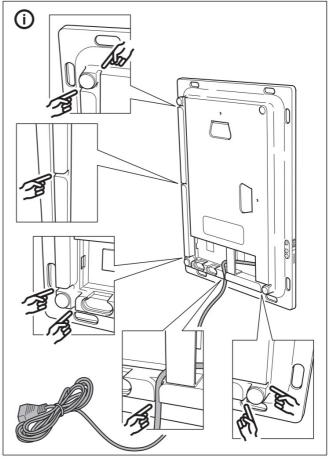


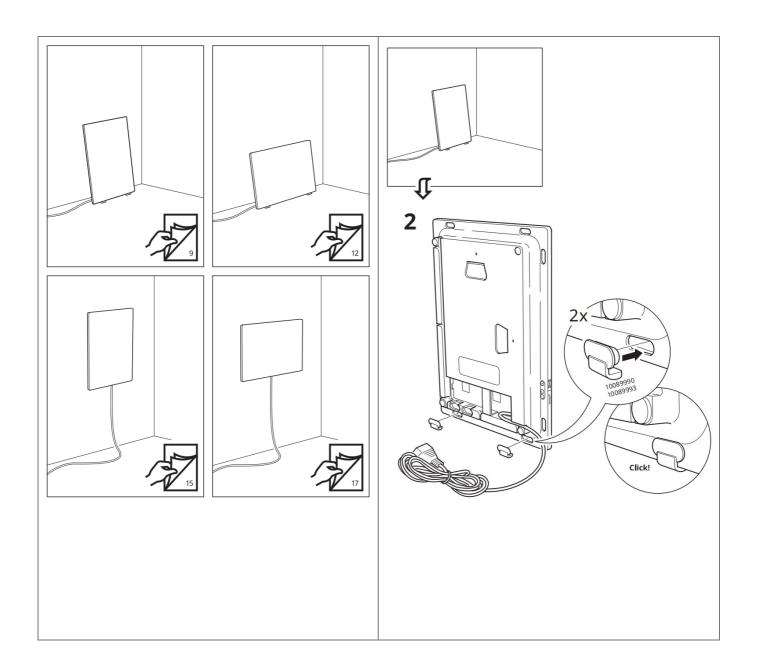

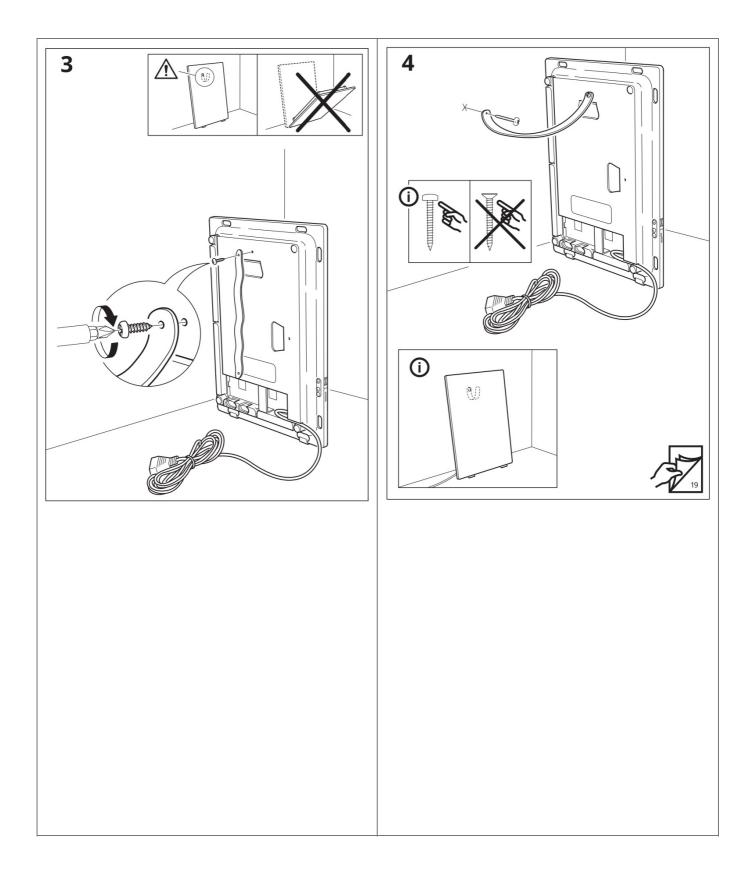


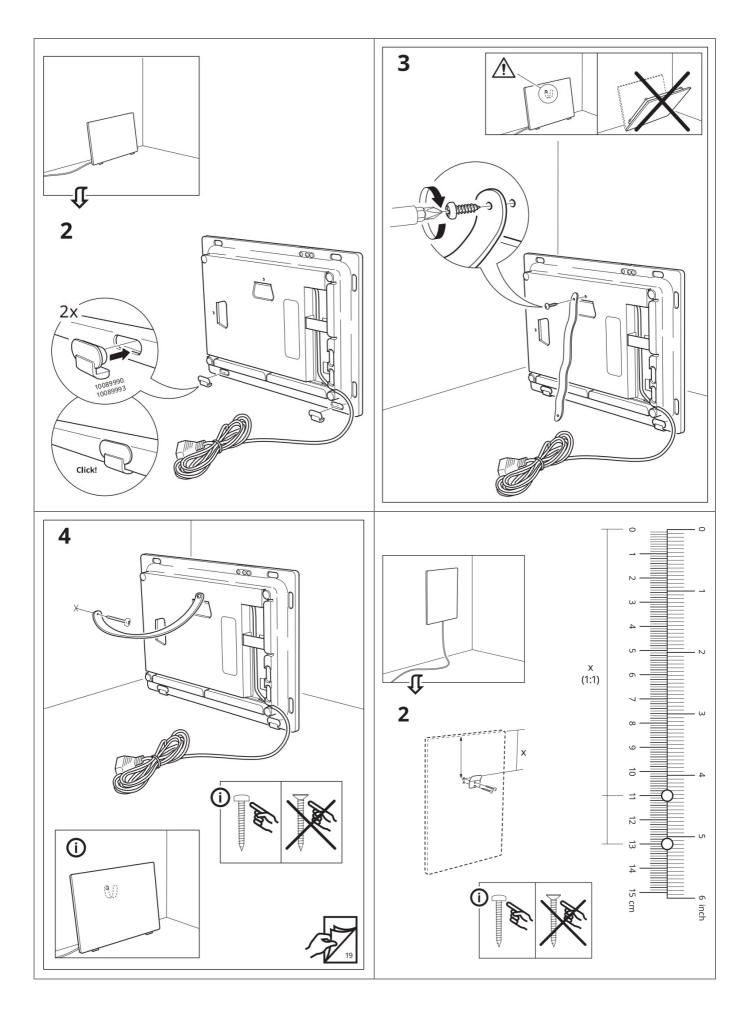

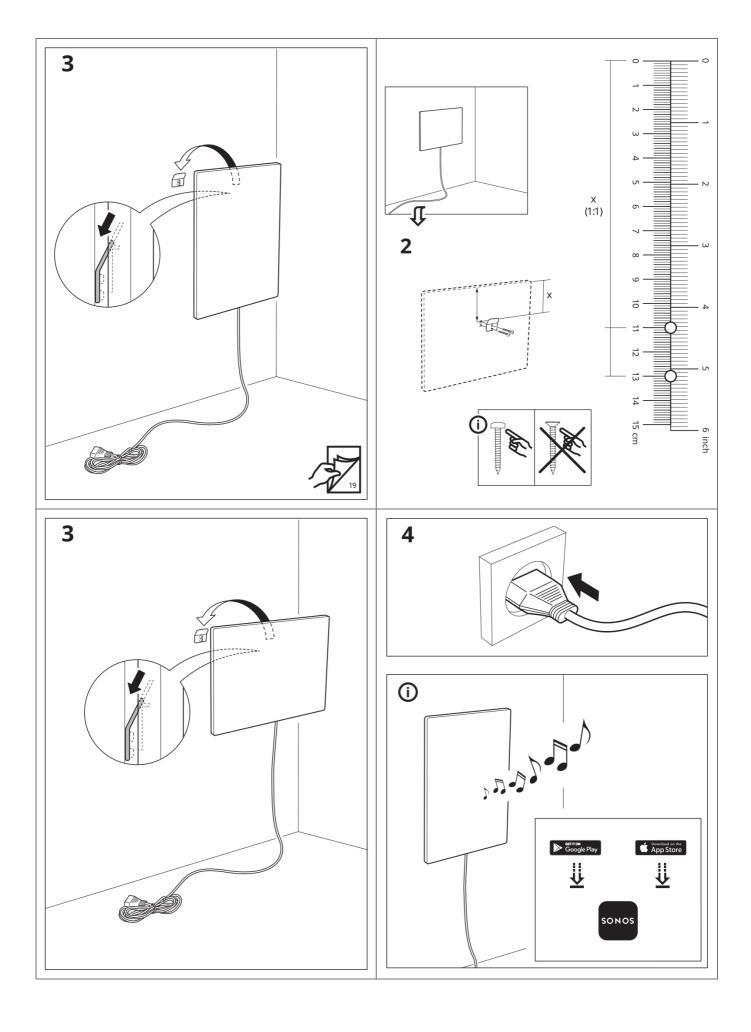


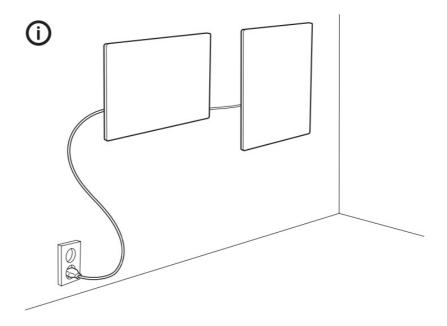



Max 2 units in one combination.

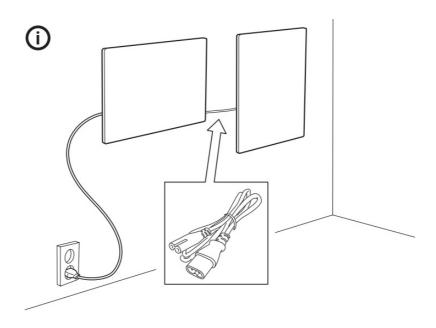

FÖRNIMMA intermediate connection cord is sold separately.

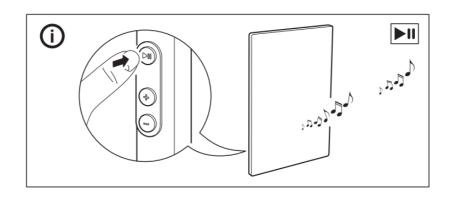

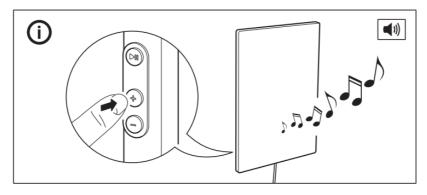

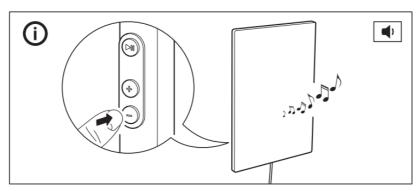



IKEA of Sweden © Inter IKEA Systems B.V. 2020 2022-09-12 AA-2274717-4

Documents / Resources





<u>IKEA 204.873.16 SYMFONISK Picture Frame with WiFi Speaker</u> [pdf] Instructions 204.873.16 SYMFONISK Picture Frame with WiFi Speaker, 204.873.16, SYMFONISK Picture Frame with WiFi Speaker, Picture Frame with WiFi Speaker