


IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker Instruction Manual

[Home](#) » [Ikea](#) » **IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker Instruction Manual** 


IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker

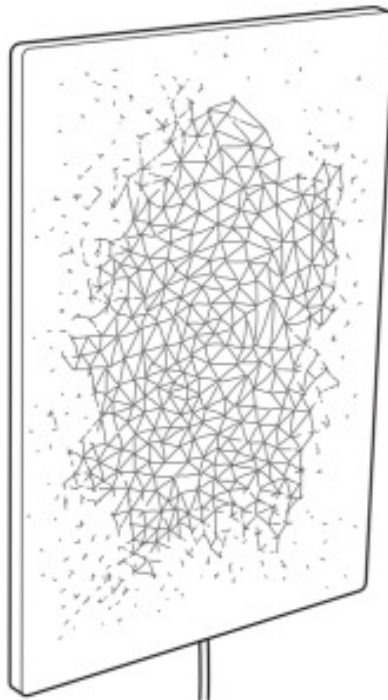


Contents




- [1 Safety Precautions](#)
- [2 Assembly Instructions](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)




Safety Precautions

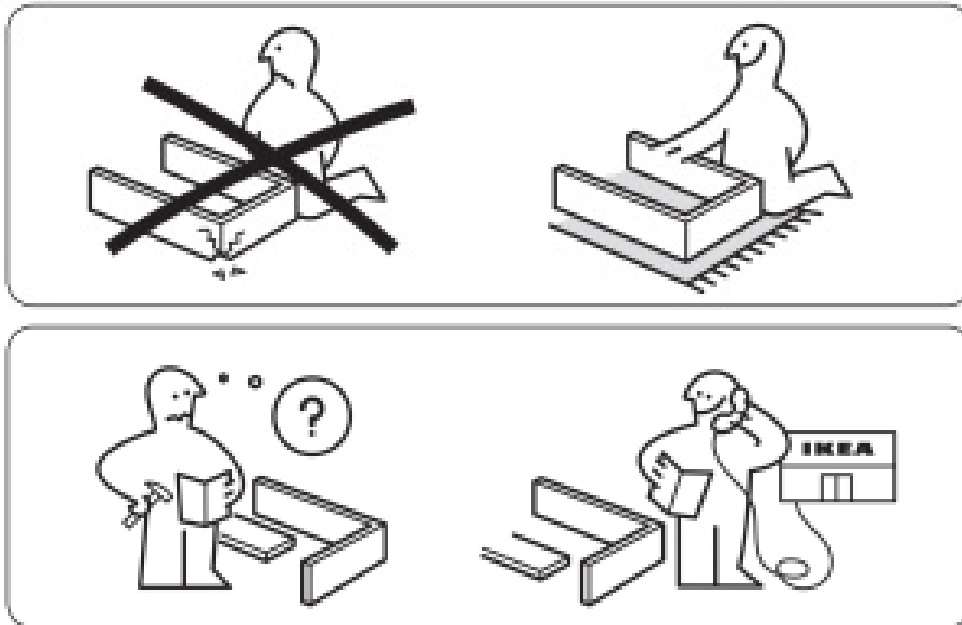

Assembly Instructions

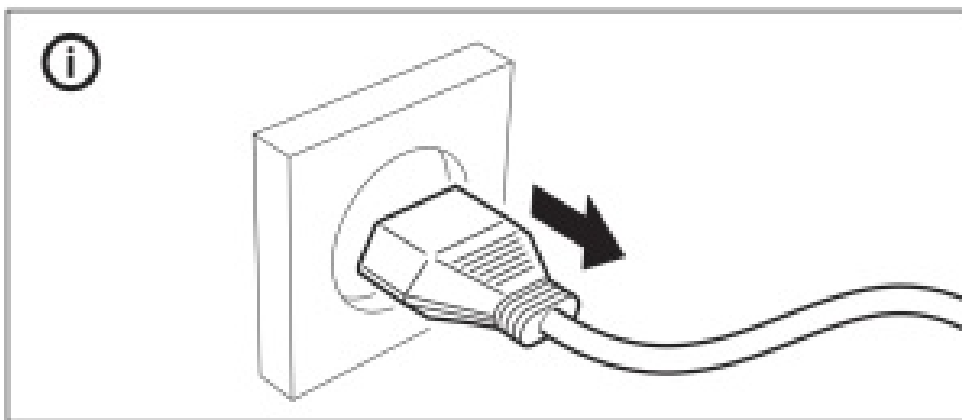


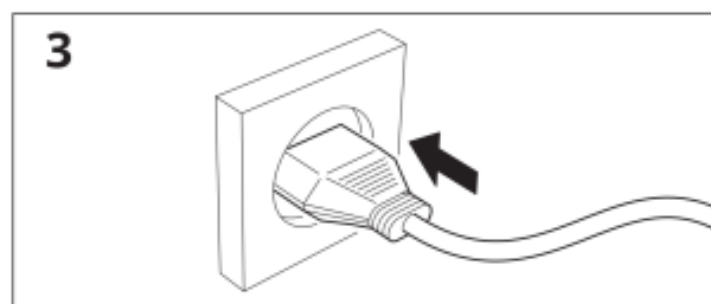
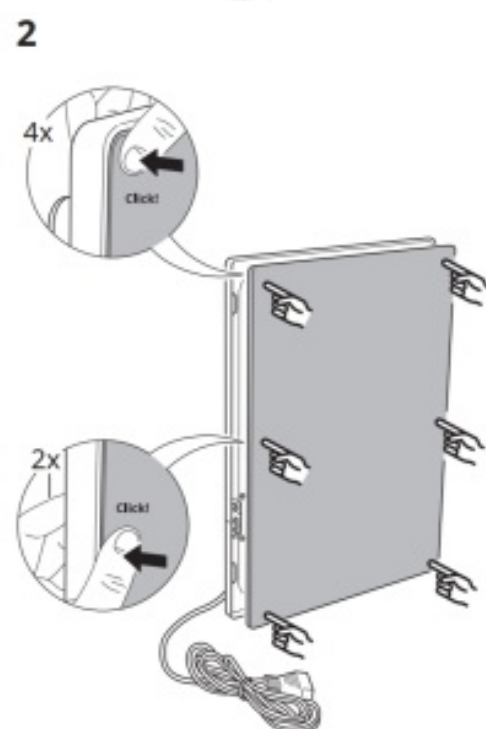
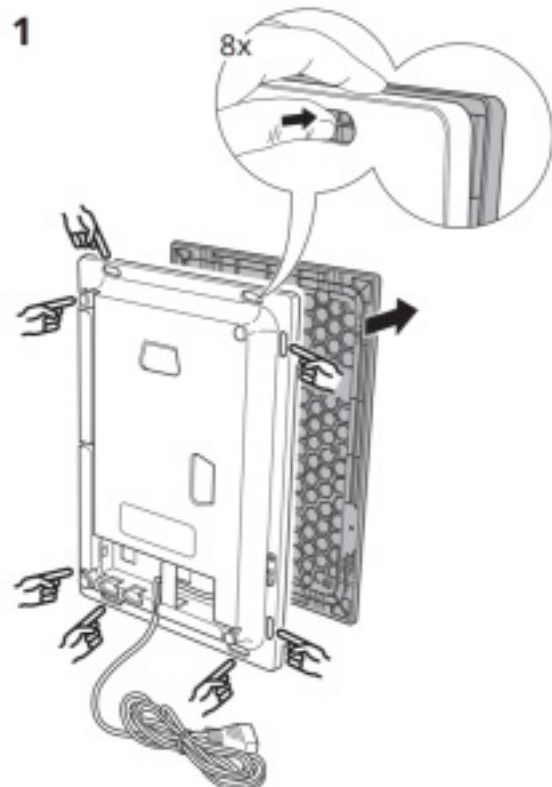


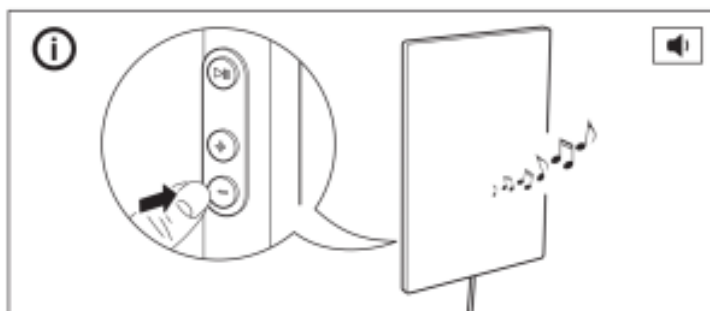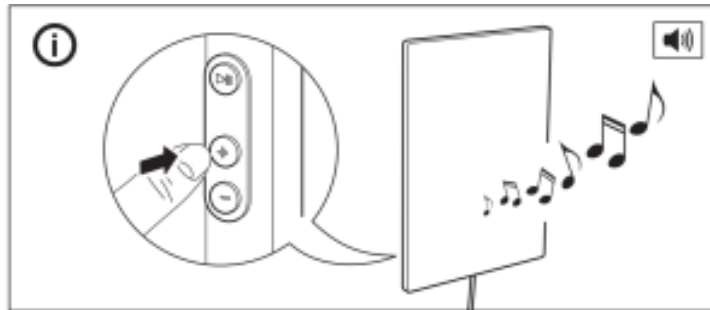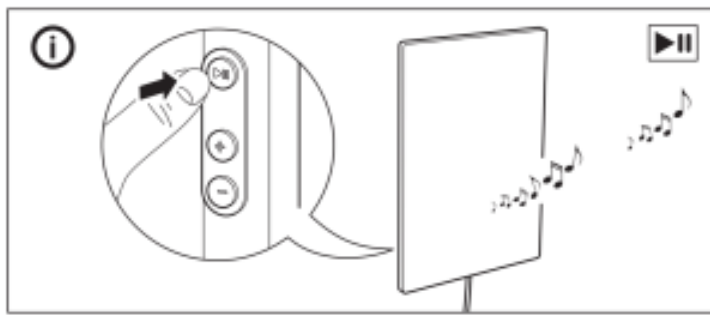

Design and Quality
IKEA of Sweden

www.ikea.com

   Documents / Resources

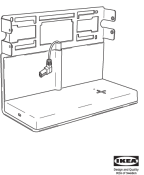SYMFONISK 	IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker [pdf] Instruction Manual 404.873.20, SYMFONISK, Picture Frame with Wi-Fi Speaker
SYMFONISK 	IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker [pdf] Instruction Manual 404.873.20, SYMFONISK, Picture Frame with Wi-Fi Speaker
SYMFONISK 	IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker [pdf] Instruction Manual E1913, FHO-E1913, FHOE1913, 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker, 4 04.873.20, SYMFONISK, Picture Frame with Wi-Fi Speaker
SYMFONISK 	IKEA 404.873.20 SYMFONISK Picture Frame with Wi-Fi Speaker [pdf] Instructions 404.873.20 SYMFONISK Picture Frame With Wi-Fi Speaker, 404.873.20, SYMFONISK Picture Frame With Wi-Fi Speaker, Frame With Wi-Fi Speaker

References

- [Hej! Welcome to IKEA Global](#)
- [Sortere - gjør det lettere å kaste mindre og sortere mer](#)
- [Hej! Welcome to IKEA Global](#)