



IKEA AA-2274717-4-101 SYMFONISK Picture Frame with WiFi Speaker Black Smart Instruction Manual

[Home](#) » [Ikea](#) » [IKEA AA-2274717-4-101 SYMFONISK Picture Frame with WiFi Speaker Black Smart Instruction Manual](#) 

Contents

- [1 IKEA AA-2274717-4-101 SYMFONISK Picture Frame with WiFi Speaker Black Smart](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Safety Instructions](#)
- [5 Required Tools](#)
- [6 Installation Instructions](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



IKEA AA-2274717-4-101 SYMFONISK Picture Frame with WiFi Speaker Black Smart



Product Information

The SYMFONISK is a wall-mounted speaker system that allows you to enjoy high-quality sound from your favorite audio sources. It comes with a sleek design and can be easily mounted on any type of wall surface. The package does not include screws for wall mounting, as the appropriate type of screws may vary depending on the wall material. For advice on suitable screw systems, please contact your local specialized dealer.





Product Usage Instructions

1. Before mounting the SYMFONISK on the wall, ensure that you have obtained the appropriate screws for your wall material from your local specialized dealer.
2. Unpack the SYMFONISK and ensure that all the necessary components are present.
3. Decide on the optimal location for mounting the SYMFONISK on the wall.
4. Attach the brackets to the back of the SYMFONISK using the screws provided in the package.
5. Mount the brackets onto the wall using the appropriate screws obtained from your local specialized dealer.
6. Connect the SYMFONISK to your audio source using the provided cables.
7. Turn on the SYMFONISK and adjust the volume to your desired level.
8. You can combine up to two units of SYMFONISK in one combination. Ensure that you do not exceed this limit.


Enjoy high-quality sound from your SYMFONISK!

As wall materials vary, screws for fixing to wall are not included. For advice on suitable screw systems, contact your local specialised dealer.


Safety Instructions

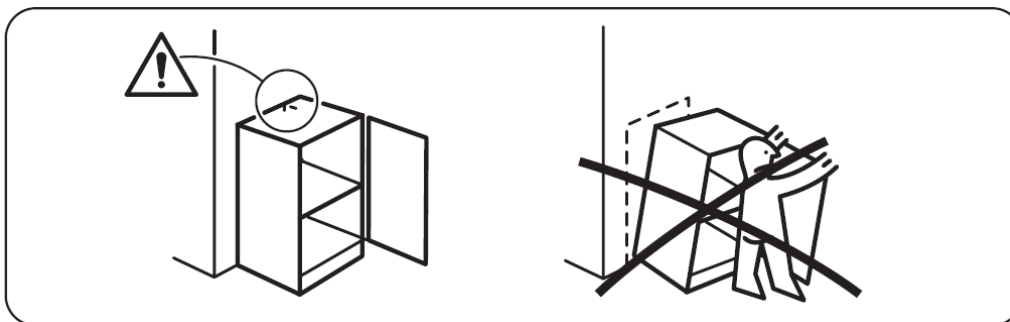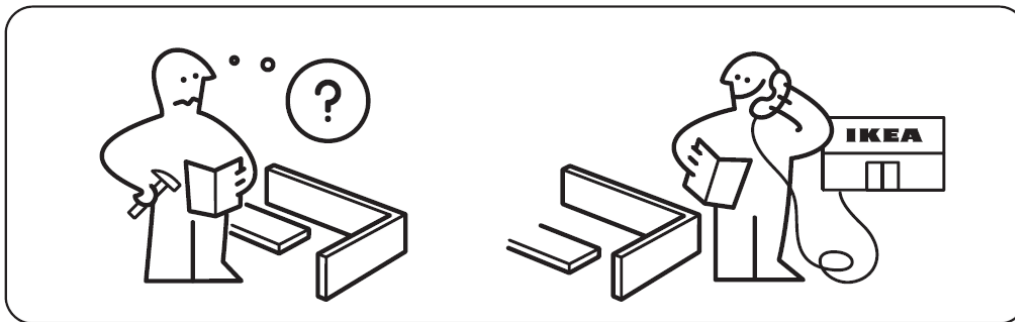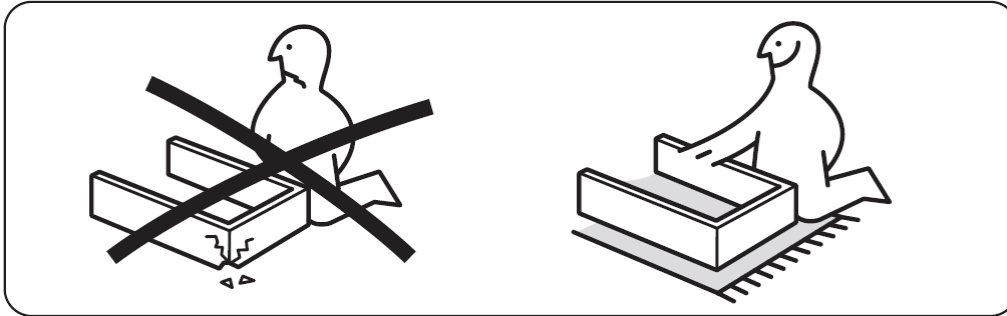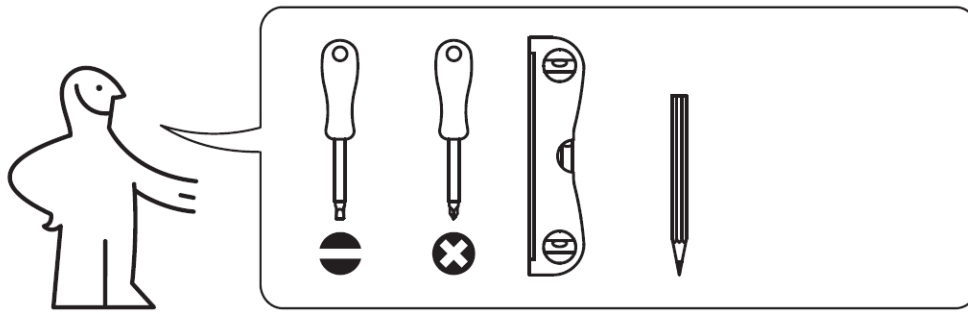


Required Tools

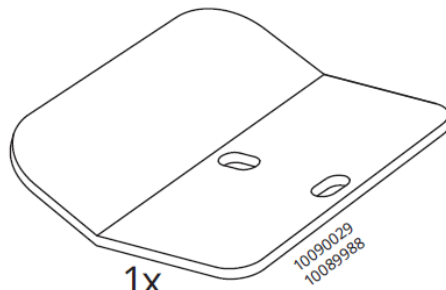


1x

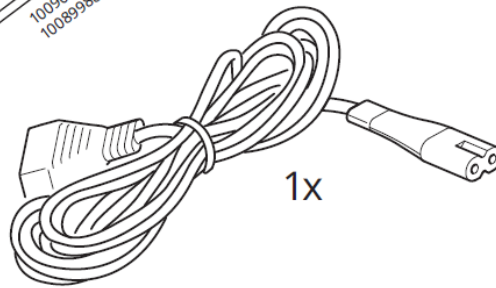 

1x

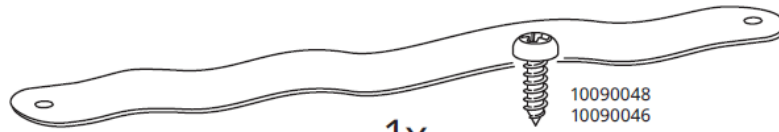 

1x

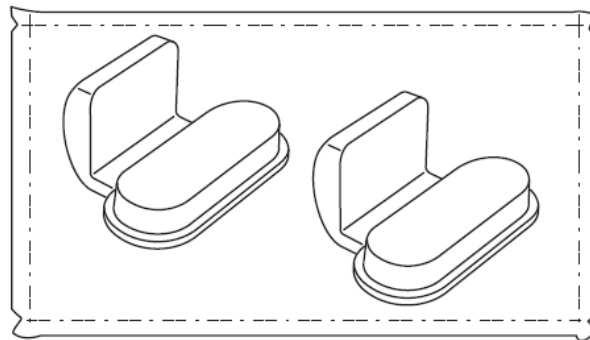 


10089990
10089993


1x




Installation Instructions



 
1

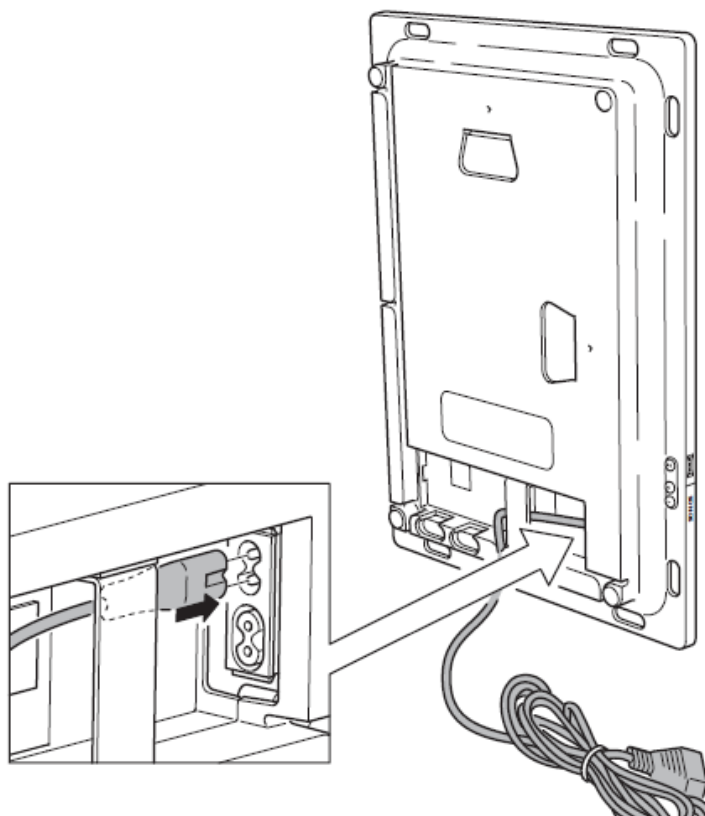


i

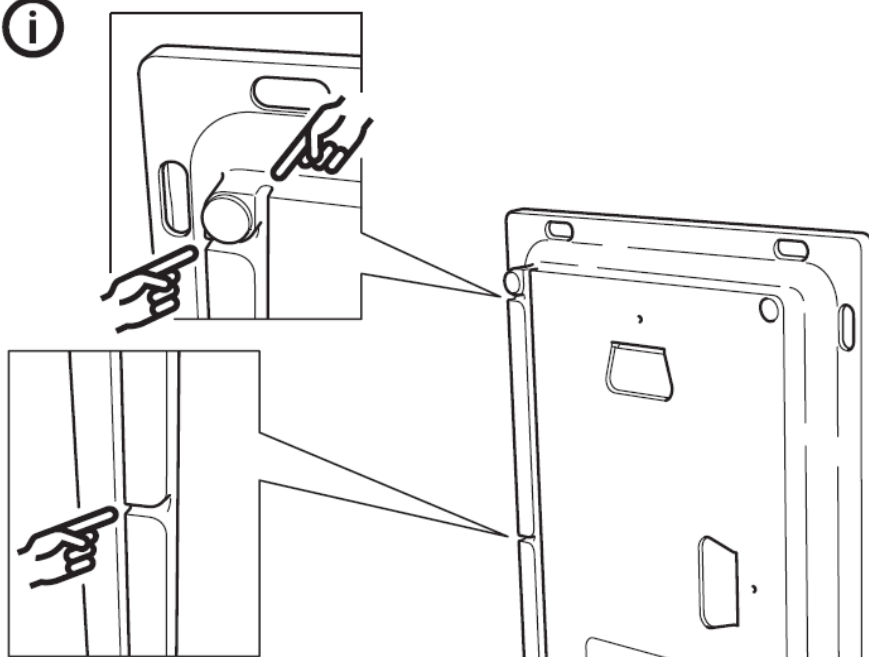 

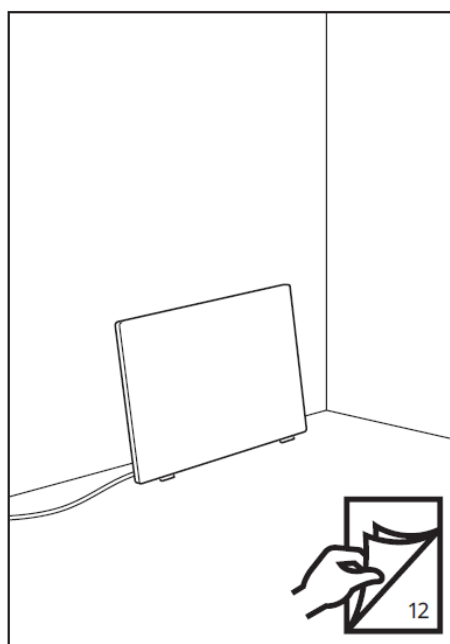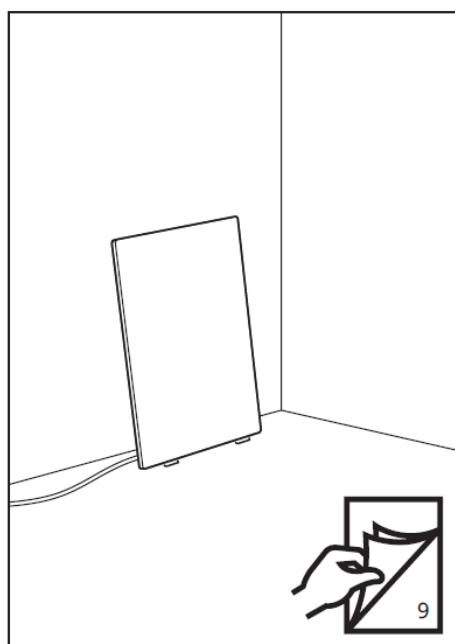  
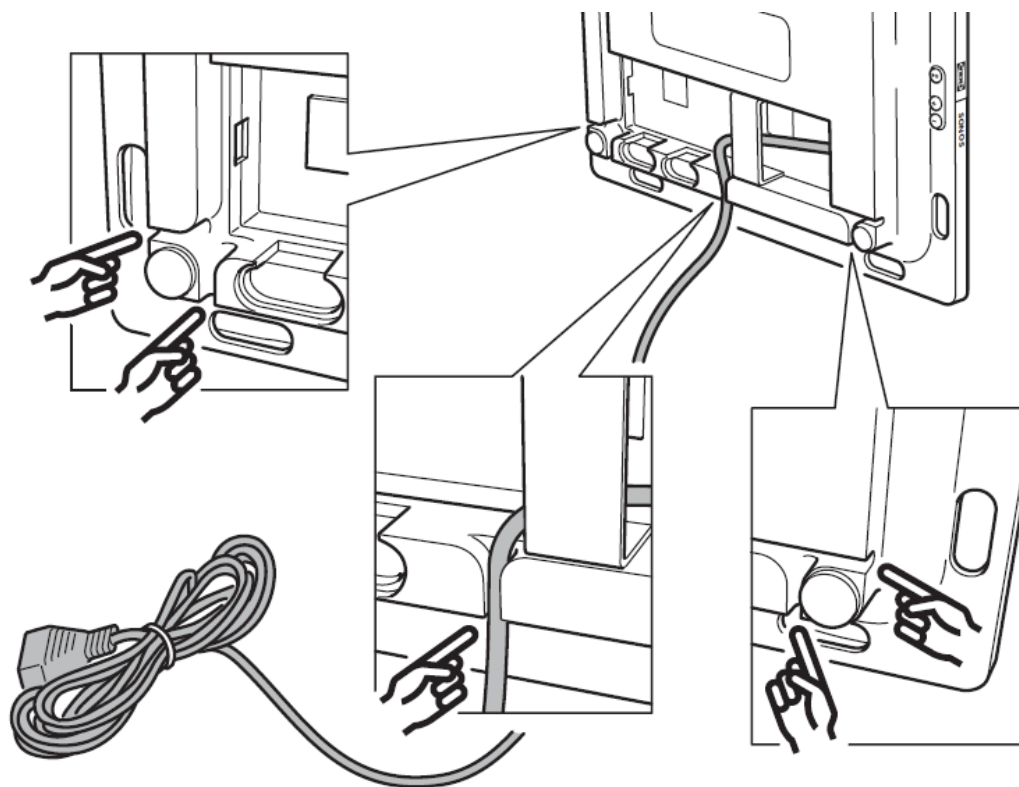 


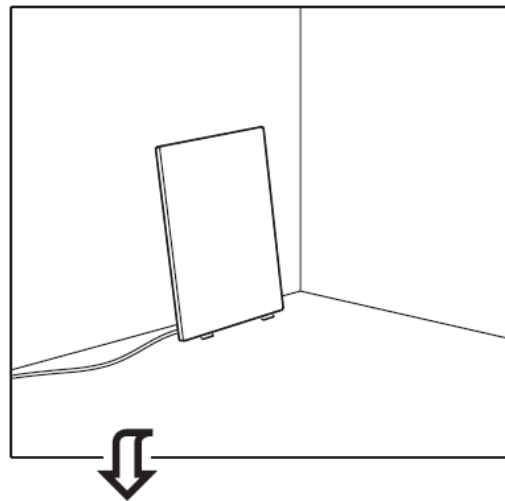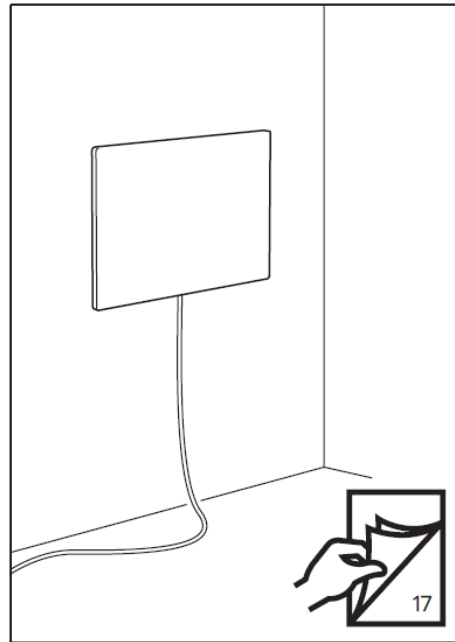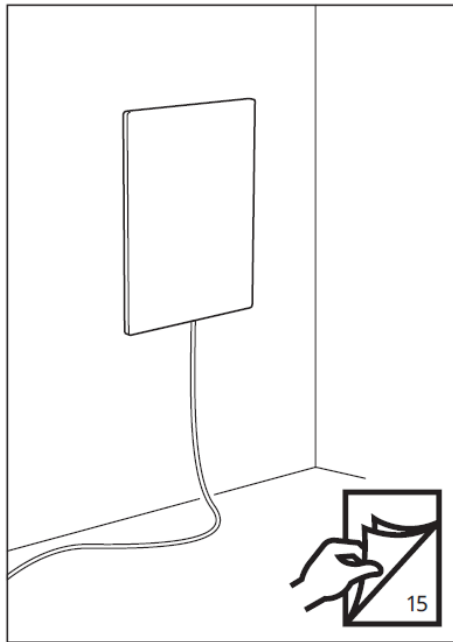   




2

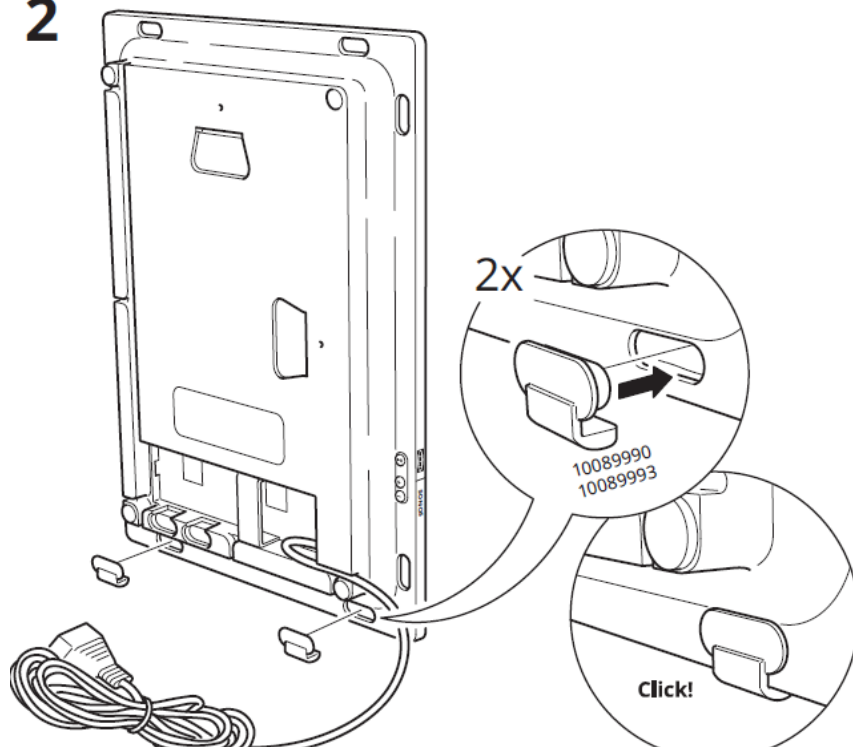 


3

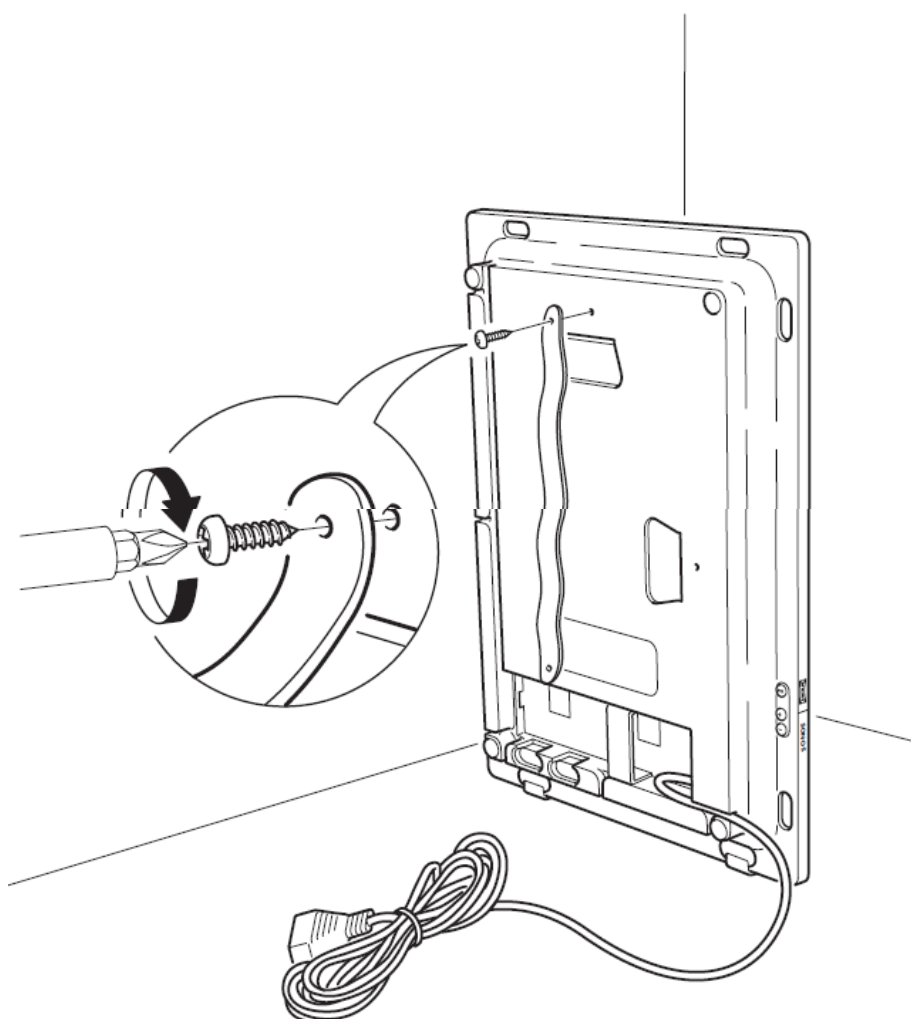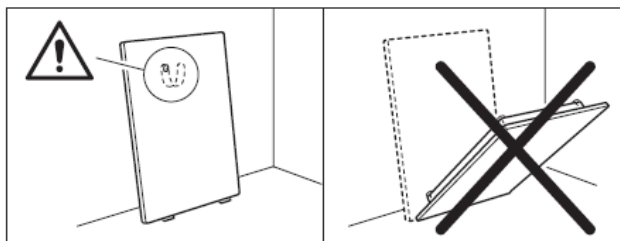  



4

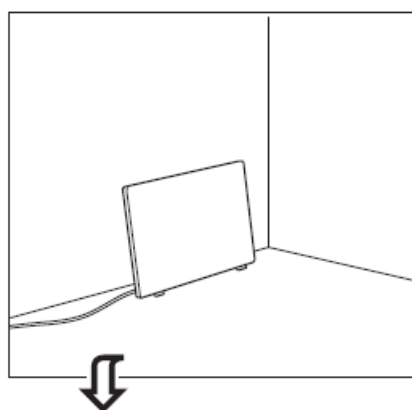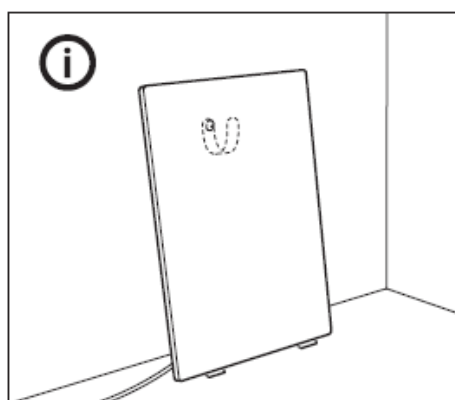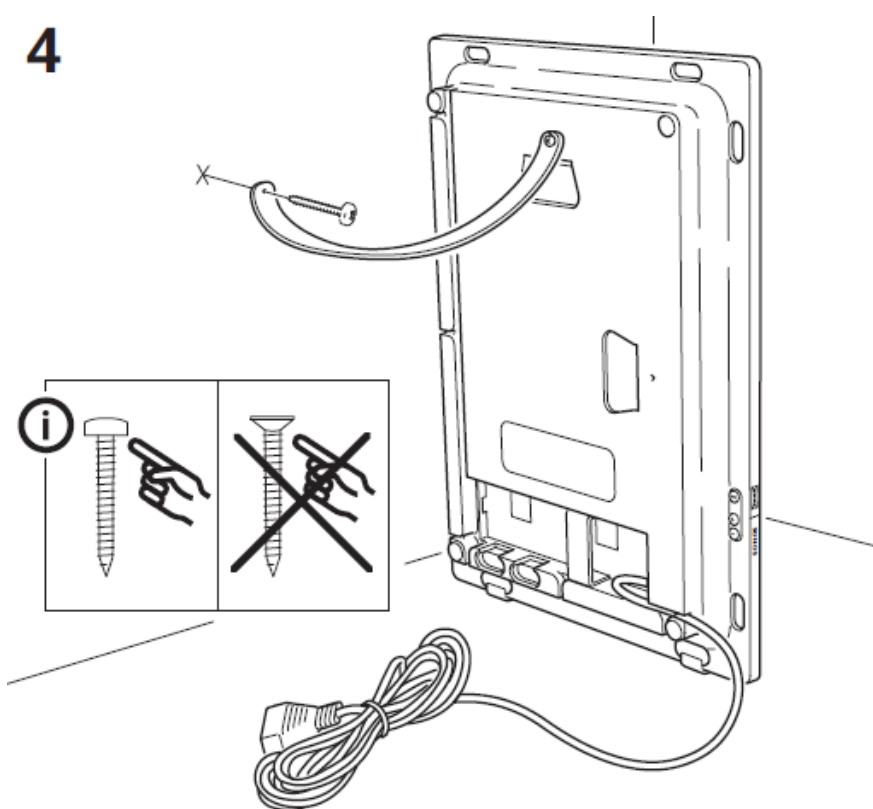   


2



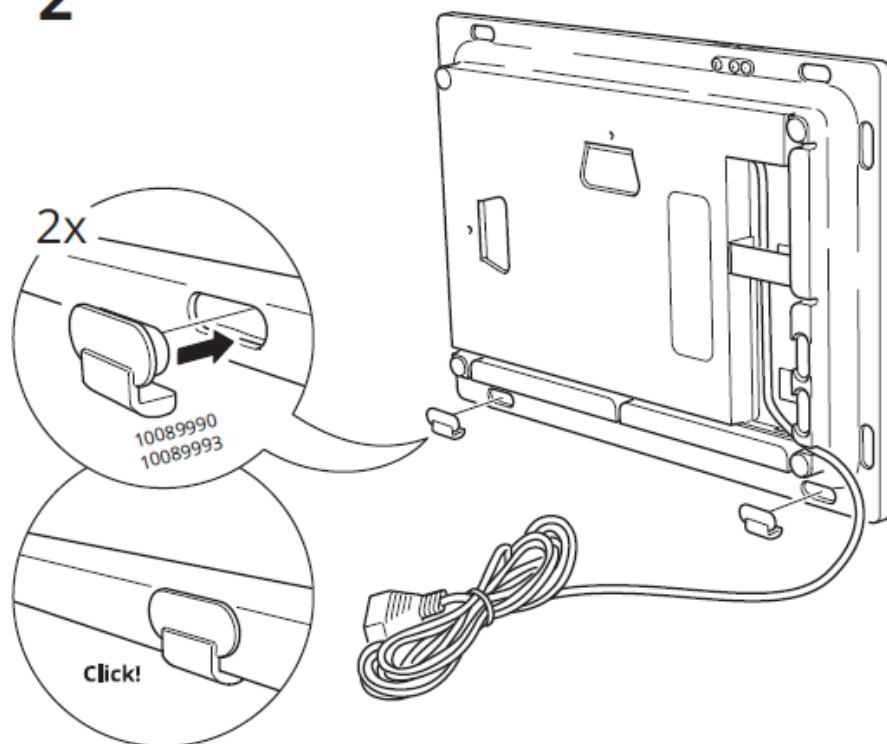 






3

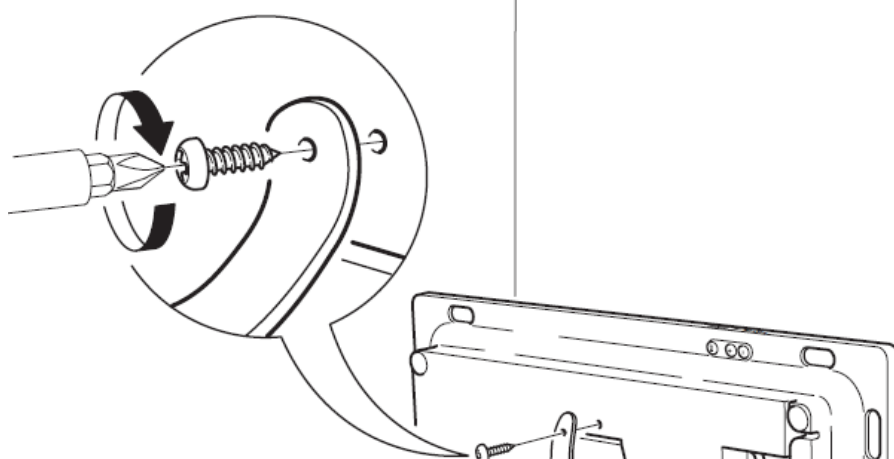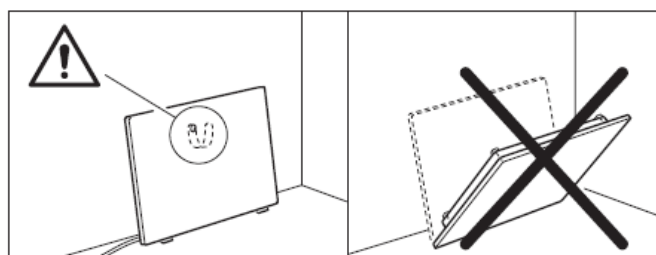  


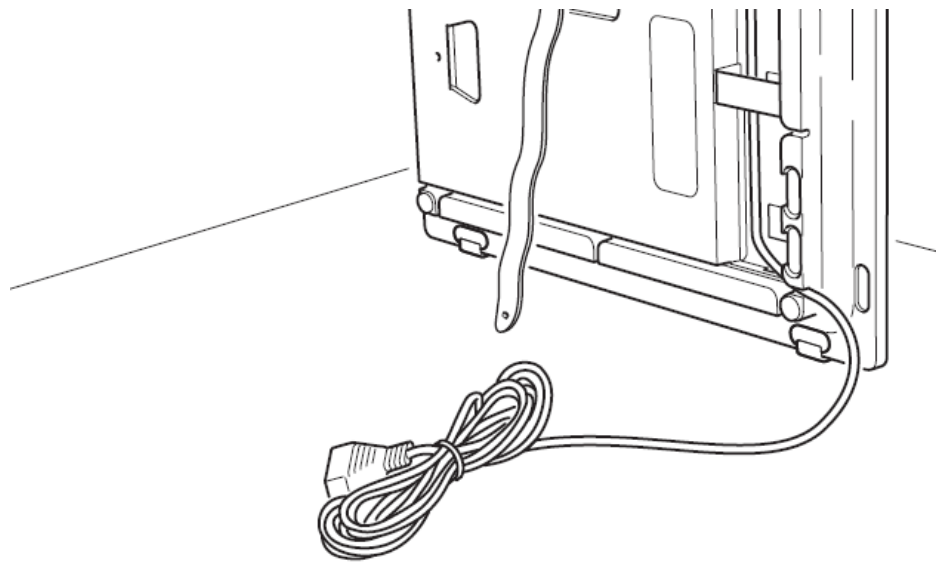 


4

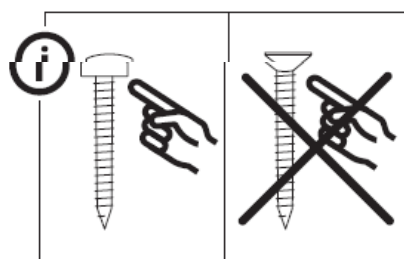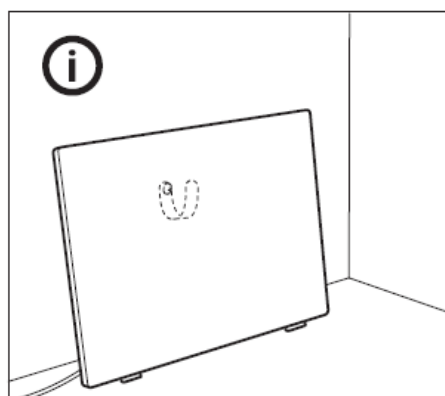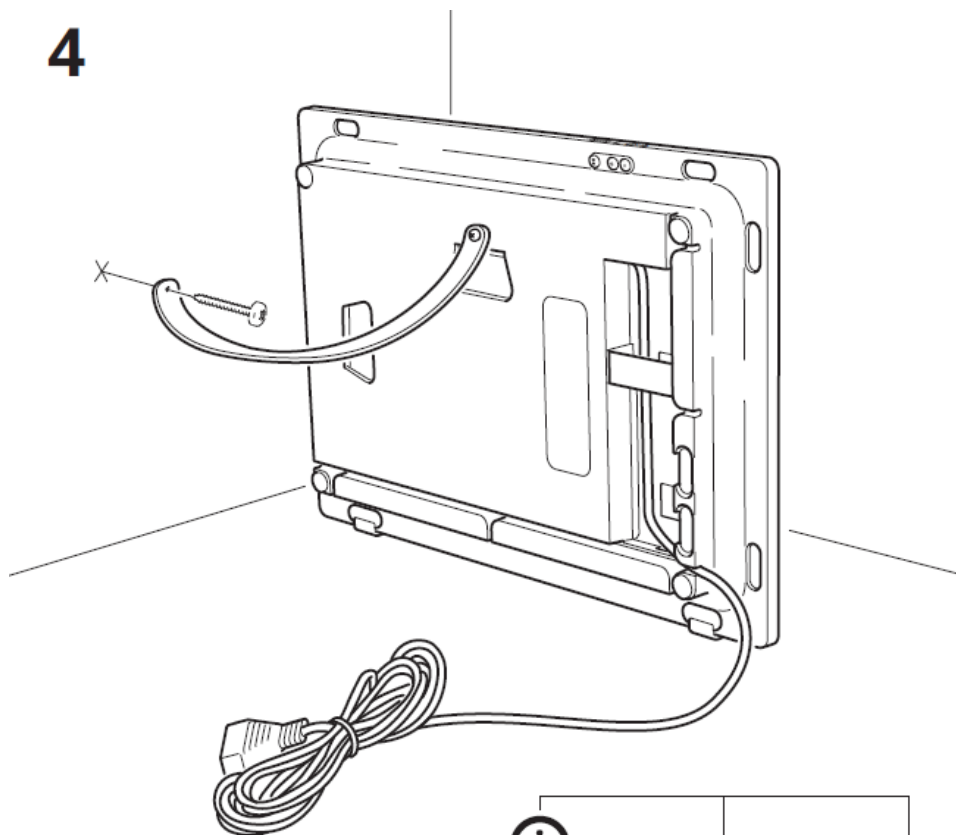   

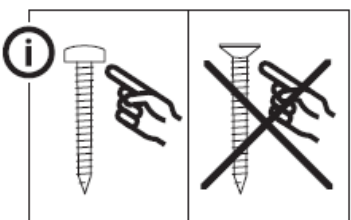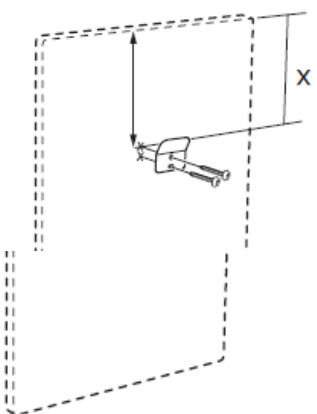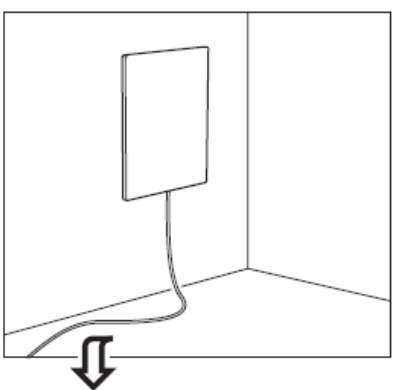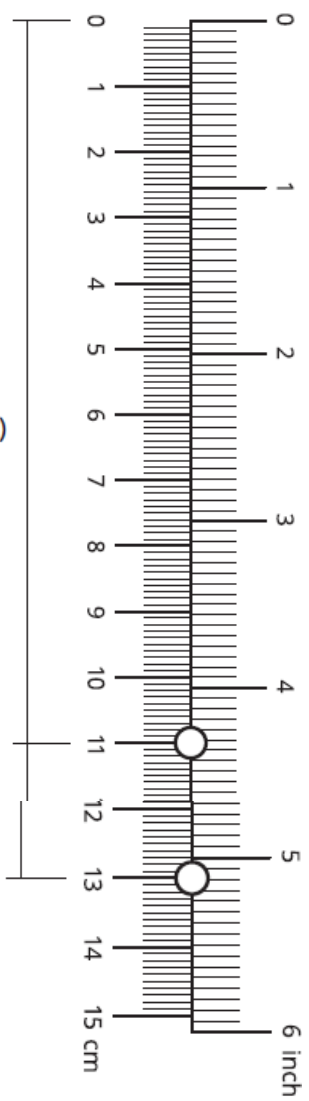    


3

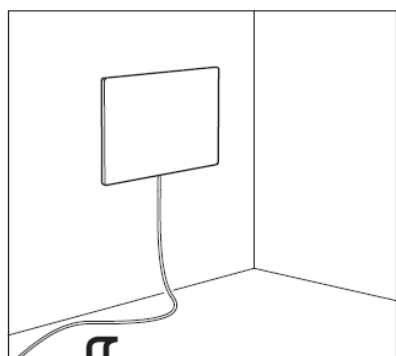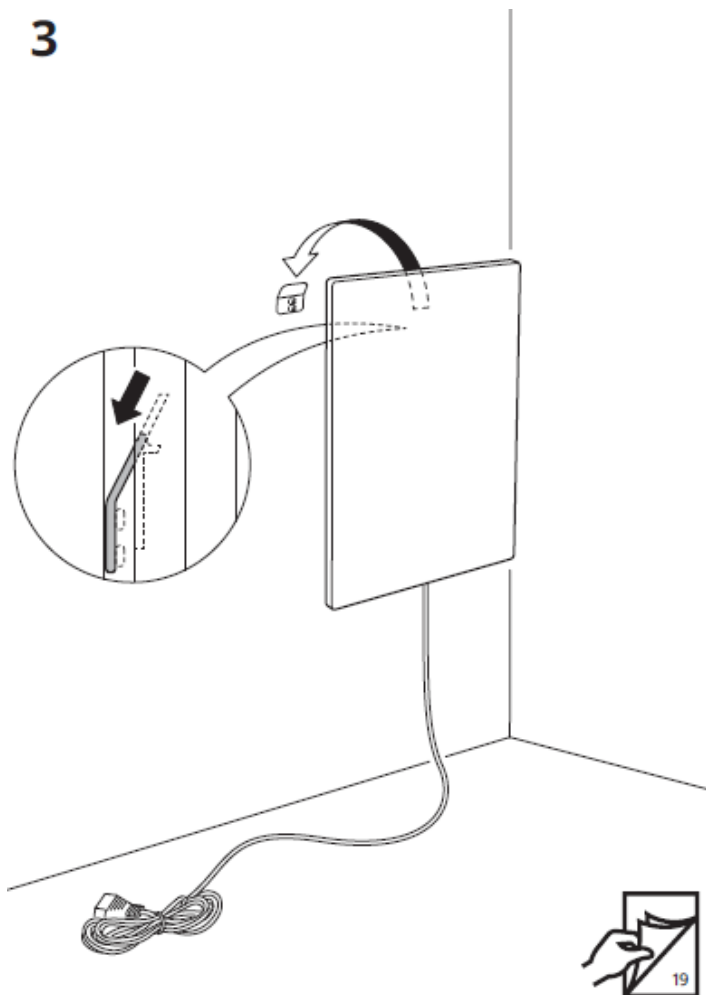  


2





 
 
x
(1:1)

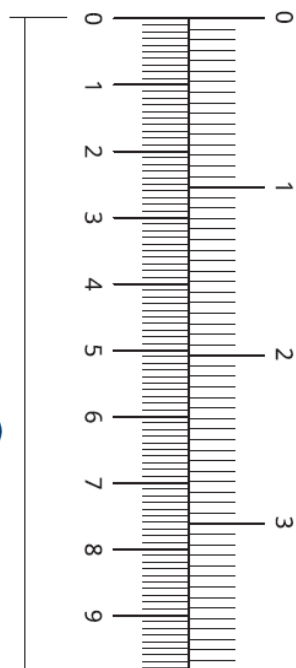

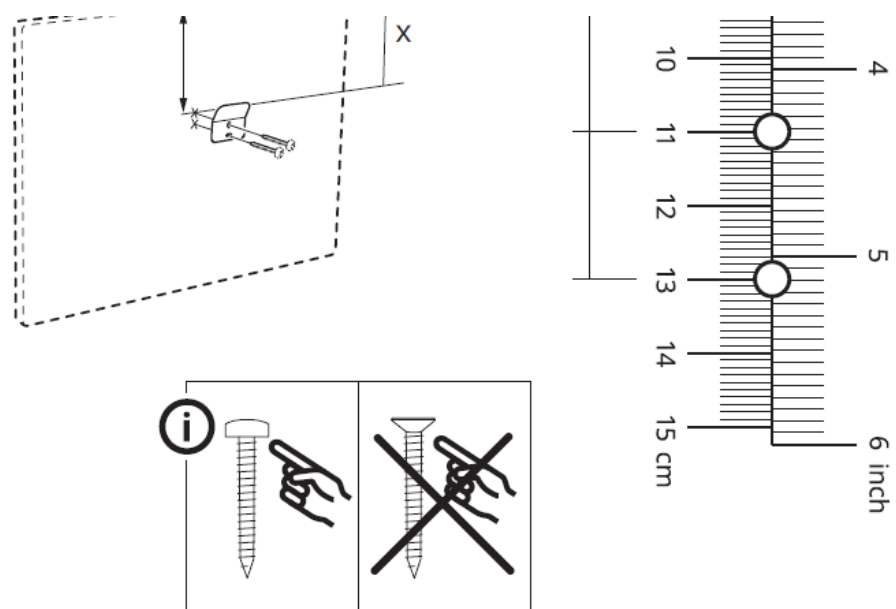


3

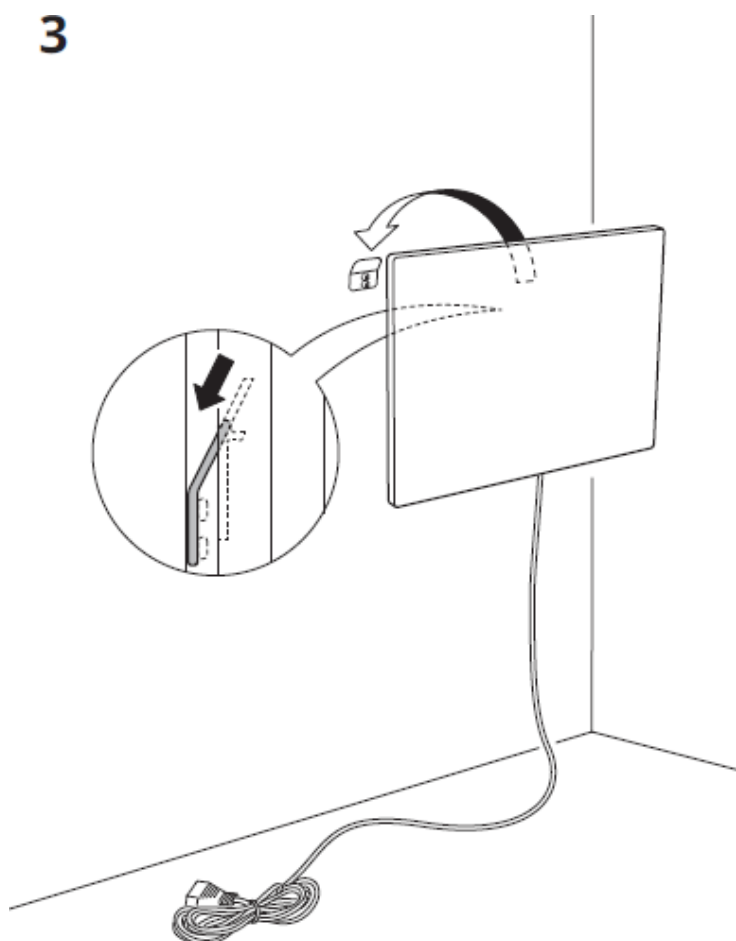 


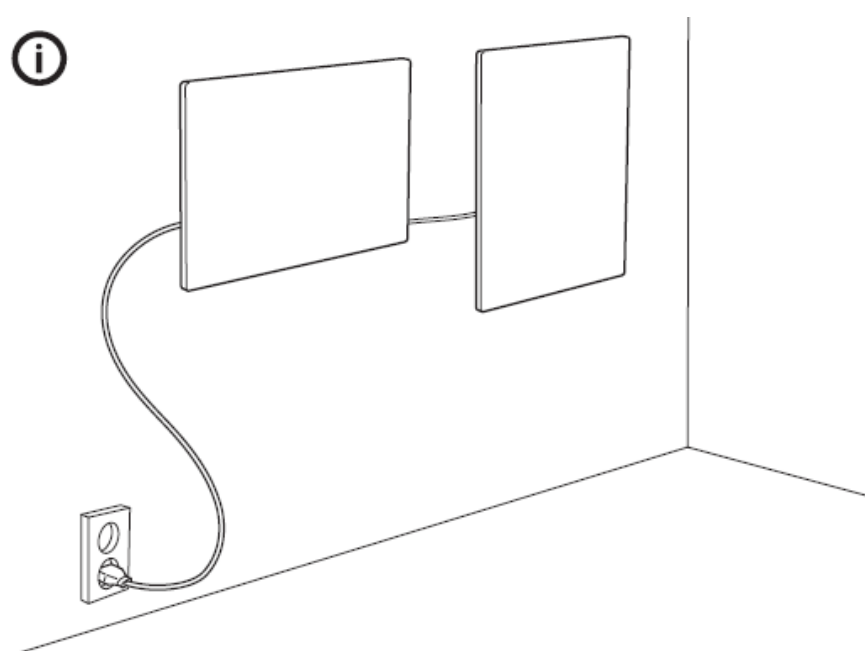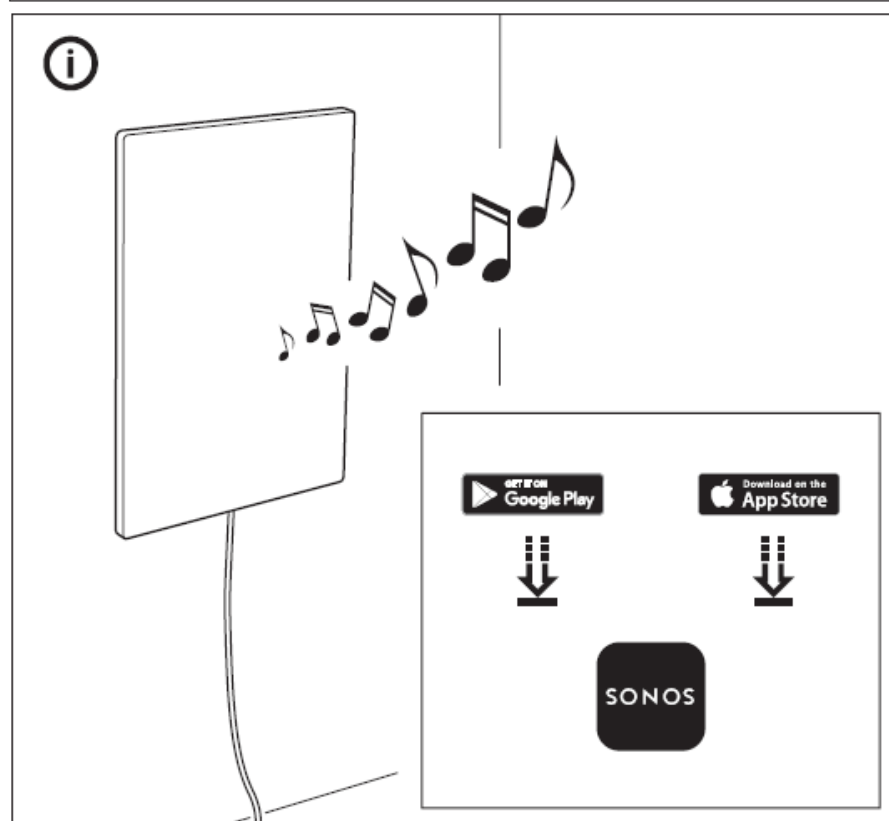  
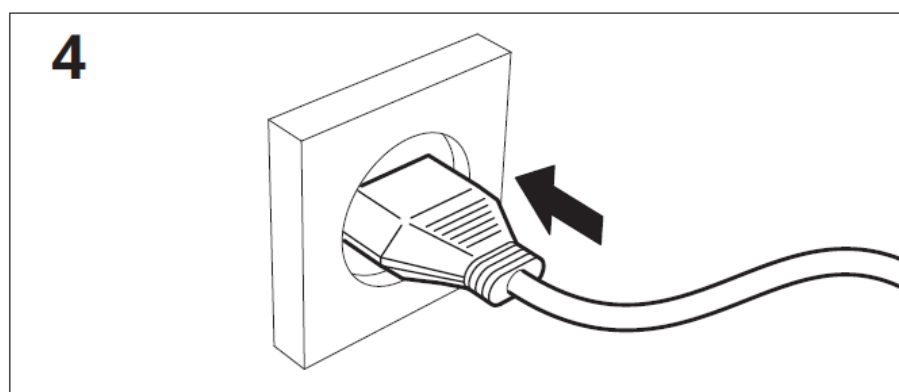 


Max 2 units in one combination.

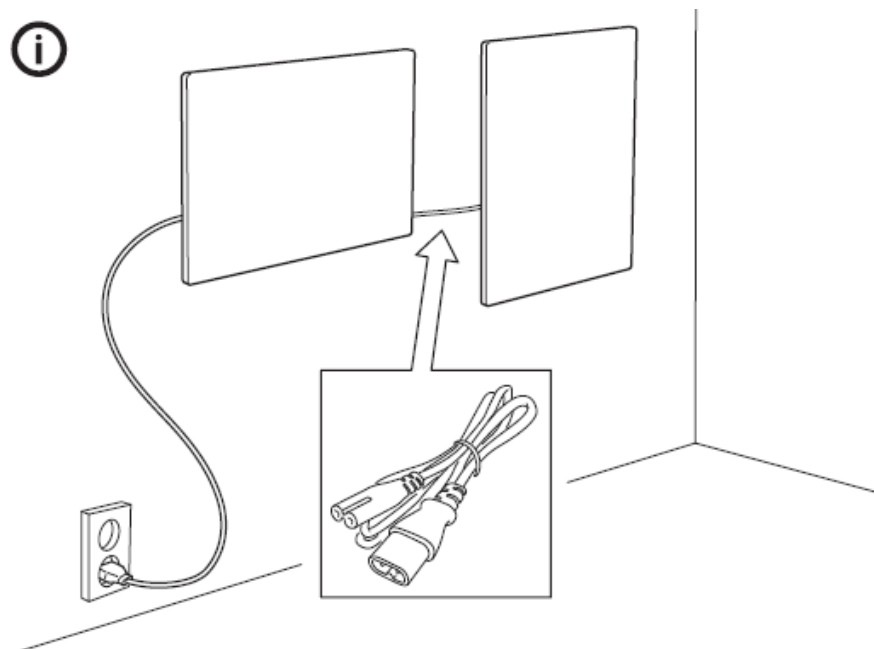 

   FÖRNIMMA intermediate connection cord is sold separately.

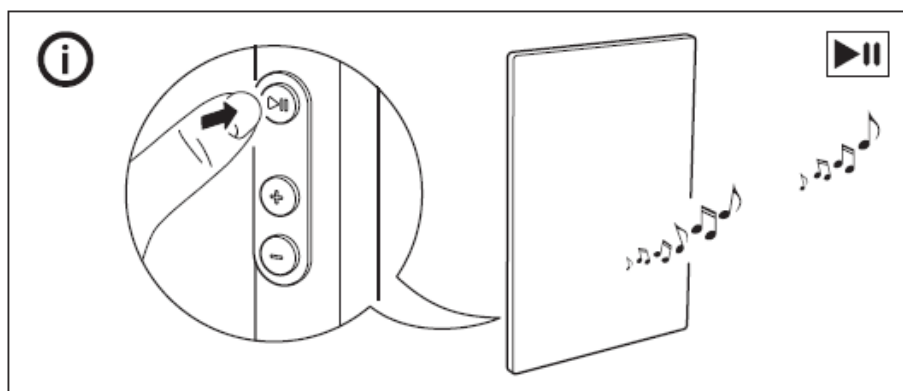

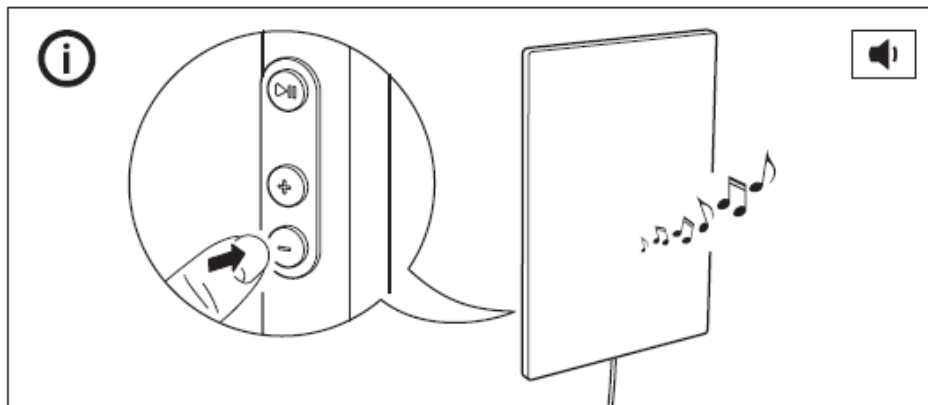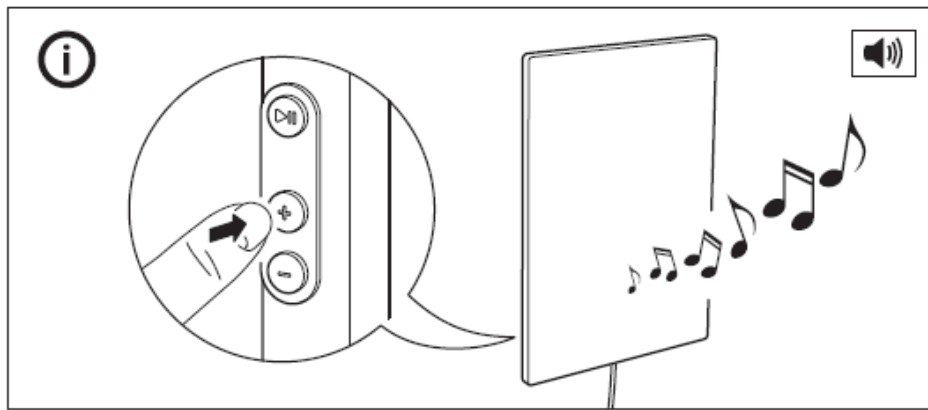


© Inter IKEA Systems B.V. 2020

2022-09-12

AA-2274717-4

 Documents / Resources

<p>SYMFONISK</p> 	<p>IKEA AA-2274717-4-101 SYMFONISK Picture Frame with WiFi Speaker Black Smart [pdf] Instruction Manual</p> <p>AA-2274717-4-101 SYMFONISK Picture Frame with WiFi Speaker Black Smart, AA-2274717-4-101, SYMFONISK Picture Frame with WiFi Speaker Black Smart, Picture Frame with WiFi Speaker Black Smart, Frame with WiFi Speaker Black Smart, Speaker Black Smart, Black Smart, Smart</p>
---	---