



IKEA E1913 SYMFONISK Speaker User Guide


[Home](#) » [Ikea](#) » **IKEA E1913 SYMFONISK Speaker User Guide** 

Contents

- [1 IKEA E1913 SYMFONISK Speaker](#)
- [2 Product Usage Instructions](#)
- [3 SPEAKER FUNCTIONS](#)
- [4 CARE INSTRUCTIONS](#)
- [5 RF EXPOSURE INFORMATION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



IKEA E1913 SYMFONISK Speaker

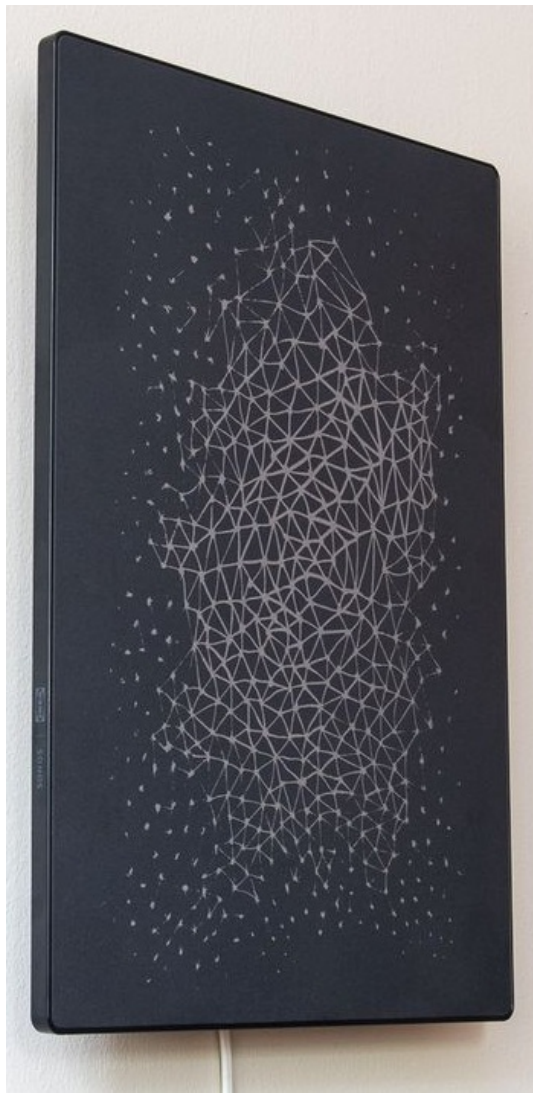

Product Information

The SYMFONISK speaker is a product manufactured by IKEA of Sweden AB. It is designed for indoor use only and operates at temperatures within normal room conditions. The model name of the speaker is SYMFONISK E1913 and the type number is not specified in the provided information. The speaker consumes 2.06W of power in HiNA (High Network Activity) mode. More detailed instructions and support material can be found on the IKEA website by searching for the product in the Assembly Instructions and Manuals section.

Product Usage Instructions

1. Plug in your SYMFONISK speaker.
2. For new Sonos users:
 - Go to the Apple App Store (for iOS devices) or Google Play Store (for Android devices) and search for Sonos.
 - Install and open the Sonos S2 app.
 - Follow the instructions in the app to set up your SYMFONISK speaker.
3. For existing Sonos system users:
 - Open the Sonos app.
 - Plug in your SYMFONISK speaker.
 - In the app, select Settings (gear icon) > System > Add Product.
 - Follow the instructions in the app to set up your SYMFONISK speaker.

4. SPEAKER FUNCTIONS:

- Play/Pause: Press once to start or stop the music, twice to skip to the next track, and three times to jump back one song.
Press and hold to add the music playing in another room.
- Status Light: It indicates the current status of the speaker.
Refer to the full instruction manual for more information.
- Volume Up
- Volume Down

5. CARE INSTRUCTIONS:

- To clean the speaker, wipe it with a soft moistened cloth.
- Use another soft, dry cloth to wipe it dry.

IMPORTANT & WARNING!

Save these instructions for future use.

RF EXPOSURE INFORMATION: According to RF exposure regulations, under normal operations, the user should not be closer than 20 cm from the device.

This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation Science and Economic Development Canada's licence-exempt RSS standard(s). Operation is subject to certain conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, the user is encouraged to try correcting the interference using the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

QUICK GUIDE


Plug in your SYMFONISK speaker. Go to the Apple App Store (iOS devices) or Google Play Store (Android devices) and search for Sonos.

Install and open the Sonos S2 app. Follow the instructions to set up your SYMFONISK speaker.

If you already have a Sonos system: Open the Sonos app and plug in your SYMFONISK speaker.

In the app, select Settings (gear icon) > System > Add Product. Follow the instructions to set up your SYMFONISK speaker.

SPEAKER FUNCTIONS

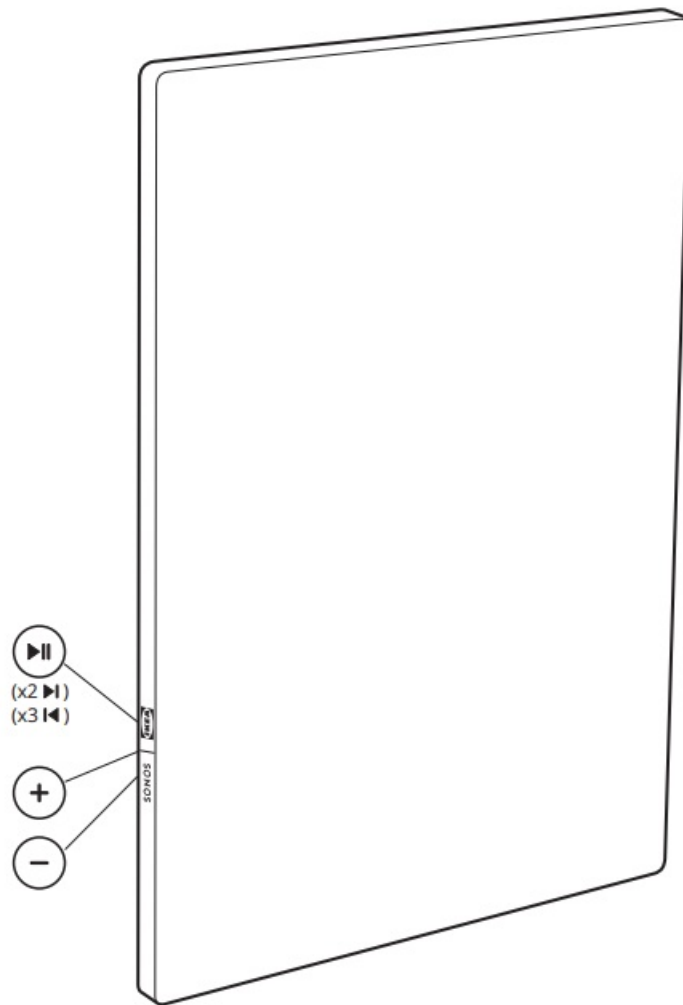

Play/Pause. Press once to start or stop the music; twice to skip to the next track; three times to jump back one song. Press and hold to add the music playing in another room.

Status Light. It indicates current status of the speaker.

See full instruction manual for more information



Volume Up



Volume down

Additional information:

The full instruction manual and support material can be found at <http://www.ikea.com>.

- Choose the country you are in. Search your product in the search field. Go to Assembly Instructions and Manuals.

CARE INSTRUCTIONS

To clean the speaker, wipe with a soft moistened cloth Use another soft, dry cloth to wipe dry.

Model name:	SYMFONISK
Type number:	E1913
Operating temperatures:	0°C to 40°C (32°F to 104°F)
Network Standby Consumption:	2.06W(HiNA)

For indoor use only

- Manufacturer: IKEA of Sweden AB
- Address: Box 702, SE-343 81 Älmhult, SWEDEN

IMPORTANT & WARNING!

- The speaker is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C (32°F to 104°F).
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- Never use abrasive cleaners or chemical solvents as this can damage the product.
- Different building materials and placement of the units can affect the wireless connectivity range.
- Never install the product in a confined space.

Always leave a space around the product for ventilation.

- Product shall not be exposed to excessive heat such as sunshine, heat sources, and fire or similar.
- No open flame sources, such as candle lights should be placed on the apparatus
- Do not attempt to repair this product yourself, as opening or removing screwed covers may expose you to the risk of electric shock.

Save these instructions for future use.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.

This device complies with Part 15 of the FCC Rules.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation Science and Economic Development Canada's license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation of the device.

WARNING:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

© Inter IKEA Systems B.V. 2020

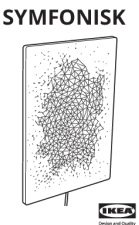Documents / Resources

 <p>SYMFONISK</p>	<p>IKEA E1913 SYMFONISK Speaker [pdf] User Guide E1913 SYMFONISK Speaker, E1913, SYMFONISK Speaker, Speaker</p>
------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------

References

-  [Hej! Welcome to IKEA Global](#)
-  [Hej! Welcome to IKEA Global](#)

Manuals+.