

IKEA HAGSTA 3 Way Socket



## IKEA HAGSTA 3 Way Socket Instruction Manual

[Home](#) » [Ikea](#) » IKEA HAGSTA 3 Way Socket Instruction Manual 

### Contents

- [1 IKEA HAGSTA 3 Way Socket](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 OVERVIEW](#)
- [6 Product Features](#)
- [7 Instructions for use for USB-A outlets](#)
- [8 Care instructions](#)
- [9 Technical data](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)



### IKEA HAGSTA 3 Way Socket



## Product Information

- **Specifications:**

- **Model:** HAGSTA
- **Type:** E2305-CN3W2U
- **Input:** 220-250 V, 50/60Hz
- **Output:** 10 A / 250 V / max 2500 W
- **USB-A output:**
  - **One USB-A outlet in use:** 5.0 VDC / 2.4 A / 12.0 W
  - **Two USB-A outlets in use:** 5.0 VDC / 2.4 A / 12.0 W shared between outlets
- **Manufacturer:** IKEA of Sweden AB

## Product Usage Instructions

- **Instructions for USB-A Outlets:**

- Connect the product to the wall socket. Insert the USB-A cable end into the free USB-A outlet and the other end into the device you want to charge or power. Note that the USB-A cable is not included.

- **Care Instructions:**

- To clean the product, unplug it from the power source and wipe it with a dry cloth.

## FAQs


- **Q: What should I do if the product stops working?**

- **A:** If the product stops working, first check the power source and ensure proper connection. If the issue persists, contact customer support for assistance.

- **Q: Can I use any USB-A cable with this product?**

- **A:** Yes, you can use any standard USB-A cable with this product for charging or powering your devices.

## OVERVIEW

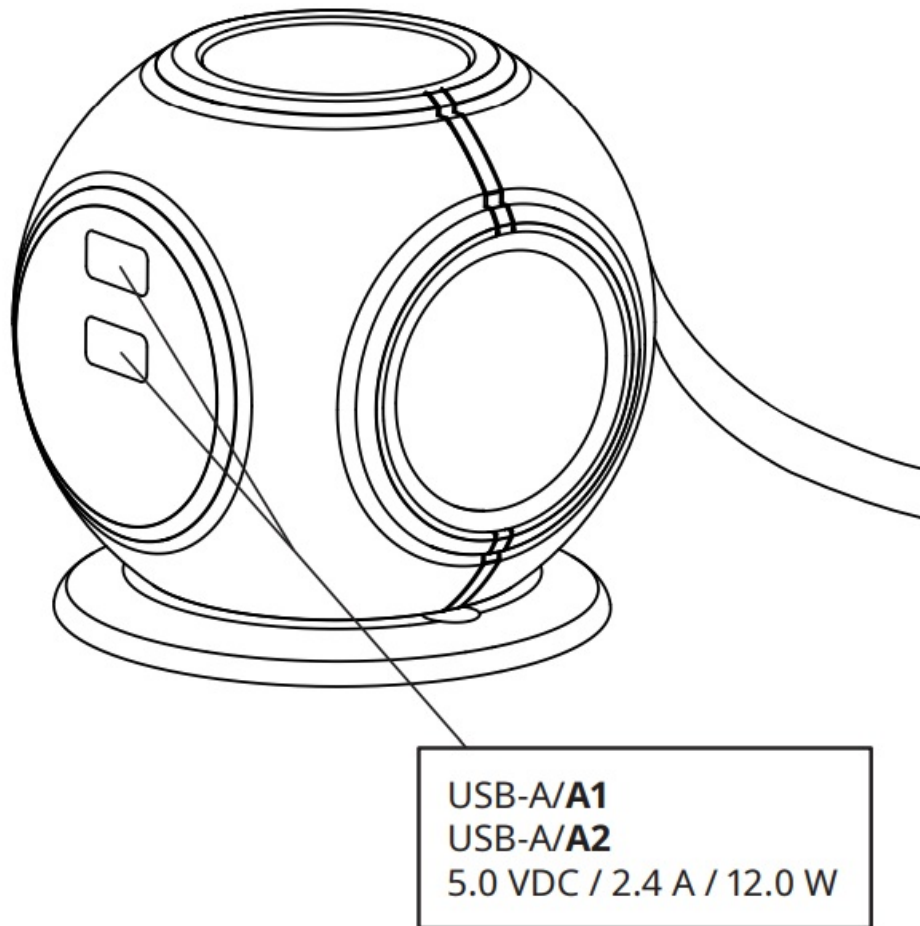

### **IMPORTANT!**

- Do not connect after each other in a sequence.
- Do not cover the product when in use.
- To disconnect the power, pull the plug.
- Use only indoors in dry areas.

### **WARNING**

- Discard the product if damaged.
- Never use a damaged or faulty USB cable, since this can damage or harm the charger or your device.
- Never submerge the charger in water or other liquids.
- Do not overload the product.
- Improper use may cause damage to the product or endanger people or property.
- Children should be supervised to ensure they do not play with the product.

### **Product Features**

- 3-way outlets power strip with 2 USB-A outlets.
- Built-in safety features protect the USB-A outlets from short-circuiting, overheating and overloading.
- The product can be fixed to any flat surface.

### **Instructions for use for USB-A outlets**

- Connect the product to the wall socket. Insert the USB-A cable end into the free.
- USB-A outlet and the other end of the device you want to charge or power.
- **NOTE!** USB-A cable is not included.

## Care instructions

- To clean the product, unplug from the power source and wipe with a dry cloth.

## Good to know

- USB cable length and quality influence charging speed and performance.
- Devices may get warm during charging. This is completely normal, and they will gradually cool down again after they are fully charged.
- Charger operating temperature: 5°C to 45°C (41°F – 113°F).
- Unplug the extension cord from the power source when not in use.

## Technical data

- **Model:** HAGSTA
- **Type:** E2305-CN3W2U
- **Input:** 220-250 V, 50/60Hz
- **Output:** 10 A / 250 V / max 2500 W

## USB-A output:

- **One USB-A outlet in use:** 5.0 VDC / 2.4 A / 12.0 W
- **Two USB-A outlets in use:** 5.0 VDC / 2.4 A / 12.0 W shared between outlets.
- **Manufacturer:** IKEA of Sweden AB
- **Address:** Box 702, SE-343 81 Älmhult, SWEDEN

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling per local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or landfills and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

## Hazardous substance

Part name	Hazardous substance					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Cord set	X	O	O	O	O	O
Electronics	X	O	O	O	O	O


This table is prepared according to provisions of SJ/T 11364.

O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

© Inter IKEA Systems B.V. 2023 AA-2410573-1

Documents / Resources

HAGSTA	<div><a href="#">IKEA HAGSTA 3 Way Socket</a> [pdf] Instruction Manual HAGSTA 3 Way Socket, HAGSTA, 3 Way Socket, Way Socket</div> 
--------	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.