



IKEA ISANDE Built in Fridge Instructions

[Home](#) » [Ikea](#) » [IKEA ISANDE Built in Fridge Instructions](#) 





ISANDE Built in Fridge
Instructions
Design and Quality
IKEA of Sweden


Contents




- [1 ISANDE Built in Fridge](#)
- [2 Product description](#)
- [3 Installation](#)
- [4 First use](#)
- [5 Display](#)
- [6 Freezing and storage of frozen food](#)
- [7 Hints and tips](#)
- [8 Troubleshooting](#)
- [9 Technical data](#)
- [10 Information for test institutes](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

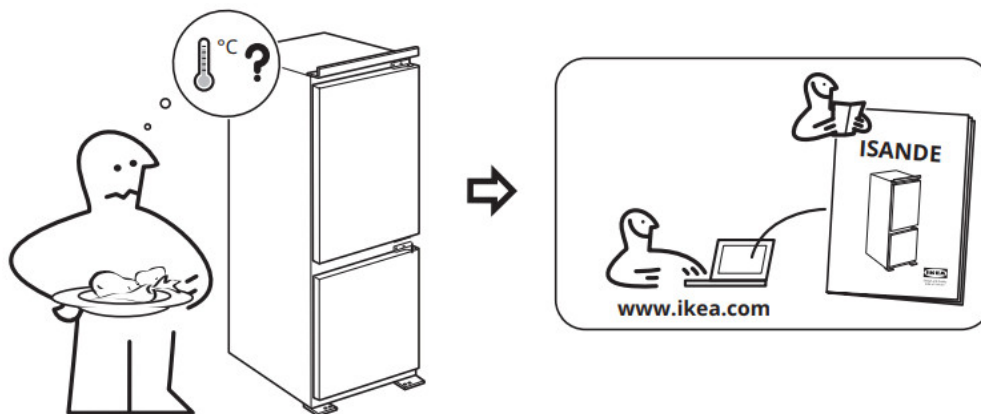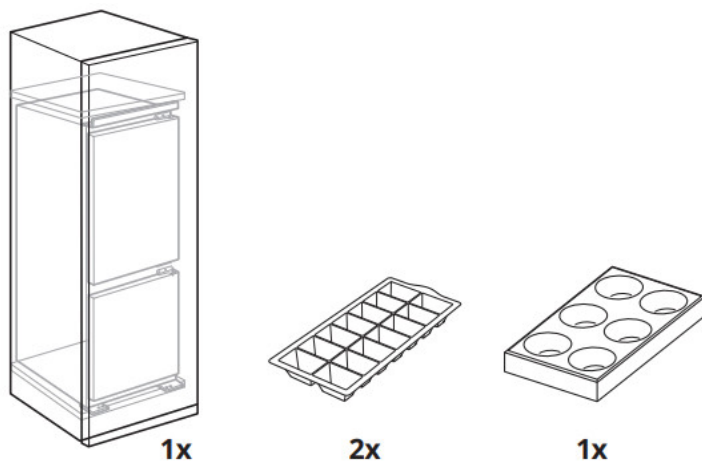ISANDE Built in Fridge

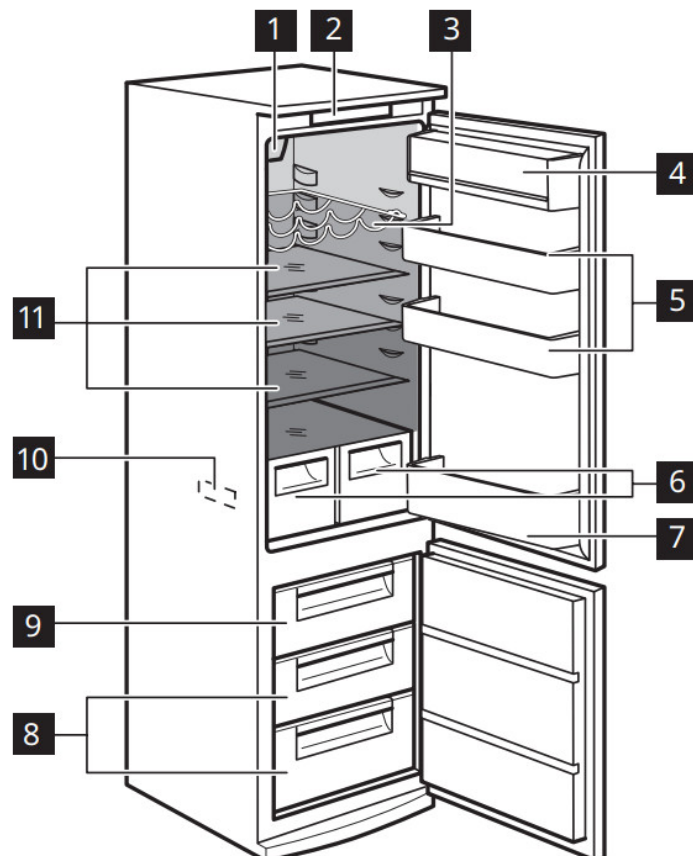

Product description



1	Fan-cooling with LED Lamp
2	Control panel
3	Bottle rack
4	Dairy compartment with lid
5	Door balconies
6	Vegetable drawers
7	Bottle balcony with holder
8	Freezer drawers
9	Freezing drawer
10	Rating plate
11	Glass shelves
	Least cold zone
	Intermediate temperature zone
	Coldest zone

Installation



Warning! Refer to Safety chapters.



Warning! Refer to installation instruction document to install your appliance.



Warning! Fix the appliance in accordance with installation instruction document to avoid a risk of instability of the appliance.

Location

This appliance should be installed in a dry, well ventilated indoor position. Do not install the appliance in the nearby of the heat source (oven, stoves, radiators, cookers or hobs) or in a place with direct sunlight.

This appliance is intended to be used at ambient temperature ranging from 10°C to 43°C.



The correct operation of the appliance can only be guaranteed within the specified temperature range.



If you have any doubts regarding where to install the appliance, please turn to the vendor, to our customer service or to the nearest Authorised Service Centre.



It must be possible to disconnect the appliance from the mains power supply. The plug must therefore be easily accessible after installation.




Inspection checklist





Please follow the inspection checklist before using your appliance. If any answer is “NO”, follow the relevant action. Remember to write down the product serial number and article number as required and attach your receipt to this page.

Product serial number (Ser. No.):

Product article number (Art. No.):
Purchasing date:



Art. No.

GROSS CAPACITY BRUTTO INHALT	XXX l	Made in Hungary © Inter IKEA Systems B.V. 1999		PQM XXXX
REFRIGERATOR NET CAPACITY KUEHLSCHRANK NUTZINHALT	XXX l	XXXXXXXXXX		
FREEZER NET CAPACITY GEFRIERSCHRANK NUTZINHALT	XX l	XXXXXX	IKEA of Sweden AB SE 343 81 Älmhult	Design and Quality IKEA of Sweden
FREEZING CAPACITY GEFRIERVERMOEGEN	X kg/24h	MODEL	XXXXXXXXXXXXXX	
RISE TIME LAGERZEIT BEI STORUNG	XX h	PNC	XXXXXXXXXX XX	
CLASS KLASSE	XX/X/XX/X	SER.N.	XXXXXXXXXX	
TYPE-TYP	XXXXXXXXXXXX	TYPE I		
230-240V 50 Hz 1.0 A				
REFRIGERANT KAEITEMITTEL	XXXXXXXXXX			
DEFROST HEATER ABTAUWIDERSTAND	XXX W			
				 


Ser. No.

To check	If the answer is NO
Make sure gasket seals all around the door when the door is closed.	Refer to the assembly instruction door alignment.
Check if there is no collision between parts/furniture while opening and closing the door.	Refer to the assembly instruction door alignment.
Install the appliance in the built-in structure.	Follow the assembly instruction for the proper installation.
Make sure that at first installation or after reversing the door the appliance stands in vertical position for at least 4 hours before it is connected to the power supply.	Wait 4 hours before connecting the appliance to the power supply.

First use


Cleaning the interior

Before using the appliance for the first time, the interior and all internal accessories should be washed with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dried thoroughly.

 **Caution!** Do not use detergents, abrasive powders, chlorine or oilbased cleaners as they will damage the finish.

 **Caution!** The accessories and parts of the appliance are not suitable for washing in a dishwasher.

Control panel

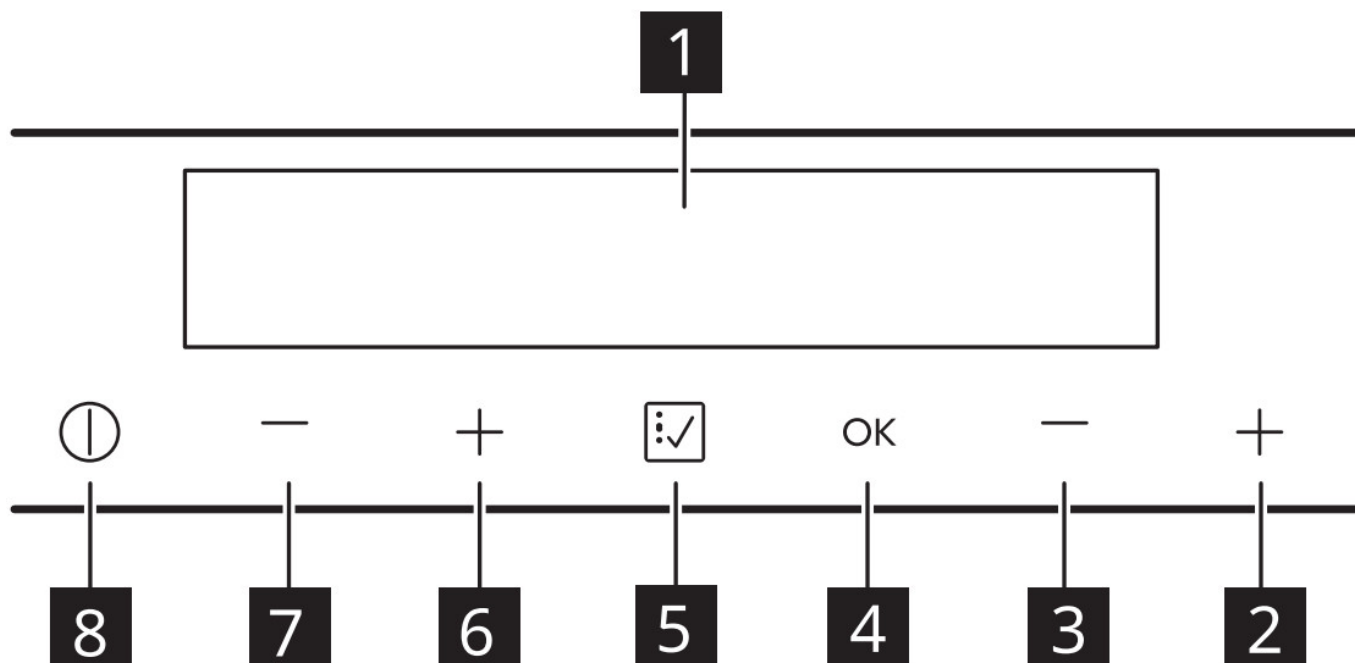

To change the default sound of the buttons, press simultaneously 5 Function button and 7 Fridge temperature colder button for a few seconds. To revert the change, repeat the procedure.

Switching on

1. Connect the mains plug to the power socket.
2. Press the 8 ON/OFF button if the display is off.

1. Display
2. Freezer temperature warmer button
3. Freezer temperature colder button
4. OK button
5. Function button
6. Fridge temperature warmer button
7. Fridge temperature colder button
8. ON/OFF button

The temperature indicators show the set default temperature.


Switching off

Press 8 ON/OFF button for 3 seconds.

The display switches off.

To disconnect the appliance from the power, disconnect the mains plug from the power socket.

Display

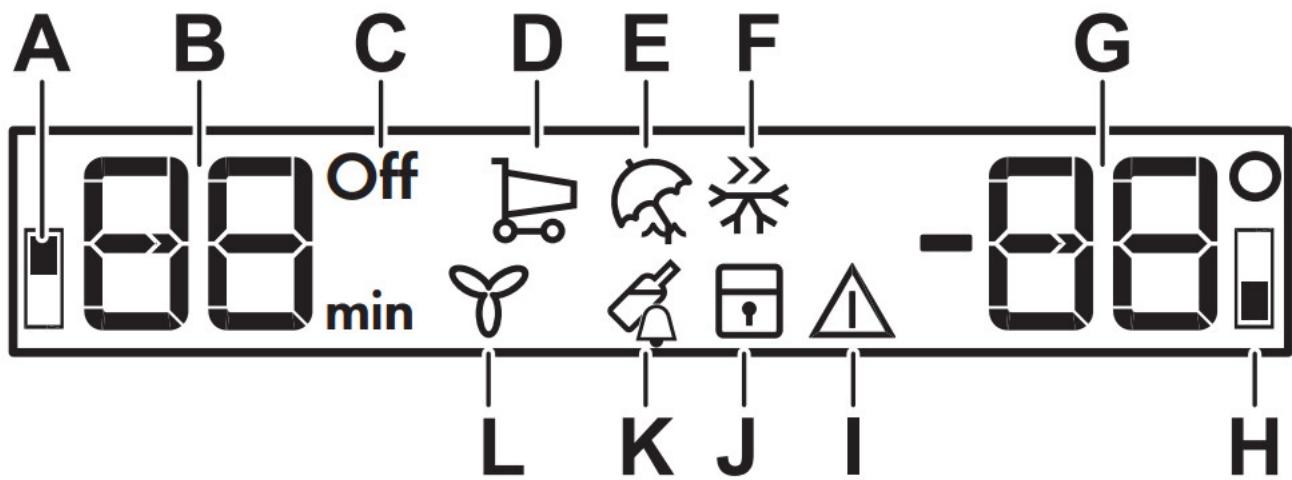

- A. Fridge compartment indicator
- B. Fridge temperature indicator and timer indicator
- C. Fridge Off indicator
- D. Shopping Function indicator
- E. Vacation Function indicator
- F. Fast Freezing Function indicator
- G. Freezer temperature indicator
- H. Freezer compartment indicator
- I. Alarm indicator
- J. Child Lock Function indicator
- K. Bottle Chill Function indicator
- L. Fan-cooling Function indicator

Switching on and off the fridge compartment

To switch on the fridge compartment press one of the fridge temperature buttons.

To switch off only the fridge compartment maintaining the freezer on:

1. Tap 5 the Function button repeatedly until the fridge compartment indicator blinks.
 The fridge Off indicator and the fridge compartment indicator blink.
 The fridge temperature indicator shows dashes.
2. Press the 4 OK button to confirm.
 The fridge Off indicator is shown and the fridge compartment is switched off.

Temperature regulation

Set the temperature by pressing the temperature regulators +/- . The temperature indicators show the set temperature.

Recommended set temperature is:

- +4°C for the fridge
- -18°C for the freezer

The set temperature will be reached within 24 hours. After a power failure the set temperature remains stored.

Shopping Function

1. Press 5 Function button until the Shopping indicator blinks.
2. Press 4 OK button to confirm. The Shopping indicator is shown. The fan activates automatically for the function duration. This function stops automatically after approximately 6 hours. You can also deactivate the function by

repeating the procedure until the Shopping indicator turns off or by pressing 6 , 7 temperature buttons and setting a different fridge temperature.

Vacation Function



1. Press 5 Function button until the Vacation indicator blinks. The fridge temperature indicator shows the set temperature.
2. Press 4 OK button to confirm. The Vacation indicator is shown. The function switches off after selecting a different fridge temperature.

Fast Freezing Function



To freeze fresh food activate the Fast Freezing Function at least 24 hours before placing the food in the appliance.

1. Press the 5 la Function button until the Fast Freezing indicator blinks.
2. Press 4 OK button to confirm. The Fast Freezing indicator is shown. The Fast Freezing Function stops automatically after 52 hours. You can also deactivate the function by repeating the procedure until the Fast Freezing indicator turns off or by pressing 2, 3 temperature buttons and setting a different freezer temperature.

Child Lock Function



1. Press 5 Function button until the Child Lock indicator blinks.
2. Press 4OK button to confirm. The Child Lock indicator is shown. To deactivate the Child Lock Function, repeat the procedure until the Child Lock indicator disappears.

Bottle Chill Function



1. Press lii Function button until the Bottle Chill indicator blinks. The Timer shows the set value (30 minutes) for a few seconds.
2. Press the EI, E temperature buttons to change the Timer set value from 1 to 90 minutes.
3. Press 4 OK button to confirm. The Bottle Chill indicator is shown. The Timer starts to flash (min). At the end of the countdown the “0 min” indicator blinks and an audible alarm sounds. At that time, remove the products that were put into the appliance to cool down, and press the 4 OK button to switch off the sound and terminate the function. To switch off the function at any time during the countdown, repeat the procedure until the Bottle Chill indicator disappears.

Fan-cooling Function

1. Press 5 Function button until the Fancooling indicator blinks.
 2. Press 4 OK button to confirm. The Fan-cooling indicator is shown. To switch off this function repeat the procedure until the Fan-cooling indicator disappears.
- The activation of the Fan-cooling Function increase the energy consumption.

Freezing and storage of frozen food

When activating an appliance for the first time or after a period out of use, before putting the products in the compartment let the appliance run at least 3 hours with the Fast Freezing function switched on.

To freeze fresh food activate the Fast Freezing function at least 24 hours before placing the food to be frozen in the freezer compartment.

Store the fresh food evenly distributed in the first compartment or drawer from the top.

The maximum amount of food that can be frozen without adding other fresh food during 24 hours is specified on the rating plate (a label located inside the appliance).



If large quantities of food are to be stored, remove all drawers and place the food on shelves.

Keep the food no closer than 15 mm from the door.



Caution! In the event of accidental defrosting, for example due to a power failure, if the power has been off for longer than the value shown on rating plate under “rising time”, the defrosted food must be consumed quickly or cooked immediately then cooled and then re-frozen.


Hints and tips

- Freezer compartment is the one marked with .
- Good temperature setting that ensures preservation of frozen food products is a temperature less than or equal to -18°C. Higher temperature setting inside the appliance may lead to shorter shelf life.
- The whole freezer compartment is suitable for storage of frozen food products.
- Fresh food compartment is the one marked (on the rating plate) with .
- In order to accelerate cooling down of the goods, it is advisable to turn on the fan. Refer to “Fan-cooling Function”. The activation of Fan-cooling allows greater homogenization of internal temperatures.


Troubleshooting

Be sure to check “Inspection checklist” before using your appliance. If you encounter an issue with your appliance, check “Troubleshooting” chapter in the full version of the User Manual available on: www.ikea.com.

Technical data

Product category	
Product Type	Refrigerator – Freezer
Installation Type	Built-in only
Product dimensions	
Height	1772 mm
Width	546 mm
Depth	549 mm
Storage volume (net)	
Fresh food compartment (Fridge)	193,51
4 Star compartment (Freezer)	62,4 l
Defrost system	
Fresh food compartment (Fridge)	auto
4 Star compartment (Freezer)	auto
Star rating	
Rising time	9,5 h
Freezing capacity	3,5 kg/12h
Annual energy consumption	216 kWh
Airborne acoustical noise emissions	35 d B(A)
Energy efficiency class	E
Voltage	230 – 240 V
Frequency	50 Hz

The technical information (including the serial number) is situated in the rating plate on the internal left side of the appliance and in the energy label.

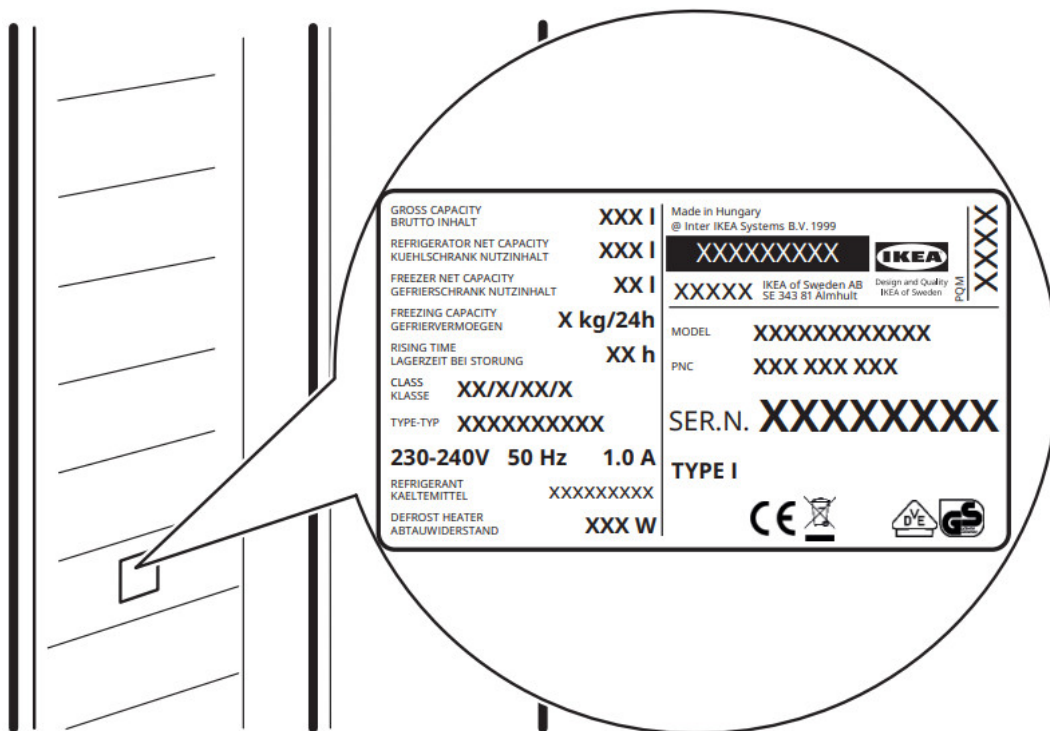


Information for test institutes

Installation and preparation of the appliance for any EcoDesign verification shall be compliant with EN 62552. Ventilation requirements, recess dimensions and minimum rear clearances shall be as stated in this User Manual in the Installation chapter. Please contact the manufacturer for any other further information, including loading plans.



To download the full version visit www.ikea.com

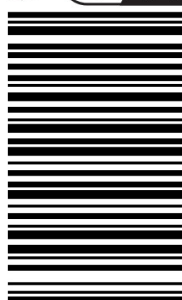


© Inter IKEA Systems B.V. 2022

21552

AA-2342570-1

222380462-A-412022

Documents / Resources

<div>ISANDE</div> <div><div></div><div></div><div></div><div></div></div> <div></div>	<div>IKEA ISANDE Built in Fridge [pdf] Instructions</div> <div>ISANDE Built in Fridge, ISANDE, Built in Fridge, Fridge</div>
--	--

References

-  [Hej! Welcome to IKEA Global](#)