



**KOPPLA 3
way Socket**



IKEA KOPPLA 3 way Socket User Manual

[Home](#) » [Ikea](#) » IKEA KOPPLA 3 way Socket User Manual 

Contents

- [1 IKEA KOPPLA 3 way Socket](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Good to know](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



IKEA KOPPLA 3 way Socket



Product Information

Specifications

- **Product Name:** KOPPLA
- **Languages:** English, Português, Bahasa Indonesia, Bahasa Malaysia
- **Model Number:** AA-2583191-1

Product Usage Instructions

Cleaning Instructions

Ensure the product is unplugged before cleaning. Wipe the product with a dry cloth to keep it clean and free from dust.

Usage Guidelines

This product is designed for use by children under adult supervision. Please ensure children are supervised while using the product.

Power Supply

The product is powered via a USB connection. Ensure the power source meets the required specifications before connecting the product.

Maintenance

Regularly check the product for any signs of damage or wear. Do not use the product if it appears to be damaged in any way.

Storage

When not in use, store the product in a cool, dry place away from direct sunlight and moisture to prolong its lifespan.

Frequently Asked Questions

- **Q:** Can this product be used by adults?
 - **A:** The product is designed for use by children under adult supervision. It is recommended for children's use.
- **Q:** What power source does this product require?
 - **A:** The product is powered via a USB connection. Ensure the power source meets the required specifications.
- **Q:** How should I clean the product?
 - **A:** Wipe the product with a dry cloth to keep it clean and free from dust. Ensure it is unplugged before cleaning.

WARNING

- Discard the product if damaged.
- Improper use may cause damage to the product or endanger people or property.
- For indoor and household use only.
- Never submerge in water or other liquids.
- Do not leave the product in direct sunlight or near a heat source as it may overheat.
- Do not overload the product.
- Do not connect after each other in a sequence.
- Do not cover the product when in use.
- Only operate when uncoiled due to increased temperature load.
- For adult use only. This is not a toy and is not intended for use by children.

Good to know



- To disconnect the power, pull the plug.
- Operating temperature: 0° C to 40° C (32° F to 104° F).
- Unplug the product from the power source when not in use.
- To clean the product, unplug from power source and wipe with a dry cloth.

© Inter IKEA Systems B.V. 2024

MODEL

AA-2583191

Documents / Resources

	IKEA KOPPLA 3 way Socket [pdf] User Manual AA-2583191-1, KOPPLA 3 way Socket, KOPPLA, 3 way Socket, Socket
	IKEA KOPPLA 3 way Socket [pdf] User Manual AA-2583051-1, KOPPLA 3 way Socket, KOPPLA, 3 way Socket, Socket

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.