

IKEA MITTZON Plug In Module



IKEA MITTZON Plug In Module Instructions

[Home](#) » [Ikea](#) » **IKEA MITTZON Plug In Module Instructions** 

Contents

- [1 IKEA MITTZON Plug-In Module](#)
- [2 Product Usage Instructions](#)
- [3 Frequently Asked Questions](#)
- [4 Product Information](#)
- [5 Installation instructions](#)
- [6 Safety regulations](#)
- [7 Maintenance and repair instructions](#)
- [8 Handset operation instructions](#)
- [9 Troubleshooting MITTZON](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

IKEA-logo

IKEA MITTZON Plug-In Module



Product Usage Instructions

Assembly:

1. Refer to the assembly manual included in the package.
2. Ensure all parts are included and undamaged before assembly.
3. Follow step-by-step instructions to assemble the product correctly.

Maintenance:

1. Retighten screws periodically to maintain maximum quality.
2. Wipe clean with a cloth dampened in a mild cleaner to remove dirt and grime.
3. Wipe dry with a clean cloth to prevent water damage.

Usage:

1. Place the product on a flat, stable surface.
2. Follow any specific usage instructions provided in the manual.
3. Avoid overloading the product beyond its weight capacity.

Frequently Asked Questions

- **Q: How often should I retighten the screws?**

- A: It is recommended to retighten the screws periodically, especially after initial assembly and then every few months to maintain stability.

• **Q: Can I use strong cleaners to wipe the product?**

- A: It is advisable to use a mild cleaner to wipe the product to avoid damaging the surface or material.

Product Information

An electro-mechanical height-adjustable work surface with a control interface to adjust the height up and down. This product can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved by a person responsible for their safety. Children shall not play with the product. Cleaning and user maintenance shall not be carried out by children without supervision.

Translated from the original instructions.

Advice and instructions for MITTZON sit/stand desk.

| | |
|---|---------------------------------|
| Model: | MITTZON |
| Input: | AC 110V or 230V, 50/60Hz |
| Sound level: | Lower than 50 dB(A) |
| Standby power consumption: | <0.2W |
| Height setting interval: | 62~126 cm, 24.4~49.6 in |
| Maximum load: | 80 kg/176 lbs |
| Temperature interval at usage: | +5 up to +40 °C/41 up to 104°F |
| Temperature interval at storage: | -10 up to +50 °C/14 up to 122°F |
| Humidity: | 20% up to 80% at +30 °C/86°F |
| Power supply unit: | DC max 30V, 350W |

This product shall only be used together with the included power supply unit.

Every person who is responsible for this table at installation or employment of the table in daily use or in service and repair work should carefully read these instructions. Keep these instructions close to your sit/stand table.

Installation instructions

The table is assembled according to separate assembly instructions. Connect one side of the 90-degree connection cable (50mm long) to the M1 port on the control box, then connect the other side to the cable from the leg. Connect the cable from the other leg to the M2 port on the control box. Connect the hand controller to the HS port and the power supply to the AC port on the control box. The control box should be placed in the tray created by the frame, and the electrical cable should be placed in the felt tray on the back. Position the electrical cable so it does not get damaged. Please check the assembly instructions. Connect the electrical cable to a wall socket (or a socket placed in the felt tray).

Note! The electrical cable must have full mobility.

The table is now ready for use. The motors will stop automatically when the table reaches its lowest or highest position respectively.

Usage of the table

The table shall only be used as a working table with the possibility to continuously adjust the working height between sitting and standing positions. The table shall only be used indoors and in dry premises (office environment or similar).

The table must not be overloaded – the maximum load is 80 kg/176 lbs. The motors may be run continuously for a maximum of 2 minutes. Afterwards, the motors must rest for approx. 18 minutes. before they can be used again.

Follow these instructions when adjusting table height:

1. Make sure all cables are connected firmly in place.
2. Make sure no objects are in the way of the table so that the height can adjust freely.
3. Press the up/down buttons on the hand controller to adjust the desk height.

Safety regulations

When the table moves up/down, keep the necessary safety distance to avoid the risk of entrapment between the moving table top and fixed objects in the surrounding area. When the table moves up/down, the user shall keep watch so that nobody is injured or no object is damaged. The table top must not be blocked by a fixed object which may risk that the table overturns. Always remove any office chair before the table moves up/down. The table tripod must not be altered or reconstructed in any way. In the service and repair work of the table, the electrical cable must always be disconnected from the wall socket (the connected socket). Alterations to the control box and hand controller are absolutely forbidden! Alterations to the legs are absolutely forbidden! The table must not be used as a hoisting device for persons.

Maintenance and repair instructions

After approx. 1 week of use, check that the screws are properly tightened. If the table cannot be lowered or raised, check the connections between the desk power plug and the wall socket (the socket) and ensure that all cables are connected firmly in place. If any part of the electrical height-adjustable table needs to be replaced, the electrical cable must be first disconnected from the wall socket (the socket). After finishing the replacement, then connect the electrical cable to the wall socket (the socket) and then finish the reset process according to the reset instructions. After resetting successfully without any problems, the table is ready for use. If the table still does not work, please contact your nearest IKEA store or customer service.

Product Servicing

Do not attempt to repair this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.







- Manufacturer: IKEA of Sweden AB
- Address: Box 702, SE-343 81 Älmhult, SWEDEN
- Telephone no.: +46(0)476-648500



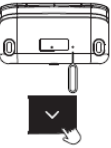
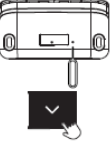
SAVE THESE INSTRUCTIONS



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or landfills and minimise any potential negative impact on human health and the environment. For more information, please contact your IKEA store. EU Declaration of Conformity is included in the packaging as a separate document.

Handset operation instructions

| Function and status | Operating Buttons | Operation method | Button press duration time | Light colour | Light display effect | Note |
|-----------------------|--|---------------------|----------------------------|--------------|----------------------|---|
| Up | Up button  | Long press | / | No light | / | / |
| Down | Down button  | Long press | / | No light | / | / |
| Locking | Up button+Down button  | Long press together | 3 sec | Red light | Blinks | 1. After the locking setting is complete, the red light blinks twice and then turns off. 2. No light is displayed when the unit is locked. 3. In the locked position, press any button and the red light will blink 1 time to indicate the locked status. |
| Unlocking | Up button+Down button  | Long press together | 3 sec | Green light | Blinks | 1. After the unlocking setting is complete, the green light blinks twice and then turns off. 2. No light is displayed during unlocking. |
| Set memory position 1 | Memory 1 button  | Long press | 3 sec | White light | Blinks | 1. After the setting is complete, the white light blinks twice and then turns off. 2. No light is displayed during the setting. |
| Set memory position 2 | Memory 2 button  | Long press | 3 sec | White light | Blinks | 1. After the setting is complete, the white light blinks twice and then turns off. 2. No light is displayed during the setting. |

| | | | | | | |
|----------------------------|--|---|-----------|--------------|-----------|---|
| Memory 1 position | Memory 1 button  | / | One click | No light | / | Please ensure there are no obstacles under or above the table before Memory 1 position is set. |
| Memory 2 position | Memory 2 button  | One click | / | No light | / | Please ensure there are no obstacles under or above the table before Memory 2 position is set. |
| Reset | Pin hole +Down button  | 1 click the pin-hole first, then long press down button | / | Orange light | Steady on | First, poke the pinhole at the bottom of the hand controller with a pin to enter the reset status (at this time, the orange light will be steady on), and then long press the down button until the table goes down to the lowest height, and then raise it up 7 mm automatically to complete the reset. After the reset is successful, the orange light will turn off. |
| Abnormal error status | Pin hole +Down button  | Reset operation | / | Orange light | Blinks | In the abnormal status, the orange light continues to blink. Pressing any button does not work. You need to check if all the cables are properly connected, and then perform the reset. |
| Overheat protection status | / | Rest for approx. 18 minutes before continuing operation of unit | / | Blue light | Steady on | This is not an abnormal error status, but due to the motor working continuously, overheat protection may activate. After approx. 18 minutes of rest, the blue light will turn off and normal operation can be resumed. |


Collision detection

- The system is designed to avoid possible damages to equipment due to collision. When the desk detects a sudden change in resistance, it will stop the movement and move in the reverse direction by approximately 30 mm-50 mm (depending on the movement speed, collision force and the load during collision)

Troubleshooting MITTSON

| Symptom | Check | Try |
|--|--|--|
| The table does not move. Orange light blinks. | 1. Make sure that all cables are undamaged and connected firmly in place. | 1. Reconnect all the cables. |
| | 2. Unplug the desk from the wall socket for approximately one minute and reconnect. | 2. Follow the instructions to perform a reset. If the problem remains, contact IKEA customer service. |
| Only one leg is moving. Orange light blinks. | 1. Make sure that all cables are undamaged and connected firmly in place. | 1. Reconnect all the cables. |
| | 2. Unplug the desk from the wall socket for approximately one minute and reconnect. | 2. Follow the instructions to perform a reset. If the problem remains, contact IKEA customer service. |
| The table stops and reverses during operation. | 1. Make sure that the table is not overloaded. (Max load 80 kg/176 lbs) | Remove the heavy things from the desk. |
| | 2. Make sure that nothing is blocking the table. | Remove the obstacle. Follow the instructions to perform a reset. |
| | 3. Check that the electrical cable has full movement when the desk is in its highest position and has reasonable slack | If the electrical cable is trapped, release it. Make sure it has enough length when the desk is in its highest position. |
| The table has stopped working. Burning smell from short-circuit/ motor/power supply/control units. | Unplug the desk from the wall. | Identify the burned parts, then contact IKEA customer service. |
| Abnormal noise from table leg. | Check that the sound is normal or abnormal when you move the desktop up and down. | Follow the instructions to perform a reset. If the problem remains, identify the defective parts and contact IKEA customer service. |
| One segment of the 3-segment leg does not move. | / | Follow the instructions to perform a reset. If the problem remains, identify the defective leg and contact IKEA customer service. |
| Overheat protection status. | / | This is not an error status, but due to the motor working continuously, overheating protection may activate. After approx. 18 minutes of rest, the blue light will turn off and normal operation can be resumed. |

Documents / Resources

| | |
|---|---|
| <p>English</p> <p>For maximum quality, use maximum quality paper and ink. Use the correct paper. Reproduce with a good quality printer or copier. Reproduce with a clean sheet.</p> <p> IKEA</p> <p>© 2019 IKEA. IKEA is a registered trademark of IKEA of Sweden.</p> | <p>IKEA MITTZON Plug In Module [pdf] Instructions</p> <p>MITTZON Plug In Module, MITTZON, Plug In Module, Module</p> |
|---|---|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.