



IKEA SOMRIG Shortcut Button Instruction Manual

[Home](#) » [Ikea](#) » **IKEA SOMRIG Shortcut Button Instruction Manual** 

Contents

- [1 IKEA SOMRIG Shortcut Button](#)
- [2 Product Usage Instructions](#)
- [3 Get started](#)
- [4 Safety information](#)
- [5 Technical data](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



IKEA SOMRIG Shortcut Button



Specifications

- **Model:** SOMRIG shortcut button
- **Type:** E2213
- **Input:** 1.2 V, 1x AAA/HR03 LADDA battery
- **Range:** 10 m in open air
- For indoor use only
- **Operating frequency:** 2405-2480 MHz
- **Output power:** 3 dBm (EIRP)
- **IP-class:** IP44
- **Manufacturer:** IKEA of Sweden AB

Product Usage Instructions

Get started

1. Download the IKEA Home smart app from the App Store (for Apple devices) or Google Play store (for Android devices).
2. Follow the instructions on the screen to add the product to your smart home system.

Get to know your product

This product is designed to control scenes in a smart home system. There are two buttons (Button 1 and Button 2) on the shortcut button, as well as a pairing button and an LED light.

- **Button 1**

Use Button 1 to control your scenes.

- **Button 2**

Use Button 2 to control your scenes.

- **Pairing button**

The pairing button is used to connect the shortcut button to the DIRIGERA hub and IKEA Home smart app.

- **LED light**

The LED light indicates the status of the shortcut button.

Controlling your scenes

- Each button (Button 1 and Button 2) has three press types: single, double, and long-press. You can connect multiple scenes to one button.
- You can connect up to 6 scenes to one shortcut button (3 scenes per button).

Connecting your scenes

1. Open the IKEA Home smart app.
2. Follow the instructions in the app to create a scene.
3. Assign a button press-type (single, double, or long-press) to the scene.
4. The scene will start when you perform the assigned button press on the shortcut button.

Battery care

- When the battery gets low, a red LED light will blink when you press any button.
- DIRIGERA hub and IKEA Home smart app users can view the battery status in the app and receive notifications when the battery starts to run out.

Note: Never use abrasive cleaners or chemical solvents as this can damage the product.

Recommended battery type: 1 x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh, Ni-MH) (not included)

Changing the battery

1. Open the battery compartment using a flat object.
2. Replace the old battery with a new AAA/HR03 battery.

Safety information

Warning: Risk of explosion if battery is replaced by an incorrect battery type. Dispose of used batteries according to the WEEE instructions at the end of this document.

Care instructions

To clean the shortcut button, wipe it with a soft cloth moistened with a little mild detergent. Use another soft, dry cloth to wipe it dry.

WEEE Instructions

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household

waste. Please hand in the item for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or landfills and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

Frequently Asked Questions

- **Q: Does this product work without the hub and app?**

A: No, this product requires the DIRIGERA hub and IKEA Home smart app to function.

SOMRIG shortcut button works with DIRIGERA hub and IKEA Home smart app to control smart products. Use the app to tell your smart products what to do and when to do it, then save it as a scene to be controlled by this shortcut button.

Note: this product does not function without the hub and app.

Get started


- Download the IKEA Home smart app and follow the instructions on screen to add the product to your smart home system.



- IKEA Home smart app For Apple devices, download the app using the App Store. For Android devices, download the app using Google Play store.
- **Note:** If you have a TRÅDFRI gateway please use IKEA Home smart 1 app.

Get to know your product

This product is designed to control scenes in a smart home system. Use Button 1 or Button 2 to control your scenes.

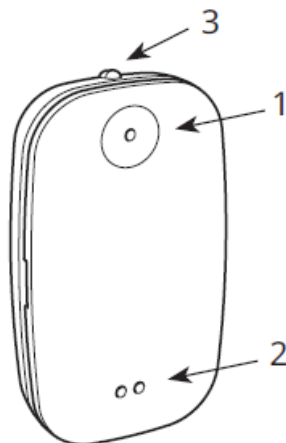



Button 1



Button 2



Pairing button

3. LED light

- **Controlling your scenes**

Each button has a single, double and long-press so you can connect multiple scenes to one button. Connect up to 6 scenes to one shortcut button (3 scenes per button).

- **Connecting your scenes**

Use the IKEA Home smart app to connect scenes to your shortcut button. Follow the instructions in the app to create a scene and assign a button press-type to it. The scene will start when you single, double or long-press the assigned button.

Battery care

When the battery gets low, a red LED light will blink when you press any button. DIRIGERA hub and IKEA Home smart app users can view battery status in the app and receive notifications when the battery starts to run out.

Changing the battery

Open the battery compartment using a flat object and replace the battery with a new AAA/HR03.

Safety information

Warning!

Risk of explosion if battery is replaced by an incorrect battery type. Dispose of used batteries according to the WEEE instructions at the end of this document.

Important

- This product is for indoor use only and can be used in temperatures ranging from 0°C to 40°C (32°F to 104°F).
- Do not leave this product in direct sunlight or near a heat source as it may overheat.
- Different building material and product location can affect wireless connectivity range.

Care instructions

To clean the remote control, wipe with a soft cloth moistened with a little mild detergent. Use another soft, dry cloth to wipe dry.

Note!

Never use abrasive cleaners or chemical solvents as this can damage the product.

Recommended battery type:

1 x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh, Ni-MH) (not included)

Technical data


- **Model:** SOMRIG shortcut button Type: E2213
- **Input:** 1.2 V, 1x AAA/HR03 LADDA battery
- **Range:** 10 m in open air.
- For indoor use only
- **Operating** frequency: 2405- 2480 MHz
- **Output** power: 3 dBm (EIRP)
- **IP-class:** IP44
- **Manufacturer:** IKEA of Sweden AB
- **Address:** Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

© Inter IKEA Systems B.V. 2023
AA-2411208-1

Documents / Resources

<div>SOMRIG</div> <div></div>	<div>IKEA SOMRIG Shortcut Button [pdf] Instruction Manual</div> <div>SOMRIG Shortcut Button, SOMRIG, Shortcut Button, Button</div>
--	--

References

- ↘ [sortere.no](#)
- [User Manual](#)