



IKEA STYRBAR Buttons Switched Instructions

[Home](#) » [Ikea](#) » **IKEA STYRBAR Buttons Switched Instructions** 

Contents

- [1 IKEA STYRBAR Buttons Switched](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Remote control functions](#)
- [5 Care instructions](#)
- [6 TECHNICAL DATA](#)
- [7 FCC](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



IKEA STYRBAR Buttons Switched



Specifications

- **Type:** E2001
- **Name:** STYRBAR Remote control stainless
- **Type:** E2002
- **Name:** STYRBAR Remote control white
- **Input:** 3V, 2x AAA/HR03 LADDA batteries
- **Range:** 10 m in open air. For indoor use only
- **Operating frequency:** 2405-2480 MHz
- **Output power:** 12.6 dBm (EIRP)
- **IP-class:** IP44
- **Manufacturer:** IKEA of Sweden AB



Product Usage Instructions




Adding Devices to Your Remote Control

1. Make sure that your light source is installed and the main power switch is turned on.
2. Hold the remote control close to the light source you want to add (no more than 5 cm away).
3. Press and hold the pairing button for at least 10 seconds. A red light will shine steadily on the remote control.
4. Your light source will begin to dim and flash one time to indicate that it has been successfully paired.

Note: Up to 10 light sources can be paired with 1 remote control. Make sure to pair them one at a time. If the light sources are close to each other, disconnect those that have already been paired from the main power switch.

Remote control functions

-  Short press to turn it on. To dim up, press and hold the button.
-  Short press to turn it off. To dim down, press and hold the button.

-   Change the white spectrum or colours.
-  **Pairing:** Add IKEA Smart Lighting products to your system. See the instructions below.

Adding devices to your remote control

When the remote control is sold together with a light source (in the same package), they are already paired. If the remote control is purchased separately, you must manually pair it to your light source.

To add light sources, just repeat the steps below.

1. Make sure that your light source is installed and the main power switch is turned on.
2. Hold the remote control close to the light source you want to add (no more than 5 cm away).
3. Press and hold the pairing button for at least 10 seconds. A red light will shine steadily on the remote control.
Your light source will begin to dim and flash one time to indicate that it has been successfully paired.

Up to 10 light sources can be paired with 1 remote control. Make sure to pair them one at a time. If the light sources are close to each other, disconnect those that have already been paired from the main power switch.

Factory reset your devices For light sources:

Toggle the main switch 6 times.

For remote control:

Press the pairing button 4 times within 5 seconds.

Synchronizing

If your light source becomes unsynchronized, a long press on the left (<) or right (>) buttons will return the light source to its default setting (2700K).

Changing the battery

When the remote control is used regularly and as intended, the batteries will last for approximately 2 years. When it's time to replace the battery, a red LED indicator will flash when you press any button on the remote control. Open the battery lid and replace the battery with two new AAA/HR03 batteries.

Caution: Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Important

- The remote control is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C (32°F to 104°F).
- Do not leave the remote control in direct sunlight or near any heat source, as it may overheat.
- The range between the remote control and the receiver is measured in the open air.
- Different building materials and placement of the units can affect the wireless connectivity range.

Care instructions

To clean the remote control, wipe with a soft cloth moistened with a little mild detergent. Use another soft, dry

cloth to wipe dry.

Note: Never use abrasive cleaners or chemical solvents as this can damage the product.

Recommended battery types:

- 2 x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh, Ni-MH) (Not included)
- Do not mix batteries of different capacities, types, or date stamps.

TECHNICAL DATA

- **Type:** E2001
- **Name:** STYRBAR Remote control stainless
- **Type:** E2002
- **Name:** STYRBAR Remote control white
- **Input:** 3V, 2x AAA/HR03 LADDA batteries
- **Range:** 10 m in open air. For indoor use only
- **Operating frequency:** 2405-2480 MHz Output power: 12.6 dBm (EIRP)
- **IP-class:** IP44

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

FCC

This device complies with Part 15 of the FCC Rules/Innovation Science and Economic Development Canada's license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation of the device.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used following the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE INFORMATION

- This product is approved as a portable handheld device (not body-worn)
- This product includes a static magnet, generating a magnetic field that might interfere with the normal operation of pacemakers, defibrillators, or other medical devices.

Maintain a safe distance of separation between your medical device and this device. Stop using this device and consult your physician or medical device manufacturer if you believe that it is interfering with your medical device.

License rights and limitations

NO RIGHTS OR LICENSES, EXPRESS NO RIGHTS OR LICENSES, EXPRESS OR IMPLIED, ARE GRANTED TO USE THIRD-PARTY DEVICES IN COMBINATION WITH THESE PRODUCTS IN A WIRELESS MESH NETWORK, OR TO USE THIRD-PARTY SERVICES TO ACCESS, MONITOR OR CONTROL THESE PRODUCTS IN A WIRELESS MESH NETWORK VIA THE INTERNET OR ANOTHER EXTERNAL WIDE AREA NETWORK.

For use under U.S. Patent Nos.:

- US 6,914,893
- US 7,697,492
- US 8,964,708


The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or landfills and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

MX

Importador/Distribuidor: IKEA Supply Mexico, S.A. de C.V.,

© Inter IKEA Systems B.V. 2020

Documents / Resources

	IKEA STYRBAR Buttons Switched [pdf] Instructions STYRBAR Buttons Switched, STYRBAR, Buttons Switched, Switched
---	---

References

- [User Manual](#)

