

IKEA STYRBAR Zigbee Remote Control



IKEA STYRBAR Zigbee Remote Control Instruction Manual

[Home](#) » [Ikea](#) » **IKEA STYRBAR Zigbee Remote Control Instruction Manual** 

Contents

- [1 IKEA STYRBAR Zigbee Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



IKEA STYRBAR Zigbee Remote Control



Specifications

- Type: E2001
- Name: STYRBAR Remote control stainless
- Type: E2002, E2313
- Name: STYRBAR Remote control white
- Input: 3V, 2x AAA/HR03 LADDA batteries
- Range: 10 m in open air
- Operating frequency: 2405-2480 MHz
- Output power: 12.6 dBm (EIRP)
- IP-class: IP44

Product Usage Instructions

Getting Started

Download the IKEA Home smart app and follow the on-screen instructions to add the product to your IKEA Home smart system.

Remote Control Functions

- Short press to turn it on. To dim up, press and hold the button.
- Short press to turn it off. To dim down, press and hold the button.
- Change the white spectrum or colors.

Pairing Instructions

To add light sources to the remote control:

- Ensure the light source is installed and the main power switch is on.

- Hold the remote control close to the light source (<5 cm away).
- Press and hold the pairing button for at least 10 seconds until a red light shines on the remote control.
- The light source will dim and flash once to indicate successful pairing.

Factory Reset and Synchronization

For factory reset

- Light sources: Toggle the main switch 6 times.
- Remote control: Press the pairing button 4 times within 5 seconds.

If unsynchronized, long press the left buttons to return the light source to default settings (2700K).

Battery Replacement

When the battery needs replacement:

1. A red LED indicator will flash when any button is pressed.
2. Open the battery lid and replace it with two new AAA/HR03 batteries.

Care Instructions

To clean the remote control, wipe with a soft cloth moistened with mild detergent. Use a dry cloth to wipe dry. Avoid abrasive cleaners or chemical solvents.

For Apple devices, download the app using the App Store. For Android devices, download the app using the Google Play store.





Note:

If you have a TRÅDFRI gateway please use IKEA Home Smart 1 app.

Getting started with DIRIGERA hub

Download the IKEA Home smart app and follow the instructions on the screen to add the product to your IKEA Home smart system.


Remote control functions

-  Short press to turn it on. To dim up, press and hold the button.
-  Short press to turn it off. To dim down, press and hold the button
-  Change the white spectrum or colors.
-  **Pairing:** Add IKEA Smart Lighting products to your system. See the instructions below.

Adding devices to your remote control

When the remote control is sold together with a light source (in the same package), they are already paired. If the remote control is purchased separately, you must manually pair it to your light source.

To add light sources, just repeat the steps below.

1. Make sure that your light source is installed and the main power switch is turned on.
2. Hold the remote control close to the light source you want to add (no more than 5 cm away).
3. Press and hold the pairing button  for at least 10 seconds. A red light will shine steadily on the remote control. Your light source will begin to dim and flash one time to indicate that it has been successfully paired.

Up to 10 light sources can be paired with 1 remote control. Make sure to pair them one at a time. If the light sources are close to each other, disconnect those that have already been paired from the main power switch.

Factory reset your devices For light sources

Toggle the main switch 6 times.

For remote control

Press the pairing button 4 times within 5 seconds.

Synchronizing

If your light source becomes unsynchronized, a long press on the left (<) or right (>) buttons will return the light source to its default setting (2700K).

Changing the battery

- When the remote control is used regularly and as intended, the batteries will last for approximately 2 years.
- When it's time to replace the battery, a red LED indicator will flash when you press any button on the remote control. Open the battery lid and replace the battery with two new AAA/HR03 batteries.

Caution

Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Important

- The remote control is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C.
- Do not leave the remote control in direct sunlight or near any heat source, as it may overheat.
- The range between the remote control and the receiver is measured in open air.
- Different building materials and placement of the units can affect the wireless connectivity range.

Care instructions

To clean the remote control, wipe with a soft cloth moistened with a little mild detergent. Use another soft, dry cloth to wipe dry.

Note!

Never use abrasive cleaners or chemical solvents as this can damage the product.

Recommended battery types

- 2 x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh, Ni-MH) (Not included)
- Do not mix batteries of different capacities, types, or date stamps.

TECHNICAL DATA

- **Type:** E2001
- **Name:** STYRBAR Remote control stainless
- **Type:** E2002, E2313
- **Name:** STYRBAR Remote control white
- **Input:** 3V, 2x AAA/HR03 LADDA batteries
- **Range:** 10 m in open air.
- **For indoor use only Operating frequency:** 2405-2480 MHz
- **Output power:** 12.6 dBm (EIRP)
- **IP-class:** IP44

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

Declaration of Conformity

Hereby, IKEA of Sweden AB declares that the radio equipment type E2001/E2002/E2313 complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity can be found at <http://www.ikea.com>

- Choose the country you are in
- Search your product in the search field
- Go to Assembly Instructions and Manuals (downloads) Here will you find a pdf file of the full doc.

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling by local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or landfills and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

FAQ


Q: How long do the batteries last?

A: When used regularly and as intended, the batteries last for approximately 2 years.

Q: How many light sources can be paired with one remote control?

A: Up to 10 light sources can be paired with one remote control. Pair them one at a time.

Documents / Resources

	IKEA STYRBAR Zigbee Remote Control [pdf] Instruction Manual STYRBAR Zigbee Remote Control, STYRBAR, Zigbee Remote Control, Remote Control, Contr ol
---	---

References

- [Hej! Welcome to IKEA Global](#)
- [Hej! Welcome to IKEA Global](#)
- [User Manual](#)

