

IKEA Styrbar Zigbee Remote



# IKEA Styrbar Zigbee Remote Instruction Manual

[Home](#) » [Ikea](#) » **IKEA Styrbar Zigbee Remote Instruction Manual** 

## Contents

- [1 IKEA Styrbar Zigbee Remote](#)
- [2 Getting started with DIRIGERA hub](#)
- [3 Adding devices to your remote control](#)
- [4 Factory reset your devices](#)
- [5 TECHNICAL DATA](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**IKEA Styrbar Zigbee Remote**



For Apple devices, download the app using the App Store. For Android devices, download the app using the Google Play store.

**Note:** If you have a TRÅDFRI gateway please use IKEA Home Smart 1 app.

## Getting started with DIRIGERA hub

Download the IKEA Home smart app and follow the instructions on the screen to add the dimmer/power switch to your IKEA Home smart system.

## Remote control functions

- Short press to turn it on. To dim up, press and hold the button.
- Short press to turn it off. To dim down, press and hold the button.
- Change the white spectrum or colours.
- Pairing: Add IKEA Smart Lighting products to your system. See the instructions below.

## Adding devices to your remote control

When the remote control is sold together with a light source (in the same package), they are already paired. If the remote control is purchased separately, you must manually pair it to your light source. To add light sources, just repeat the steps below.

1. Make sure that your light source is installed and the main power switch is turned on.
2. Hold the remote control close to the light source you want to add (no more than 5 cm away).
3. Press and hold the pairing button for at least 10 seconds. A red light will shine steadily on the remote control.  
Your light source will begin to dim and flash one time to indicate that it has been successfully paired.
4. Up to 10 light sources can be paired with 1 remote control.
5. Make sure to pair them one at a time. If the light sources are close to each other, disconnect those that have already been paired from the main power switch.

## Factory reset your devices

**For light sources**

Toggle the main switch 6 times.

**For remote control**

Press the pairing button 4 times within 5 seconds.

**Synchronizing**

If your light source becomes unsynchronized, a long-press on the left (<) or right (>) buttons will return the light source to its default setting (2700K).

**Changing the battery**

When the remote control is used regularly and as intended, the batteries will last for approximately 2 years. When it's time to replace the battery, a red LED indicator will flash when you press any button on the remote control. Open the battery lid and replace the battery with two new AAA/HR03 batteries.

**Caution!**

Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

**Important!**

- The remote control is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C.
- Do not leave the remote control in direct sunlight or near any heat source, as it may overheat.
- The range between the remote control and the receiver is measured in open air.
- Different building materials and placement of the units can affect the wireless connectivity range.

**Care instructions**

To clean the remote control, wipe with a soft cloth moistened with a little mild detergent. Use another soft, dry cloth to wipe dry.

**Note!**

Never use abrasive cleaners or chemical solvents as these can damage the product.

**Recommended battery types**

- 2 x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh,
- Ni-MH) (Not included)
- Do not mix batteries of different capacities, types or date stamps.

**TECHNICAL DATA**

- Type: E2001
- Name: STYRBAR Remote control stainless
- Type: E2002
- Name: STYRBAR Remote control white
- Input: 3V, 2x AAA/HR03 LADDA batteries
- Range: 10 m in open air.
- For indoor use only


- Operating frequency: 2405-2480 MHz
- IP-class: IP44

Manufacturer: IKEA of Sweden AB

Address:

Box 702, SE-343 81 Älmhult, SWEDEN The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling per local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

## Documents / Resources

	<a href="#">IKEA Styrbar Zigbee Remote</a> [pdf] Instruction Manual Styrbar Zigbee Remote, Styrbar, Zigbee Remote, Remote
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.