




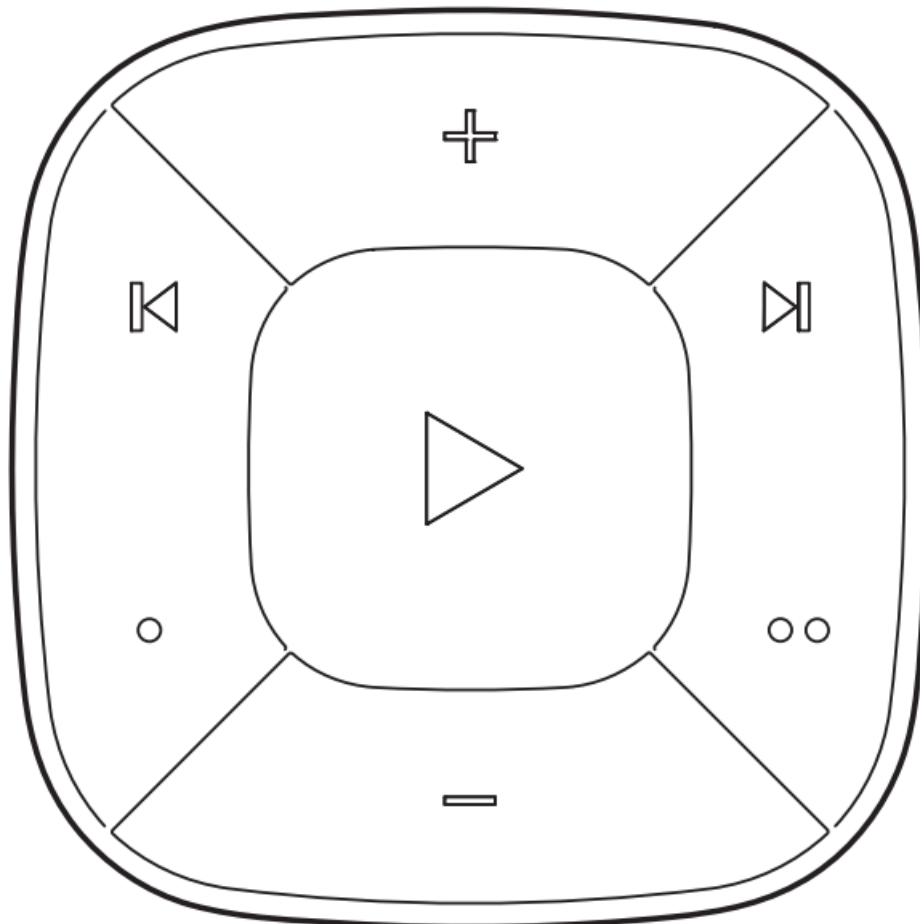 
IKEA SYMFONISK Gen 2 Sound Remote Instruction Manual

[Home](#) » [Ikea](#) » IKEA SYMFONISK Gen 2 Sound Remote Instruction Manual 



Design and Quality
IKEA of Sweden

 
**SYMFONISK Gen 2 Sound Remote
Instruction Manual**



Contents


- [1 SYMFONISK Gen 2 Sound Remote](#)
- [2 Changing the batteries](#)
- [3 Technical data](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

SYMFONISK Gen 2 Sound Remote

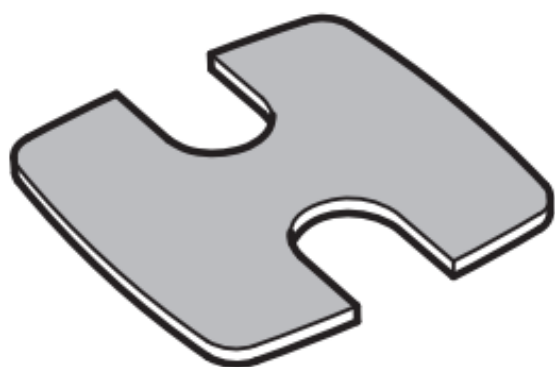

10071830

 1x

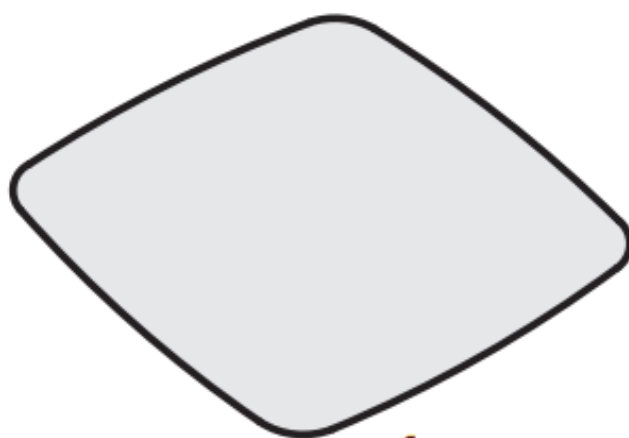

1x



 
10071829

1x



Works with
IKEA Home smart

SYMFONISK

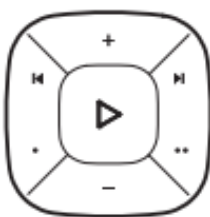

+

DIRIGERA



+

SYMFONISK



Download on the
App Store

 


GET IT ON
Google Play




Works with
IKEA Home smart



1






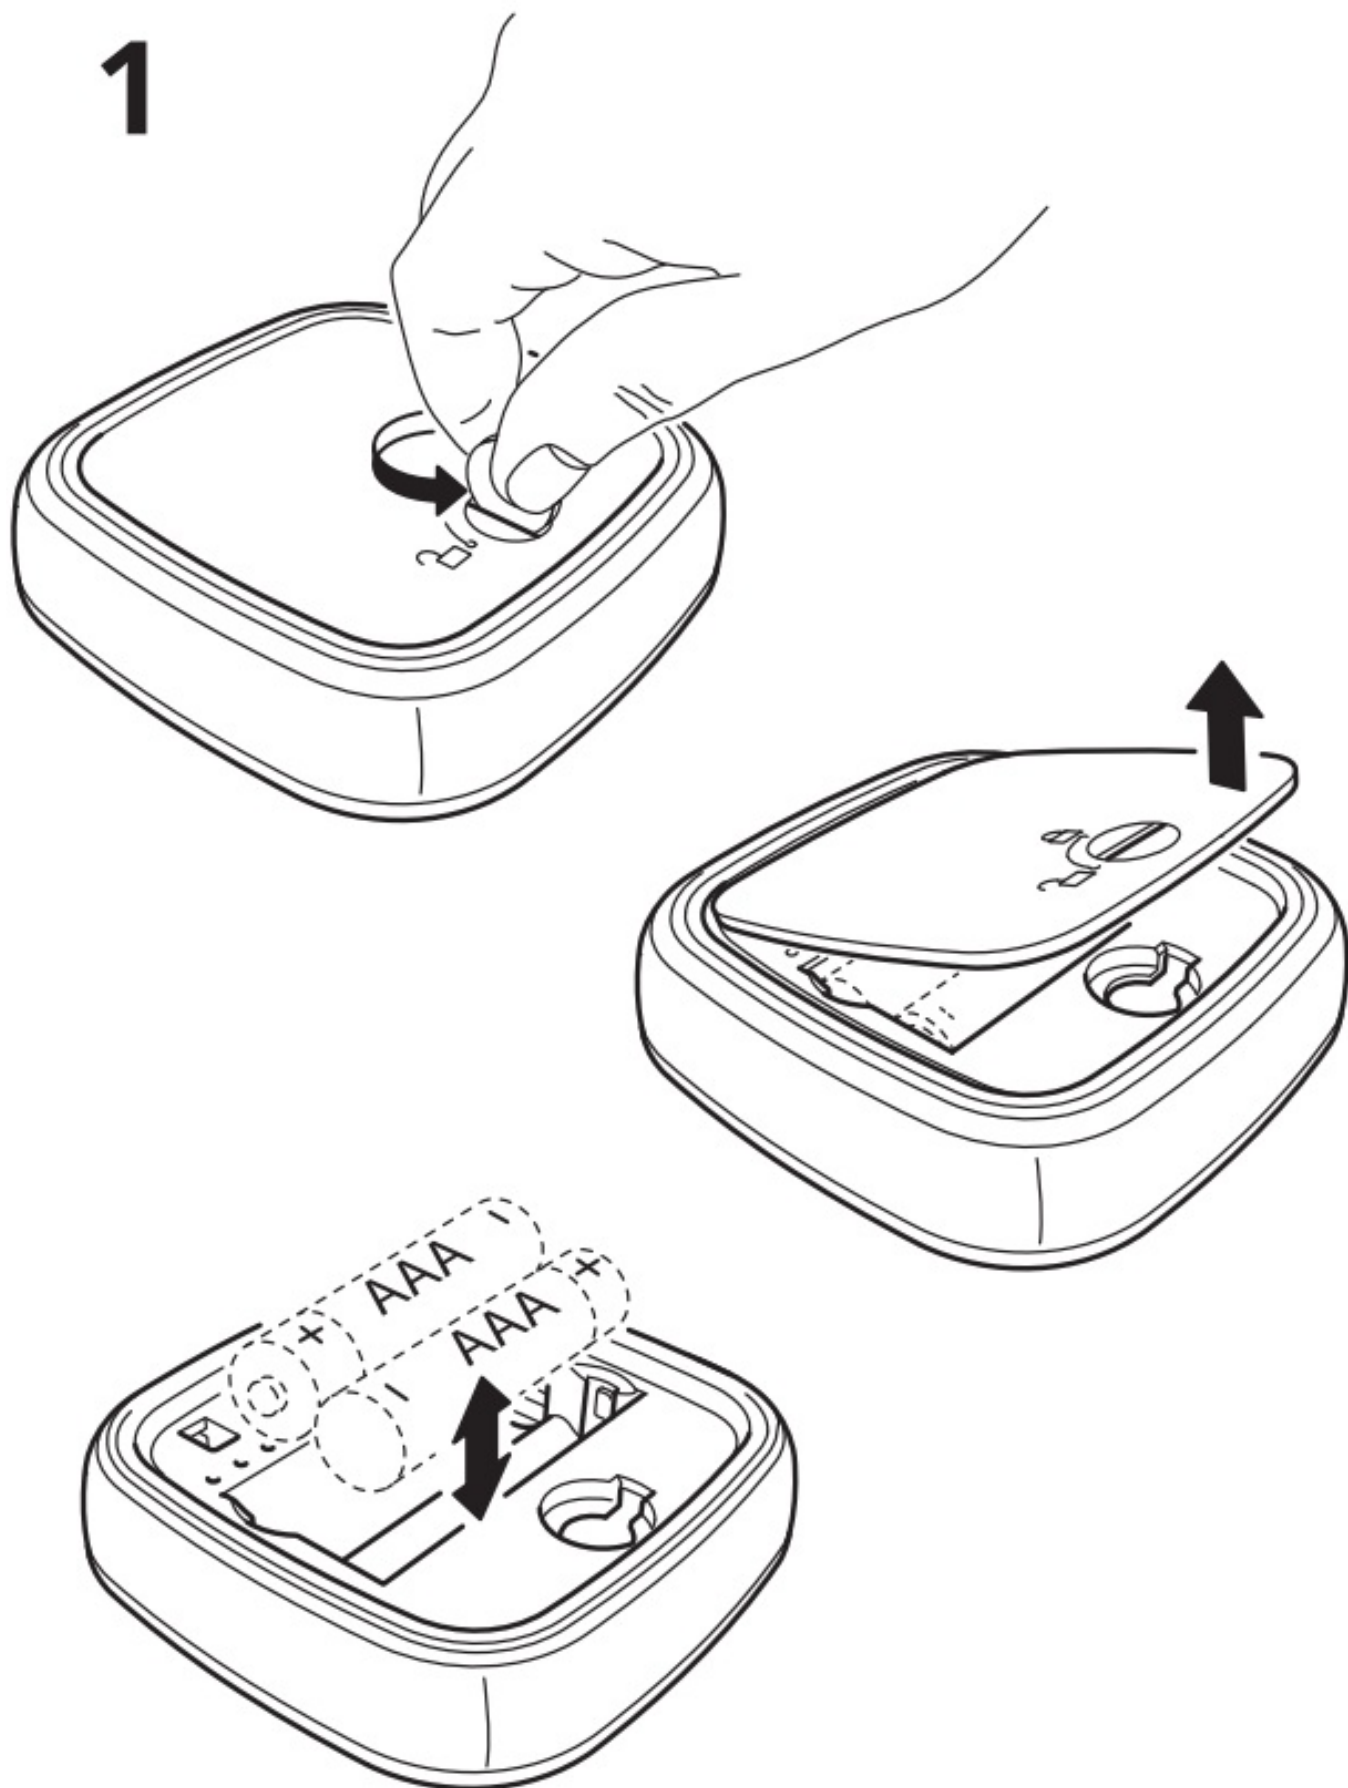


2


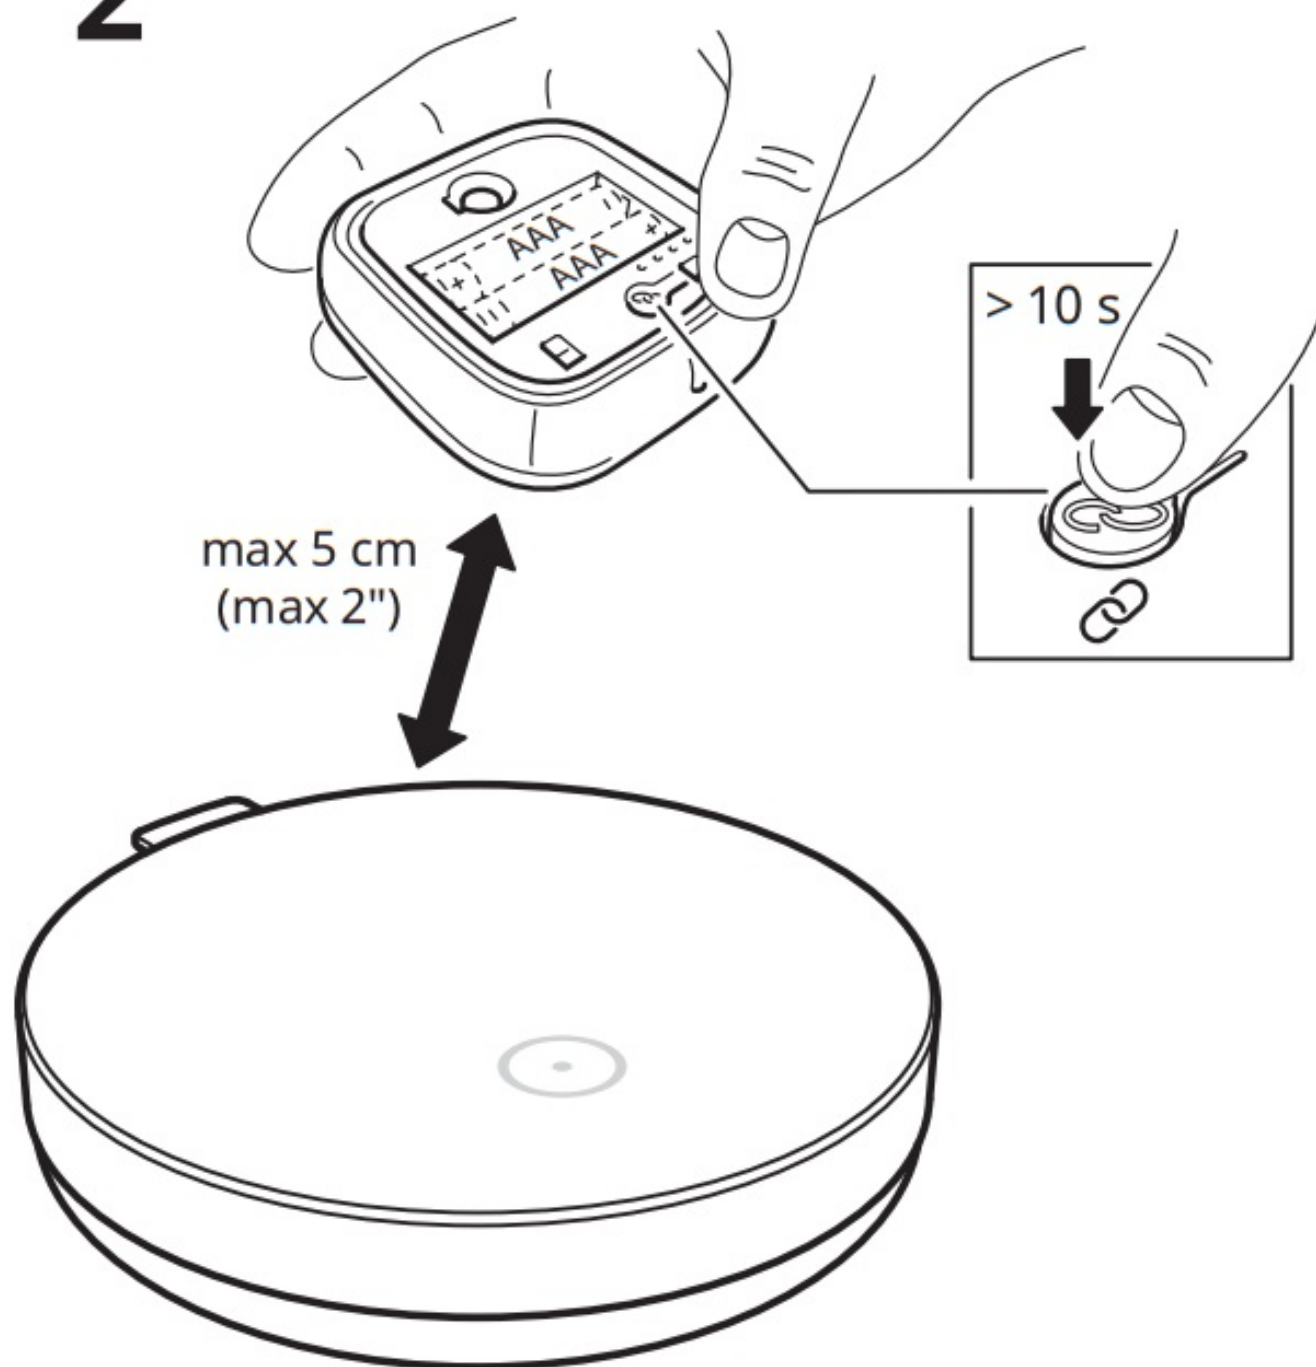 


3

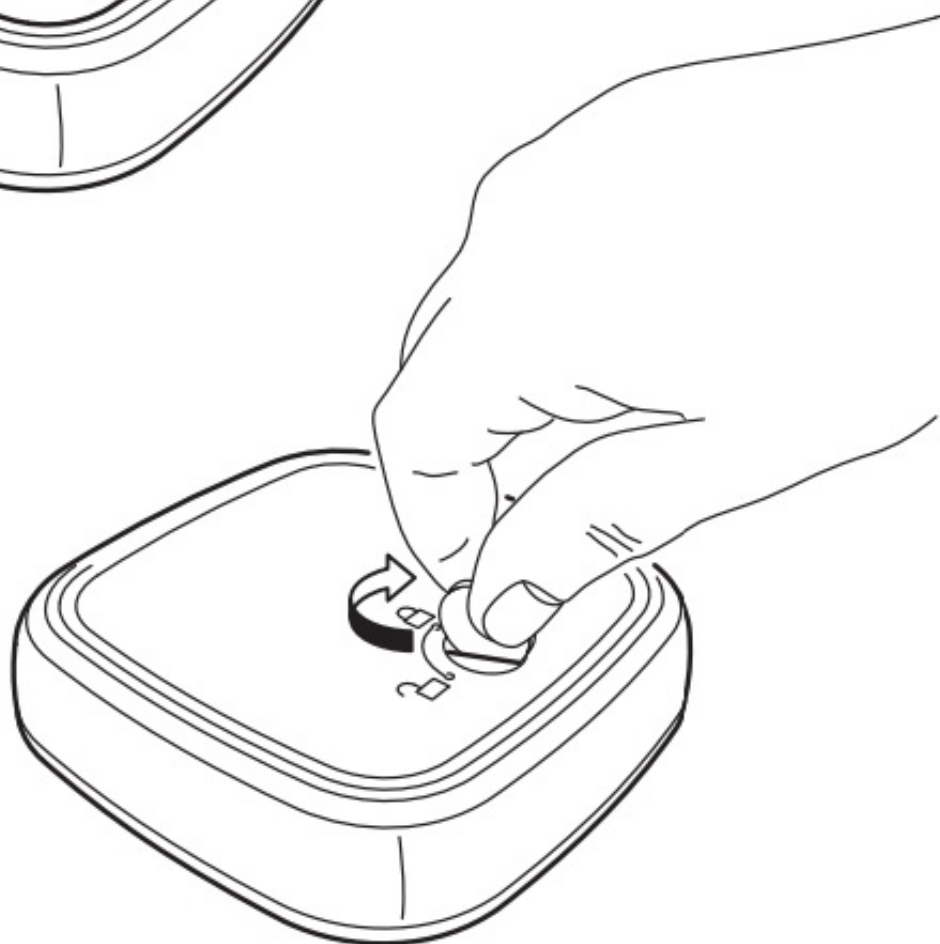 
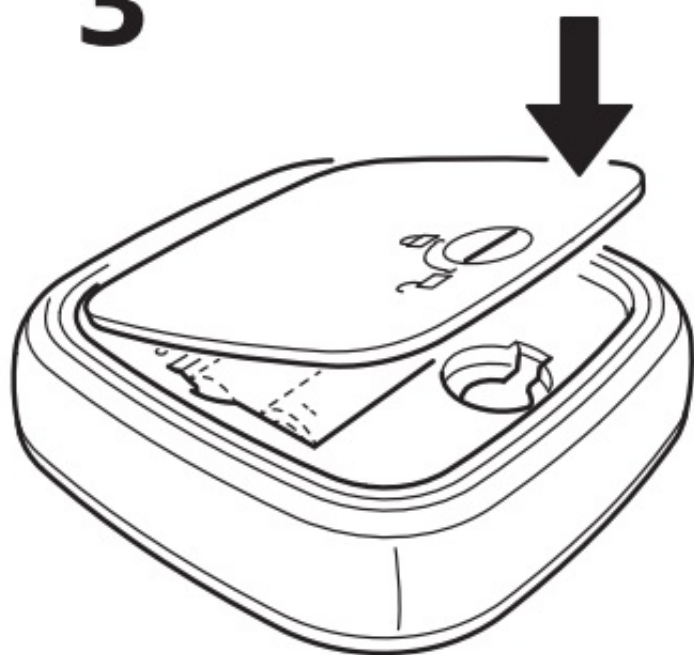 


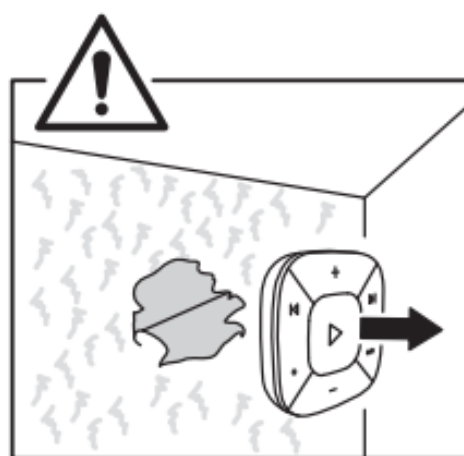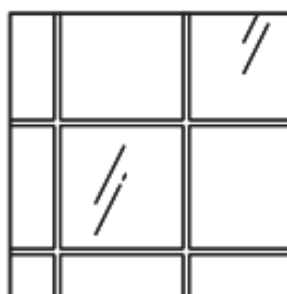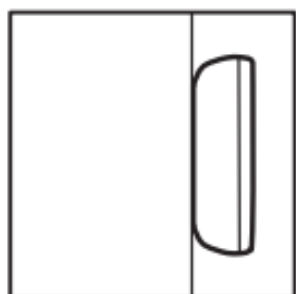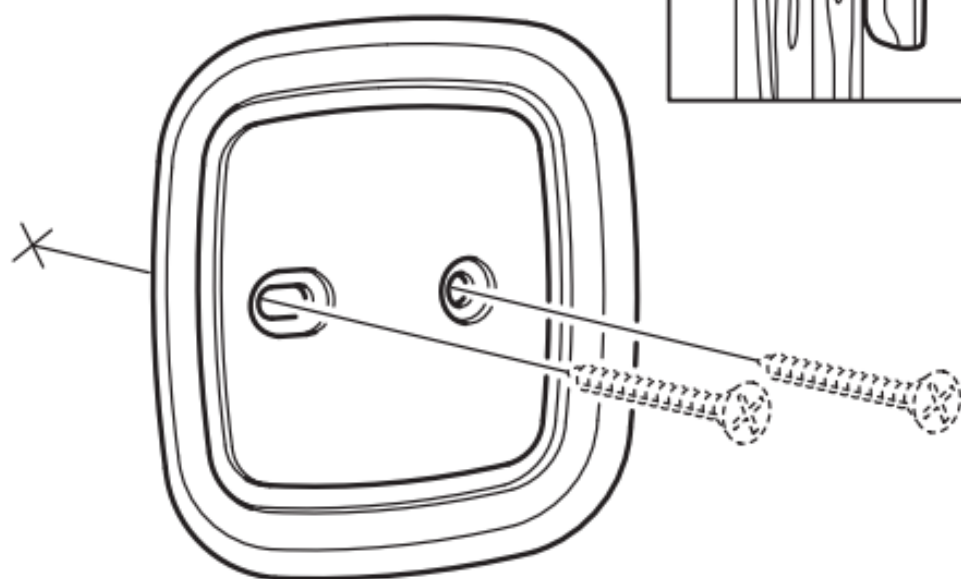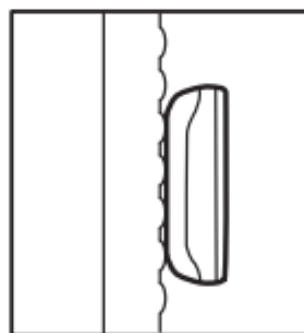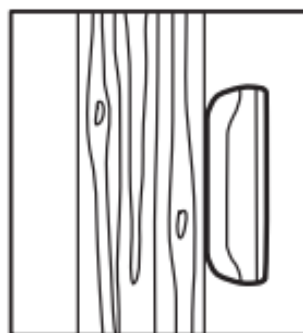      


4

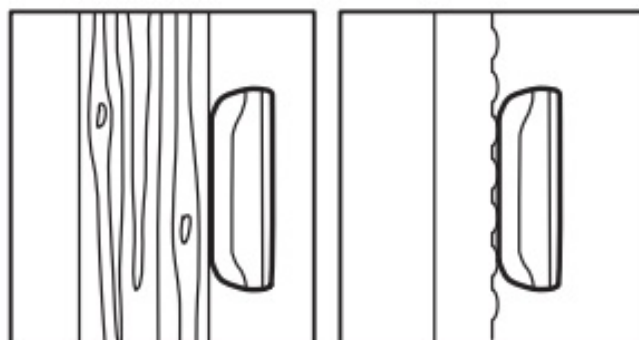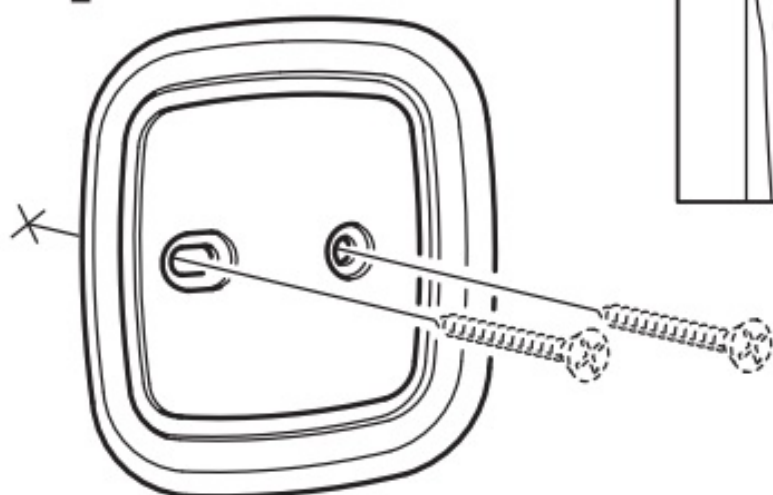  


5

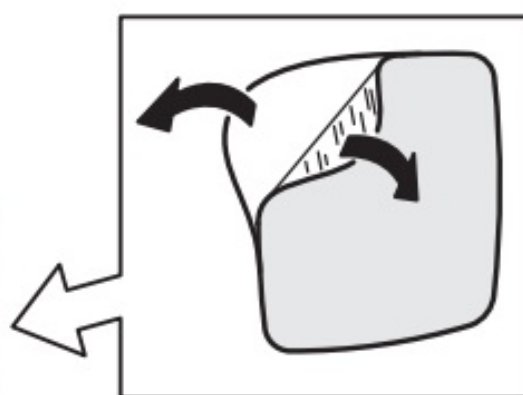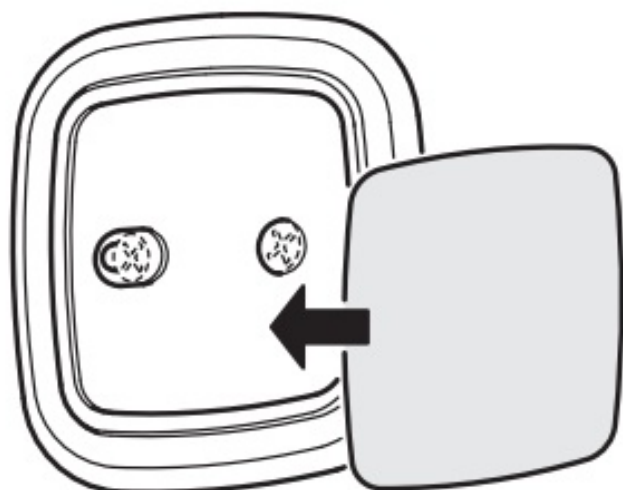  


6

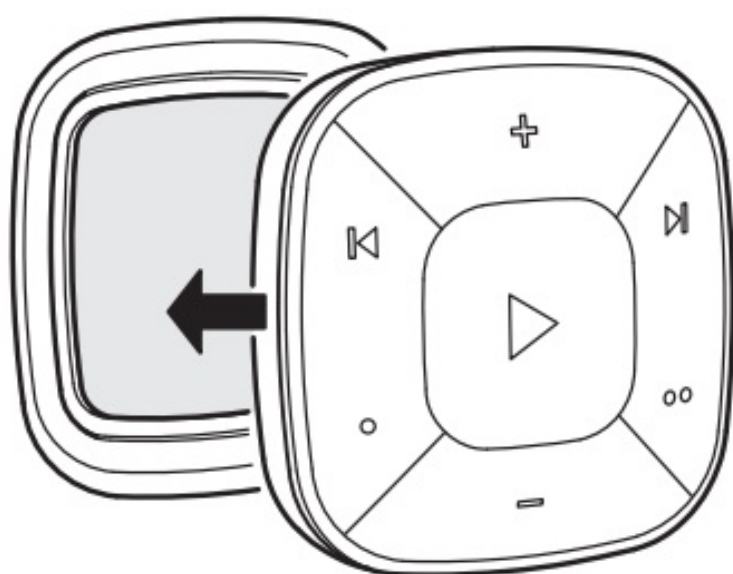 

4

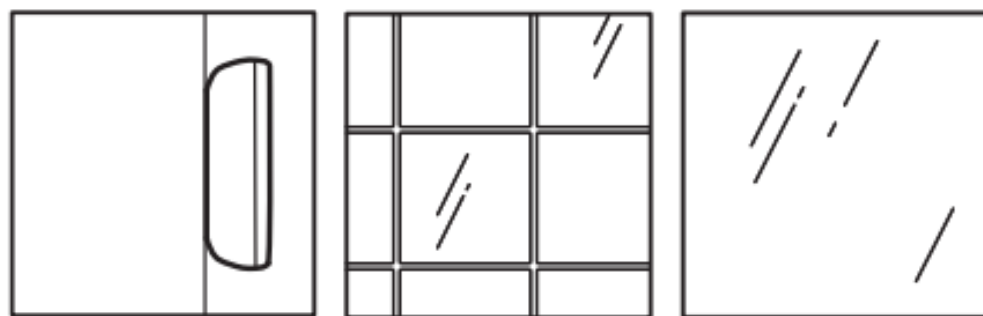 


5

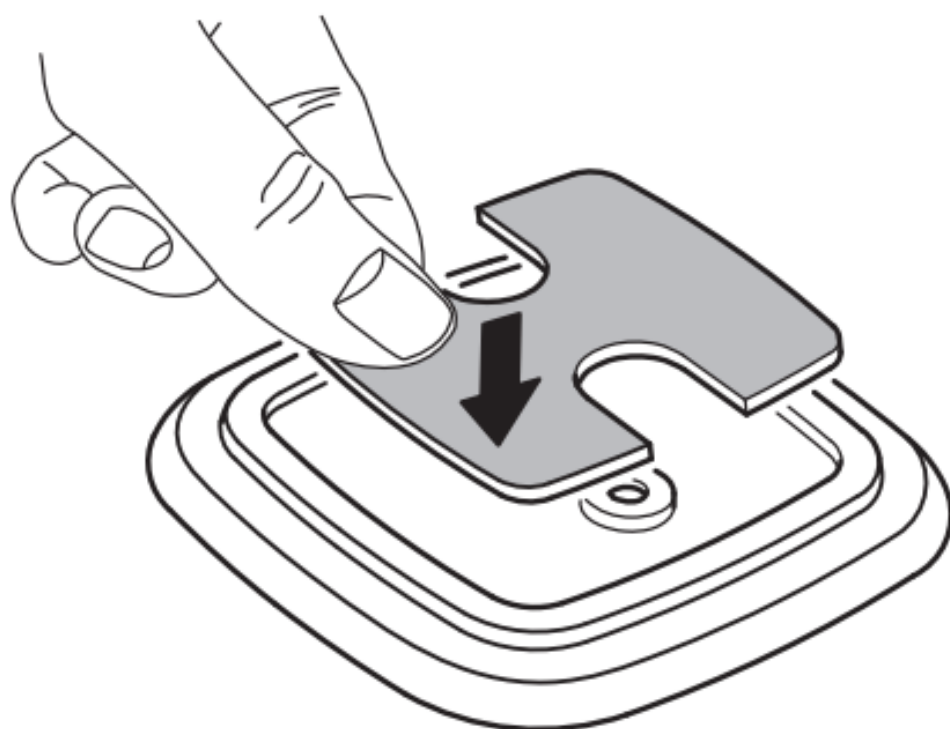 


6



 
7



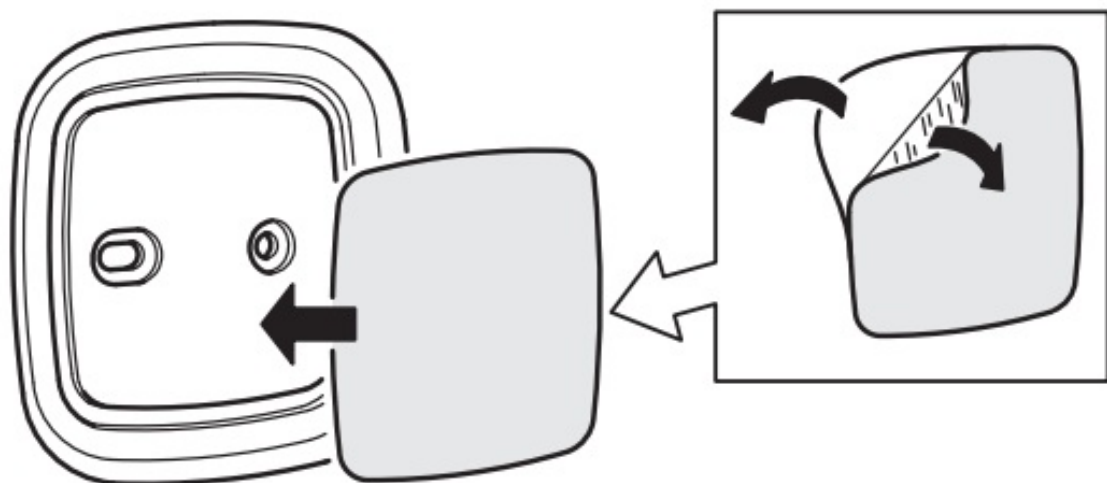





8

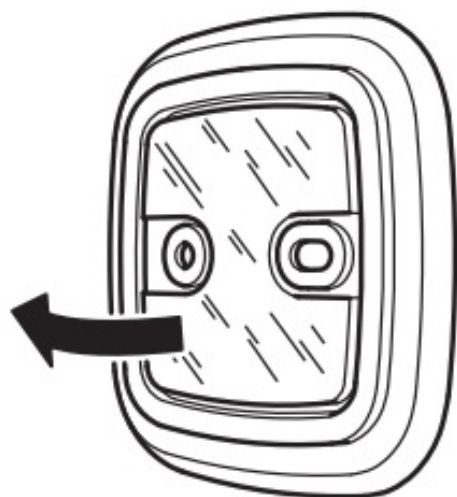 



9

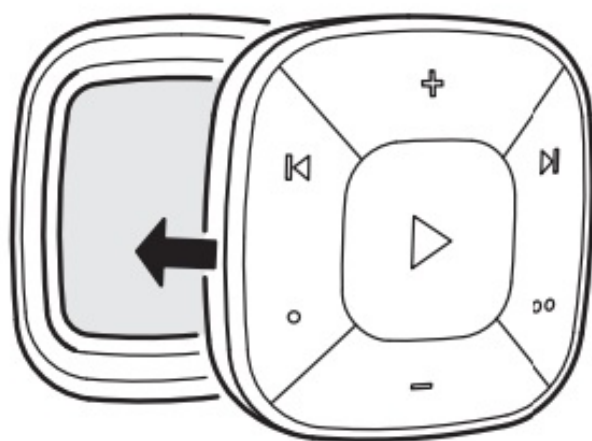 

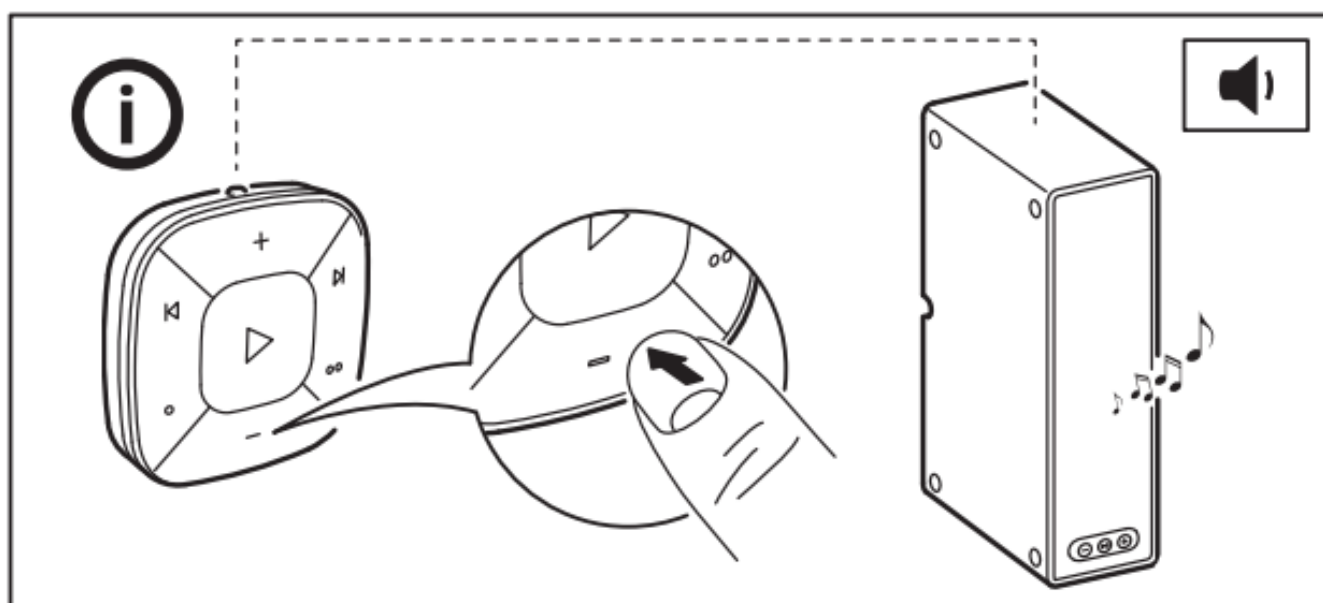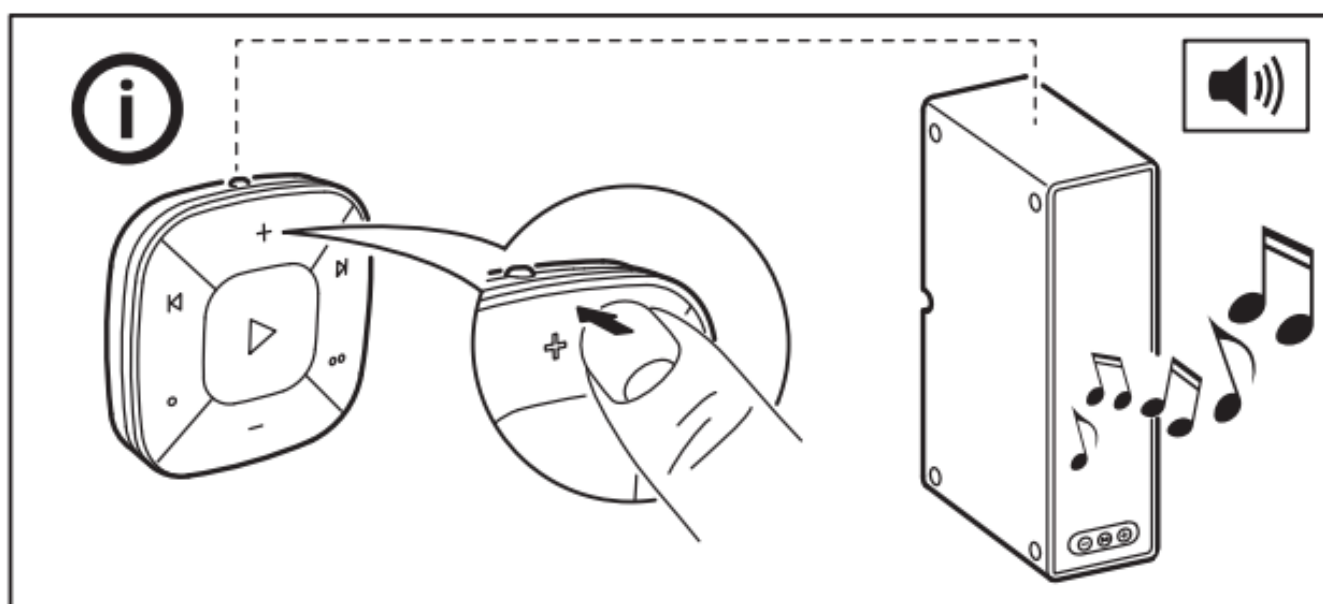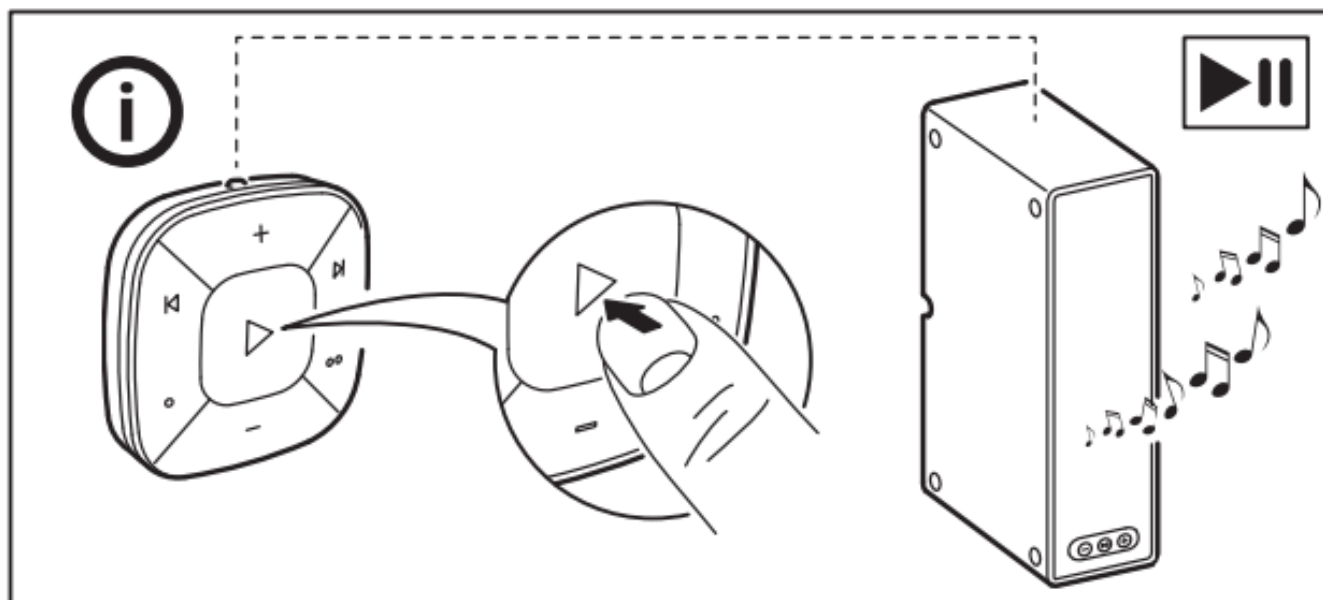   

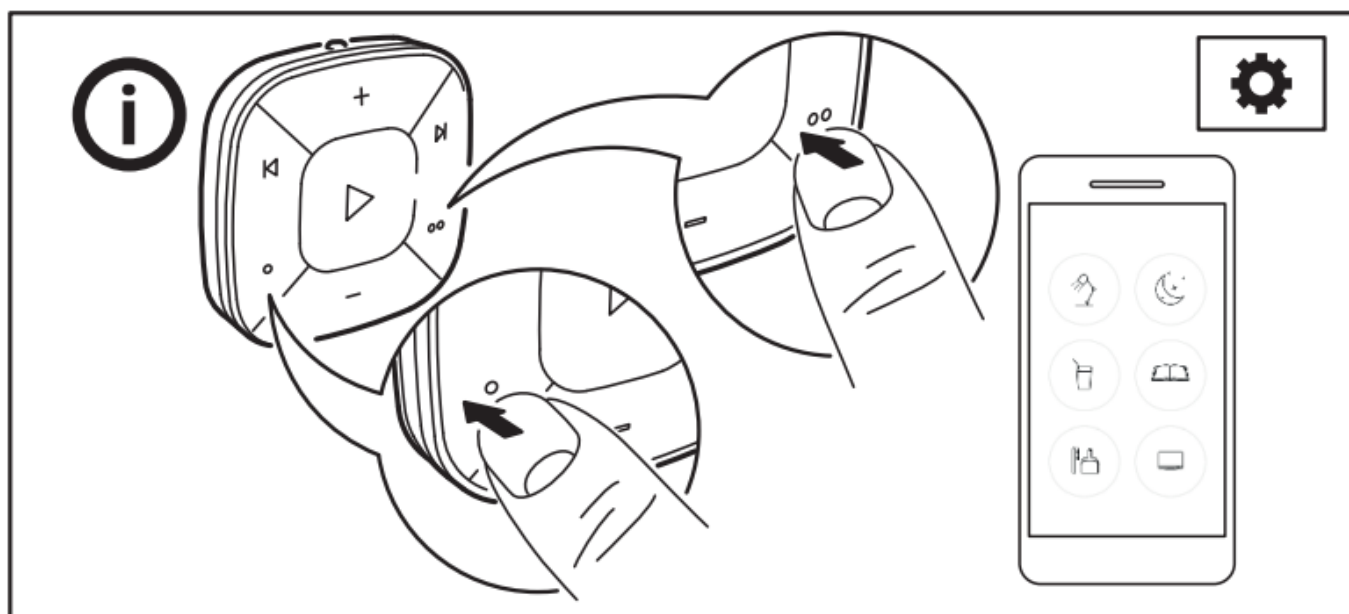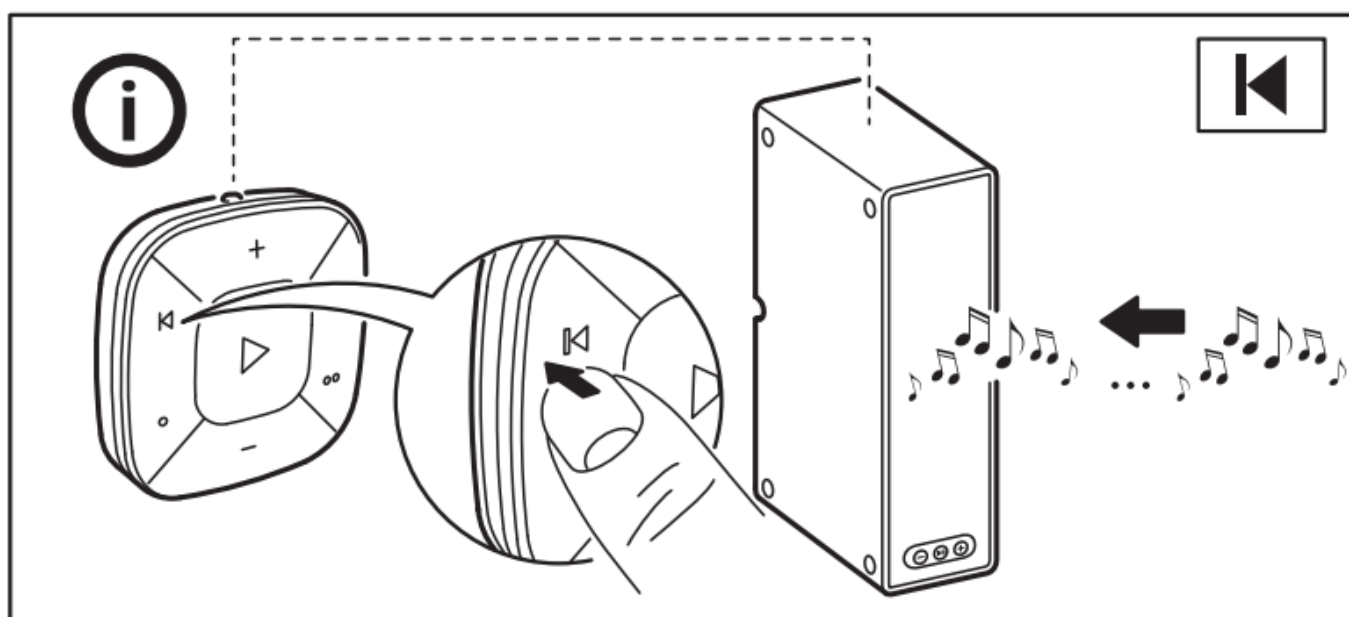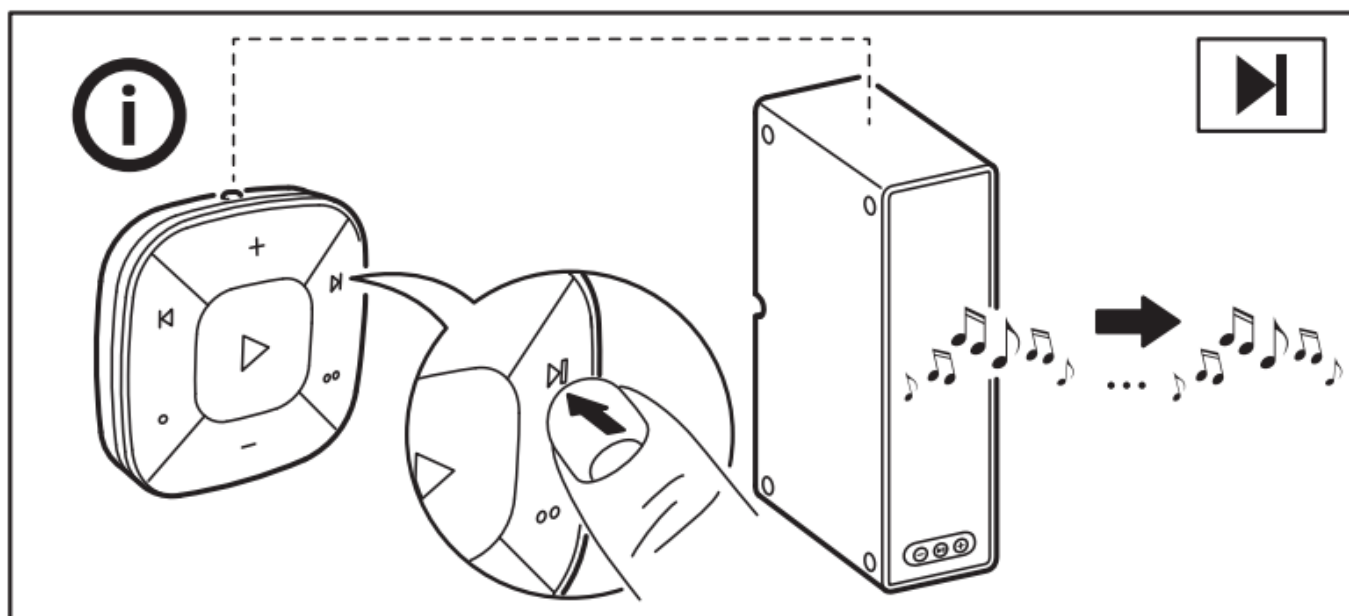   

SYMFONISK sound remote overview

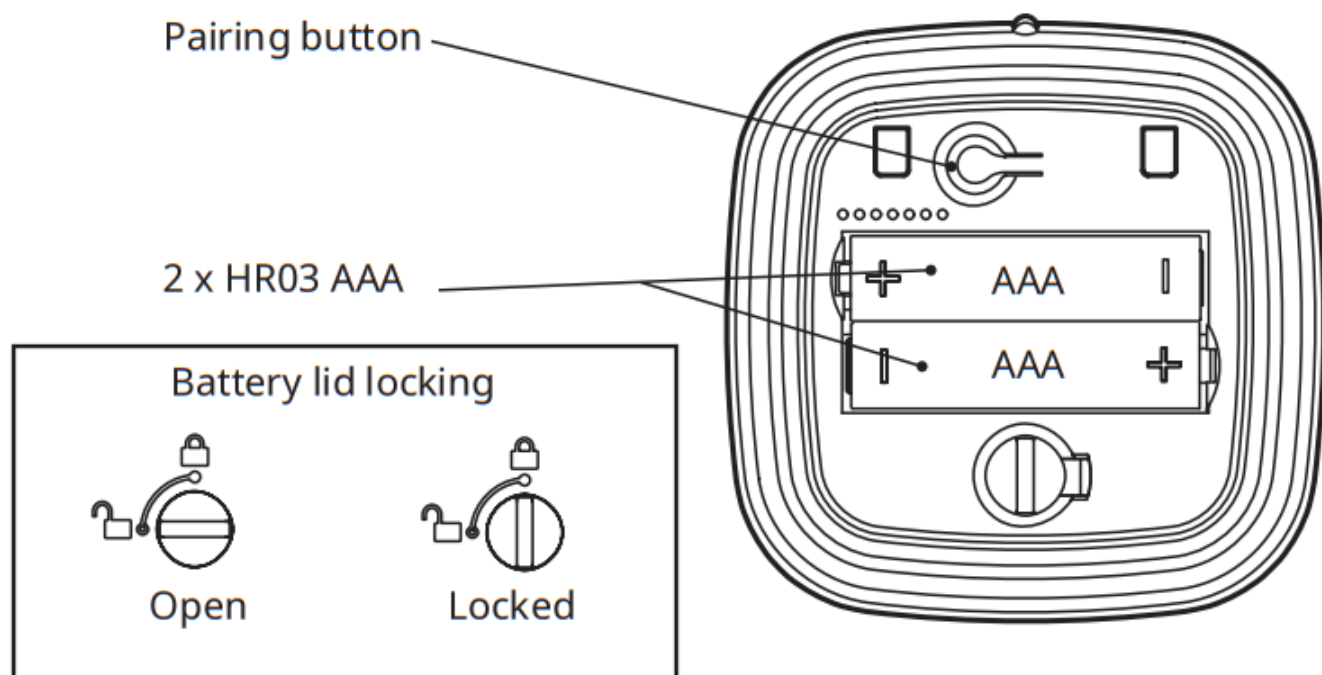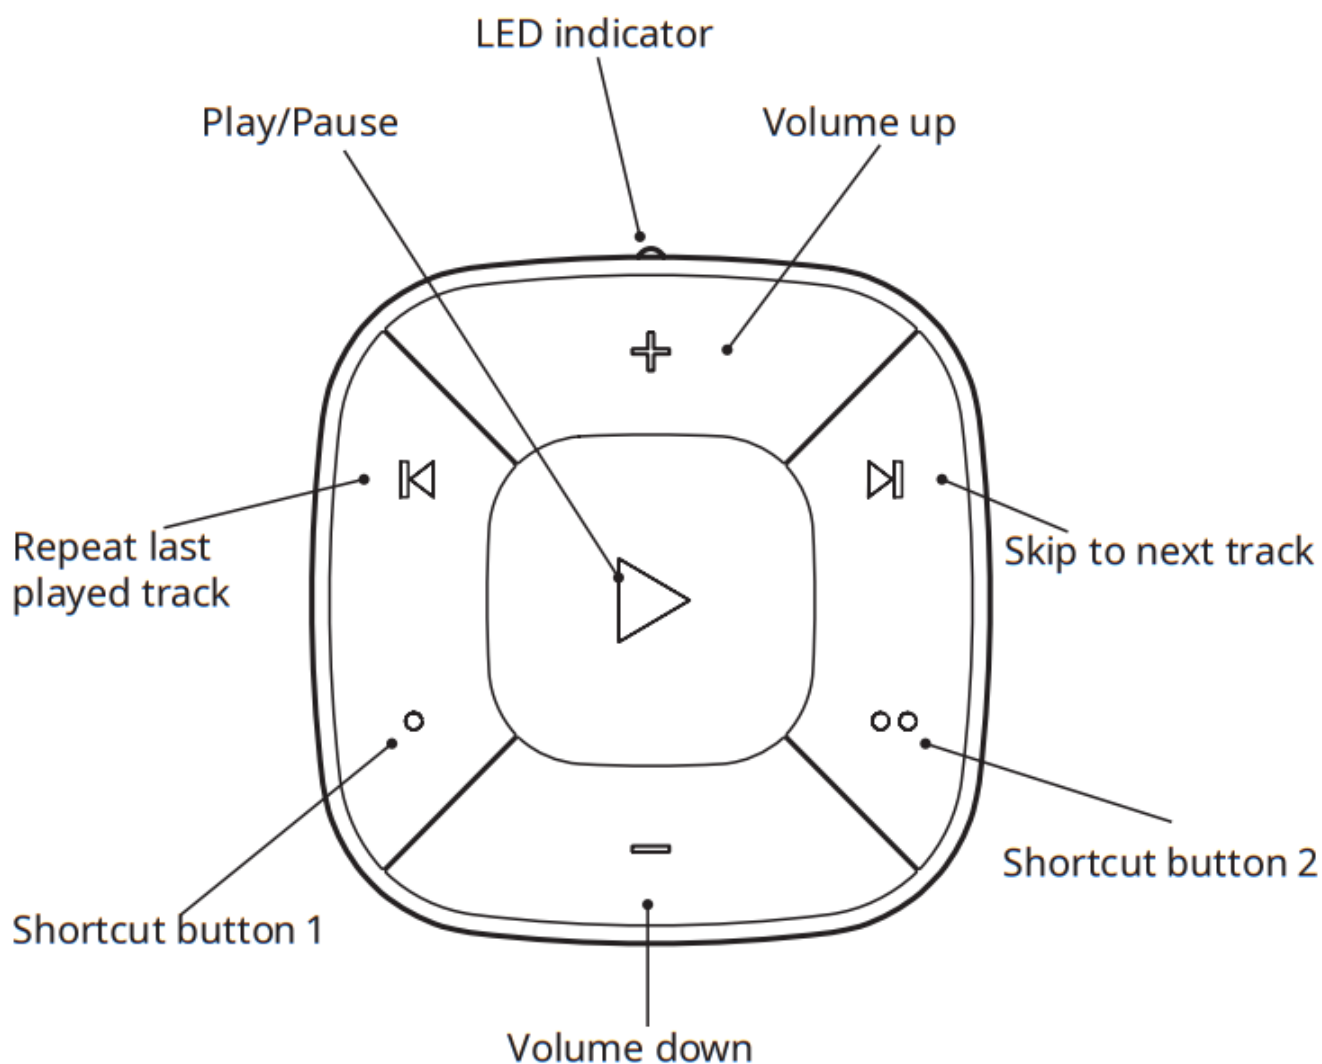  

IMPORTANT

SYMFONISK sound remote is made to work together with IKEA gateway or hub and control your SYMFONISK speakers.

Use the IKEA Home smart app to add more functions to your sound remote.

You cannot add "Works with IKEA Home smart" marked products directly to your sound remote.

If you have an Apple device

Go to the App Store and download the IKEA Home smart app. The app will take you through the process of installing your SYMFONISK sound remote and other “Works with IKEA Home smart” devices.

If you have an Android device

Go to the Google Play store and download the IKEA Home smart app. The app will take you through the process of installing your SYMFONISK sound remote and other “Works with IKEA Home smart” devices.

Getting started

Insert 2 HR03 AAA 1.2V batteries with correct polarity. Start the IKEA Home smart app and follow the instructions in the app on how to set up your device and add scenes to the shortcut buttons.

Close the battery lid and your sound remote is now ready for use.

Sound remote functions



Play/pause

Press once to start or stop the music.



Repeat

Press once to repeat the most recently played music.



Skip

Press once to skip to the next track.



— Raise and lower volume

Press and hold to change the volume rapidly.

○ Shortcut buttons

OO Used to change the playlist being streamed to the speakers.

Care instructions

To clean the sound remote, wipe with a soft moistened cloth, Use another soft, dry cloth to wipe dry.

Changing the batteries

When SYMFONISK sound remote is used regularly and as intended, the batteries will last for approximately 2 years.

When it's time to replace the batteries, the red LED indicator on the back of the sound remote will flash when you use it.

Open the battery lid and replace the batteries with 2 new HR03 AAA 1.2V batteries.

WARNING!

Risk of explosion if either battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

IMPORTANT!

- SYMFONISK sound remote is for indoor use only and can be used in temperatures ranging from 0 °C to 40 °C.
- Do not leave SYMFONISK sound remote in direct sunlight or near any heat source, as it may overheat.
- The range between SYMFONISK sound remote and the receiver is measured in open air.
- Different building materials and placement of the units can affect the wireless connectivity range.

Recommended batteries:

Batteries are sold separately. We recommend 2 x LADDA rechargeable batteries HR03 AAA 1.2V

Do not mix batteries of different capacities, types or date stamps.

Save these instructions for future use.

Technical data

Model: SYMFONISK sound remote gen 2

Type: E2123

Input: 2.4V, 2 x LADDA batteries HR03 AAA 1.2V

Range: 10 m unobstructed

For indoor use only

Operating frequency: 2400-2483.5 Mhz

Output power: 3 dBm (EIRP)

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN





The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.



Design and Quality
IKEA of Sweden

© Inter IKEA Systems B.V. 2022
AA-2356375-2

Documents / Resources

<p>SYMFONISK</p>  	<p>IKEA SYMFONISK Gen 2 Sound Remote [pdf] Instruction Manual 10071829, 10071830, SYMFONISK Gen 2 Sound Remote, SYMFONISK, Gen 2 Sound Remote, Sound Remote, E2123</p>
--	--

References

- ↘ [Sortere - gjør det lettere å kaste mindre og sortere mer](#)