




IKEA SYMFONISK Picture Frame With Sonos Wi-Fi Speaker Instruction Manual

[Home](#) » [Ikea](#) » [IKEA SYMFONISK Picture Frame With Sonos Wi-Fi Speaker Instruction Manual](#) 




Design and Quality
IKEA of Sweden
SYMFONISK
Instruction Manual

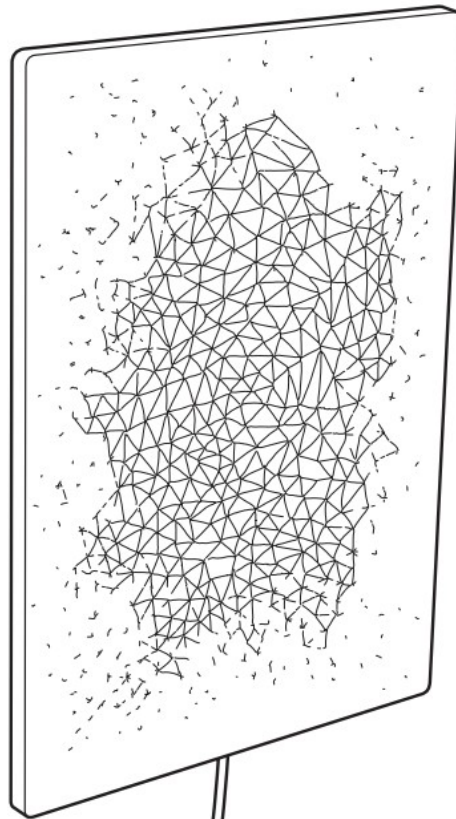

Contents

- 1 SYMFONISK Picture Frame With Sonos Wi-Fi Speaker
- 2 SPEAKER FUNCTIONS
- 3 CARE INSTRUCTIONS
- 4 IMPORTANT & WARNING!
- 5 RF EXPOSURE INFORMATION
- 6 Documents / Resources
 - 6.1 References

SYMFONISK Picture Frame With Sonos Wi-Fi Speaker

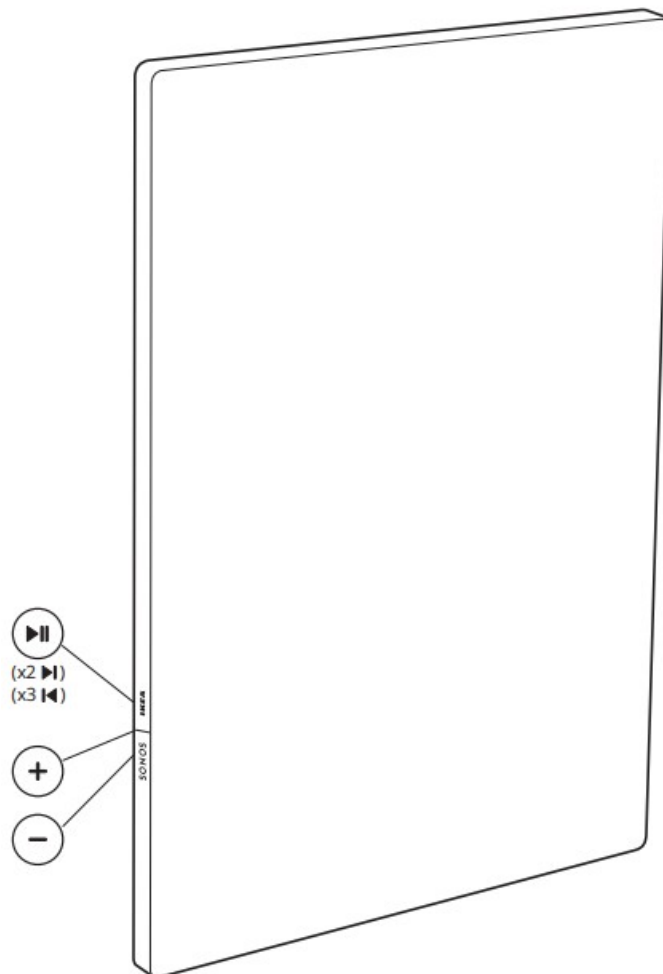

QUICK GUIDE

Plug in your SYMFONISK speaker. Go to the Apple App Store (iOS devices) or Google Play Store (Android devices) and search for Sonos.




Install and open the Sonos S2 app. Follow the instructions to set up your SYMFONISK speaker.

If you already have a Sonos system: Open the Sonos app and plug in your SYMFONISK speaker.

In the app, select Settings (gear icon) > System > Add Product. Follow the instructions to set up your SYMFONISK speaker.

SPEAKER FUNCTIONS

 **Play/Pause.** Press once to start or stop the music; twice to skip to the next track; three times to jump back one song. Press and hold to add the music playing in another room.

Status Light. Indicates current status of the speaker.

See full instruction manual for more information

 Volume Up

 Volume down

Additional information:

The full instruction manual and support material can be found at <http://www.ikea.com>.

— Choose the country you are in. Search your product in the search field. Go to Assembly Instructions and Manuals.

CARE INSTRUCTIONS

To clean the speaker, wipe with a soft moistened cloth Use another soft, dry cloth to wipe dry.

Model name:	SYMFONISK
Type number:	E1913
Operating temperatures:	0°C to 40°C
Network Standby Consumption:	2.06 W(HiNA)
Bandwidth:	< 20 MHz
Operating frequency and Radio output power:	
2400 – 2483.5MHz – < 20 dBm EIRP 5725 – 5850MHz – < 33 dBm EIRP	

For indoor use only

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

Save these instructions for future use.

IMPORTANT & WARNING!

- The speaker is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- Never use abrasive cleaners or chemical solvents as this can damage the product.
- Different building materials and placement of the units can affect the wireless connectivity range.
- Never install the product in a confined space.

Always leave a space around the product for ventilation.

- Product shall not be exposed to excessive heat such as sunshine, heat sources, and fire or similar.
- No open flame sources, such as candle lights should be placed on the apparatus
- Do not attempt to repair this product yourself, as opening or removing screwed covers may expose you to the risk of electric shock.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

© Inter IKEA Systems B.V. 2021



 

Type Approved Safety
Regular Production Surveillance

www.tuv.com



ID 0000057313

AA-2293999-2

Documents / Resources

<p>SYMFONISK</p>  	<p>IKEA SYMFONISK Picture Frame With Sonos Wi-Fi Speaker [pdf] Instruction Manual SYMFONISK Picture Frame With Sonos Wi-Fi Speaker, SYMFONISK, Picture Frame With Sonos Wi-Fi Speaker, Sonos Wi-Fi Speaker, Wi-Fi Speaker</p>
--	---

References

-  [Fresh home furnishing ideas and affordable furniture](#)
-  [Hej! Welcome to IKEA Global](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.