

IKEA SYMFONISK Shade For Speaker Lamp Base Glass Blac Instruction Manual

Home » Ikea » IKEA SYMFONISK Shade For Speaker Lamp Base Glass Blac Instruction Manual

IKEA SYMFONISK Shade For Speaker Lamp Base Glass Blac



Contents

- 1 SYMFONISK
- 2 Documents /
- Resources
 - 2.1 References
- 3 Related Posts

SYMFONISK

- Do not connect after each other in sequence.
- To disconnect power, pull the plug.
- Use only indoors in dry areas.
- Do not overload the product.
- Discard the product if damaged.

NOTE!

For adult use only. This is not a toy and is not intended for use by children.

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.



Design and Quality IKEA of Sweden

Documents / Resources



IKEA SYMFONISK Shade For Speaker Lamp Base Glass Blac [pdf] Instruction Manual SYMFONISK Shade For Speaker Lamp Base Glass Blac, SYMFONISK, Shade For Speaker Lamp Base Glass Blac, Lamp Base Glass Blac, Glass Blac, Blac

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.