



IKEA TOLERANT  
Non Stick Wok  
with 2 Handles



# IKEA TOLERANT Non Stick Wok with 2 Handles Instruction Manual

[Home](#) » [Ikea](#) » IKEA TOLERANT Non Stick Wok with 2 Handles Instruction Manual 

## Contents

- [1 IKEA TOLERANT Non Stick Wok with 2 Handles](#)
- [2 Product Usage Instructions](#)
- [3 Important](#)
- [4 Before first use](#)
- [5 Cleaning](#)
- [6 How to use](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



## IKEA TOLERANT Non Stick Wok with 2 Handles



## Product Specifications

- Product Name: TOLERANT Wok with Glass Lid
- Material: Ceramic Solgel Non-Stick Coating
- Handle: Yes, with glass lid
- Compatibility: Suitable for all types of stoves, including induction stoves

## Product Usage Instructions

### Before First Use

Wash the wok with washing-up liquid and rinse with water before using it for the first time.

### Cleaning

Always wash the wok by hand after use. Do not use steel wool or abrasive materials that may scratch the coating. Avoid using dishwasher detergent and solidified cooking oil waste as they can affect the surface. The base may be slightly concave when cold but flattens out when heated. Allow the wok to cool before cleaning to maintain its shape.

### How to Use

The cookware is suitable for use on all types of stoves, including induction stoves. It features a ceramic solgel non-stick coating, allowing you to cook with little or no oil. Avoid overheating the wok to prevent the base from becoming uneven and the non-stick properties from deteriorating.

### Use wooden or plastic utensils without sharp edges.

To save energy, place the wok on a cooking zone with a diameter equal to or smaller than the wok. Remember that the cookware gets hot during use, so always handle it with oven mitts. When moving the cookware on a ceramic glass stove, lift it to avoid scratching the surface.

## Frequently Asked Questions (FAQ)

### Q: What should I do if the handle on the glass lid feels loose?

A: Tighten the screws with a screwdriver, but avoid over-tightening to prevent the glass from breaking.

## Important

This wok is provided with a glass lid. There is a handle on the lid. If the handle feels loose, tighten the screws with a screwdriver. Do not screw on too tightly, because then the glass may break.

### Before first use

Wash with washing-up liquid and rinse with water before using the first time.

### Cleaning

Always wash the product by hand after use.

Do not use steel wool or anything that may scratch the coating. Dishwasher detergent and waste powder that solidifies cooking oil can affect the surface.


The base is slightly concave when cold, but expands to flatten out when heated. Always leave the cookware to cool before cleaning it. This allows the base to resume its shape and helps to prevent it from becoming uneven with use.

## How to use

- This cookware is suitable for use on all types of hobs, including induction hob.
- Provided with sol-gel ceramic non-stick coating, which means you can cook food in little or no fat.
- Do not let the cookware boil dry as the base becomes skew from overheating and the coating may lose its non-stick properties.
- Use only wooden or plastic utensils without sharp edges.
- By placing the cookware on a cooking zone with the same or a smaller diameter as the cookware, you can save energy.
- Bear in mind that the cookware gets hot during use. Always handle with potholders.
- Always lift the cookware when moving it on a glass ceramic hob to avoid the risk of scratching the hob.
- If you have any problems with the product, please contact your nearest IKEA store/Customer Service or see [www.ikea.com](http://www.ikea.com)

© Inter IKEA Systems B.V. 2024

## Documents / Resources

<p><b>TOLERANT</b></p> 	<p><a href="#"><b>IKEA TOLERANT Non Stick Wok with 2 Handles</b></a> [pdf] Instruction Manual  AA-2475420-2, TOLERANT Non Stick Wok with 2 Handles, TOLERANT, Non Stick Wok with 2 Handles, Wok with 2 Handles, Handles</p>
--	---

## References

- [!\[\]\(79de0df6c6ddd2d4eb74f1cc5f48ec50\_img.jpg\) IKEA Indonesia - Jual Perabot Rumah & Furnitur Kantor Online](#)
- [!\[\]\(d4c9768318b38eff1042b07478e20b4c\_img.jpg\) !\[\]\(27d314856359a9d7feca17161bc1f4a4\_img.jpg\) | IKEA Thailand - IKEA](#)
- [!\[\]\(d355663486c698e3972a8b93ac8b2102\_img.jpg\) Hej! Welcome to IKEA Global](#)
- [!\[\]\(1858f6a9022d088c0a7eca873f99643b\_img.jpg\) Hej! Te damos la bienvenida a IKEA en España](#)
- [!\[\]\(4a9a9afe1808e44249cde903a007394f\_img.jpg\) Móveis e Decoração - Não há casa como a nossa - IKEA](#)
- [User Manual](#)

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.