



IKEA UTDrag Built-In Extractor Hood Instruction Manual

[Home](#) » [Ikea](#) » **IKEA UTDrag Built-In Extractor Hood Instruction Manual** 



Design and Quality
IKEA of Sweden

UTDRAG



Please refer to the last page of this manual for the full list of IKEA appointed Authorized Service Centre and relative national phone number

Contents

- 1 Safety information
- 2 Use
- 3 Installation modes
- 4 Product description
- 5 Control Panel
- 6 General hints
- 7 Care and cleaning
- 8 What to do if...
- 9 Technical Data
- 10 Environment concerns
- 11 IKEA GUARANTEE
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Safety information





For your safety and correct operation of the appliance, read this manual carefully before installation and use. Always keep these instructions with the appliance even if you move or sell it. Users must fully know the operation and safety features of the appliance.



The wire connection has to be done by a specialized technician.

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is: for the electrical hob 500mm and for gas hob 650mm.
- If the instructions for installation of the gas hob specify a greater distance, this must be respected.
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
- Connect the extractor to the exhaust flue through a pipe of a minimum diameter of 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. When the cooker hood is used in conjunction with appliances supplied with energy other than electricity, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes from being drawn back into the room by the cooker hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Connect the plug to a socket complying with current regulations, located in an accessible place.
- With regards to the technical and safety measures to be adopted for fume discharging it is important to closely

follow the regulations provided by the local authorities.   **WARNING:** Before installing the Hood, remove the protective films.

- Use only screws and small parts in support of the hood.




WARNING: Failure to install the screws or fix the device in accordance with these instructions may result in electrical hazards.

- Connect the hood to the power net by using a bipolar switch having a contact gap of at least 3 mm.
- Do not look directly at the light through optical devices (binoculars, magnifying glasses...).
- Do not flambè under the range hood; risk of fire.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction



Accessible parts may become hot when used with cooking appliances.

- Clean and/or replace the Filters after the specified time period (Fire hazard).
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
-  Use only with self-shielded tungsten halogen lamps or self-shielded metal halide lamps.
- Replace any cracked shield.

Use

- Switch off or unplug the appliance from the main supply before carrying out any maintenance work. min 471 mm max 861 mm
- The top of the hood must not to be used as a shelf.
- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides. min 569 mm max 861 mm Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames. min 471 mm max 861 mm

Installation modes

The hood has been designed to be installed and used either as an “Exhaust mode”, or as a “Recirculation mode”.



Exhaust mode (see a symbol in the installation booklet)

Cooking steam is sucked and channeled outside the house through a discharge duct (not supplied), fitted to the

hood steam outlet. Ensure that the discharge duct is correctly fitted to the air outlet, unit using an appropriate connection system.




Recirculation mode (see a symbol in the installation booklet)

The air is filtered through one or more charcoal filters and then resent into the room.

Important: Ensure appropriate air circulation around the hood.

Important: If the hood is supplied without charcoal filters and installed on recirculation mode, these must be fitted before the hood can be used. Filters are available in shops. The hood should be installed away from particularly dirty areas, windows, doors, and heat sources. The accessories for wall fixing are not included because walls made of different materials require different types of fixing accessories. Use fixing systems suitable for the walls of your home and the weight of the appliance. For more details, contact a specialized dealer. Keep this booklet for future consultation.

Product description

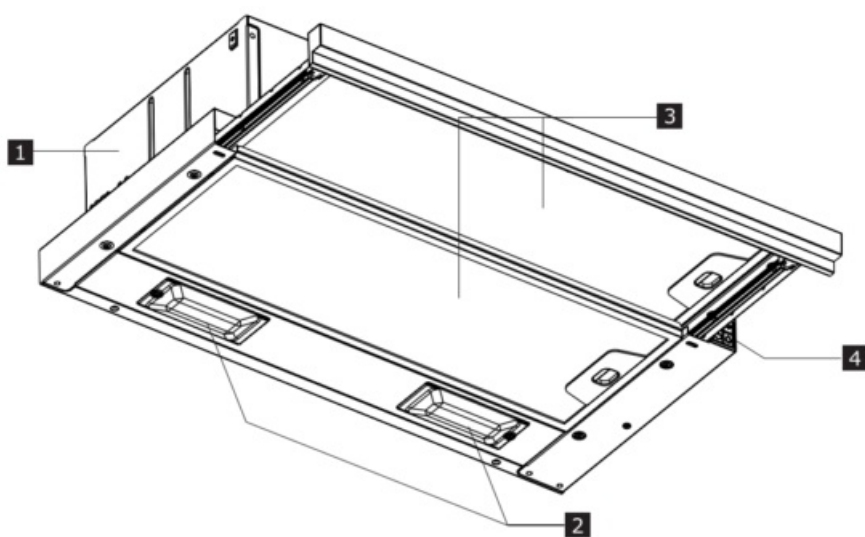

1. Hood body
2. LED Lighting
3. Grease filter
4. Control panel

Control Panel



A	Turns the motor ON at speed one and turn the Motor OFF at each Speed
B	Turns the motor on at speed two.
C	Turns the Motor on at speed three.
D	Turns the lighting system on and off at maximum intensity.

* If the sliding suction panel is closed, the Hood is Light OFF and Motor OFF.

General hints

- Switch ON the hood at minimum speed when you start cooking and keep it running for a few minutes after cooking is finished.
- Increase the speed only in case of a large amount of smoke and vapor and use boost speed(s) only in extreme situations.
- Replace the charcoal filter(s) when necessary to maintain a good odor reduction efficiency.
- Clean the grease filter(s) when necessary to maintain a good grease filter efficiency.
- Use the maximum diameter of the ducting system indicated in this manual to optimize efficiency and minimize noise.


Care and cleaning

Switch off or unplug the appliance from the main supply before carrying out any maintenance work.

IMPORTANT Clean the hood using a damp cloth and a neutral liquid detergent.

Long Life Charcoal Filter (Green)

The anti-odor filter can be washed and regenerated every 3-4 months (or more frequently if the hood is subject to intensive use), up to a max. of 8 regeneration cycles (in case of particularly intensive use it is recommended that you do not exceed 5 cycles).

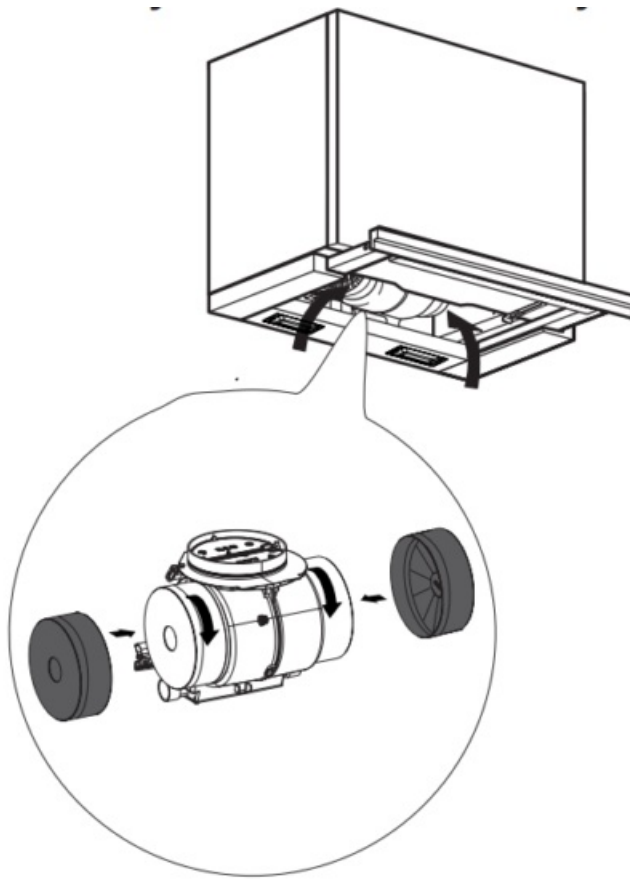


Regeneration procedure:

- Wash in the dishwasher at a MAX temperature of 70° or hand wash in hot water without using abrasive sponges (do not use detergents!).
- Dry in the oven at a MAX temperature of 70° for 2 hours (it is recommended to read carefully the user manual and the assembly instruction of the oven of your own).

Grease Filters


Clean or replace the filters continuously according to the below time intervals, to maintain good performance of the hood and to prevent a potential fire hazard, caused by excessive grease build-up. The grease filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.

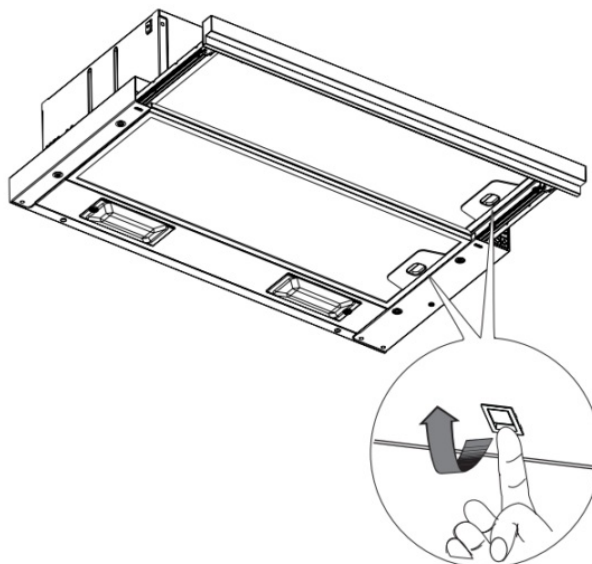


Replacing the lamps

Unscrew the bulbs, by using safety gloves, and replace them with new ones having the same characteristics 4W

(Connection type: E14).

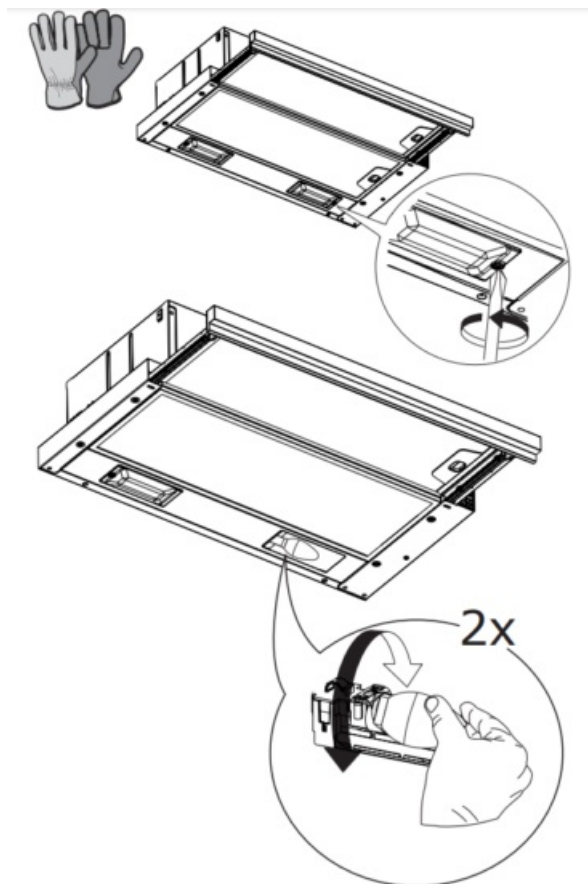

Lamp	Power (W)	Socket	Voltage (V)	Dimension (mm)	ILCOS Code
	4	E14	220-240	107 x 37	DRBB/F-4-220-240-E14-35/100

What to do if...

If there is a fault, first try to find a solution to the problem yourself. If you cannot find a solution to the problem yourself, contact an authorized service center.



If you operated the appliance wrongly, or the installation was not carried out according to the Assembly instructions, the visit from the Authorized Service Centre technician may not take place free of charge, even during the warranty period.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Appliance not stable	The appliance is not correctly installed	Follow the Installation instruction enclosed to the appliance.
The appliance is not in a horizontal position	The appliance is not correctly installed	Follow the Installation instruction enclosed to the appliance.
Performance in terms of oil capture are not satisfying	Oil and grease on metal filters or charcoal filters.	Follow the cleaning frequency of filters as described in the user manual
The appliance does not work	The appliance is not correctly connected	Verify that the main cable is connected to the motor group or the plug is connected to the socket
The light does not work	The LED is broken	You can replace the lamp without contacting the Authorized Service Centre.
The noise of the hood is higher than customer expectations.	The air outlet diameter in the wall is too small, causing a pressure drop and an increase in motor speed.	Follow the Installation instruction enclosed in the appliance.
	The product is installed in recirculation mode.	A product in recirculation mode (and using a charcoal filter) will generate a higher noise than a product in extract mode.
	More than one bend in the ventilation duct.	If the exhaust system in the building has multiple bends in or along a distance, this can increase the noise of the product.

Before contacting the Authorized Service Centre:

Switch the appliance on again to see if the problem has disappeared. If not, switch it off again and repeat the operation after an hour.

If your appliance still does not work properly after carrying out the checks listed in the troubleshooting guide and switching the appliance on again, contact the Authorized Service Centre, clearly explaining the problem and specifying:

- the type of fault;
- the model;
- the type and a serial number of the appliance (given on the rating plate).

Technical Data


		Unit	Value
Product Type			Telescopic Hood
Dimensions	Width	mm	598,5
	Depth	mm	Min.387 – Max.537
	Height min/max	mm	215
Airflow max* – Exhaust		m3/h	340
Noise max* – Exhaust		dBA	67
Airflow max* – Recirculating		m3/h	140
Noise max* – Recirculating		dBA	72
Total Power		W	108
Lamps info	Type		LED
	Number & Power		2 x 4W
	Socket		0.00E+00
Installation minimum height – gas hob		mm	650
Installation minimum height – elec hob		mm	500
Net Weight		Kg	7,6

* Maximum speed (boost excluded).



This appliance has been designed, manufactured, and marketed in compliance with the E.E.C. Directives.

The technical information is situated in the rating plate on the internal side of the appliance.

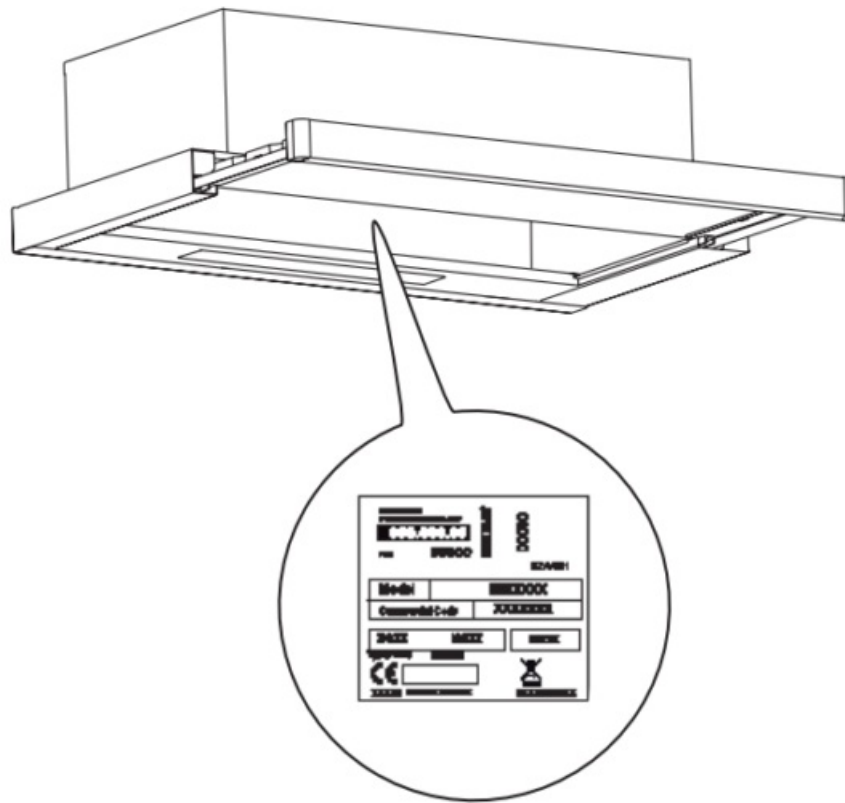


Environment concerns

Maintenance

- The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials with the  symbol are recyclable. Dispose of the packaging in suitable collection containers to recycle it.

IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of Your appliance at IKEA Pty Ltd, ABN 84006270757, or at Cebas Pty Ltd, ABN 15 009 156 003 (Both Trading as IKEA). The original sales receipt is required as proof of purchase. If service work is carried out under a guarantee, this will not extend the guarantee period for the appliance.

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network. Contact IKEA for further information. If you encounter any trouble with the appliance and wish to register a service call or make a claim, please refer to www.ikea.com.au for your local store's after-sales customer service center phone number, online email, and opening times. The principal address and contact details in Australia are: For Queensland, New South Wales, and Victorian customers please contact:

IKEA Pty Ltd
IKEA Pty Ltd
IKEA Service Office
L1 Clock Tower, 630 Princes Highway
Tempe, NSW 2044
Contact – IKEA Customer Service at www.IKEA.com.au
For Western Australian and South Australian customers, please contact:
Cebas Pty Ltd
8c Sunray Drive, Innaloo WA 6018 Australia
Contact – IKEA Customer Service at www.IKEA.com.au

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The products have been designed and tested for domestic purposes only and this guarantee does not cover damage arising from the use of the Product in a commercial environment. The exceptions are specified under the headline “What is not covered under this guarantee?” Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labor, and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA. The guarantee exists only if the appliance complies and is installed in accordance with:

- The technical specifications.
- The Assembly Instructions and user manual Safety Information.

What will IKEA do to correct the problem?

IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. They will notify you as to whether your claim is covered under this guarantee. If your claim is approved, the IKEA service provider or its authorized service partner, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by a chemical or electrochemical reaction, rust, corrosion, or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect the normal use of the appliance, including any scratches and possible color differences.
- Accidental damage caused by foreign objects including insect or vermin infestation or substances and cleaning or unblocking of filters, drainage systems, or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings, and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician’s visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where nonoriginal parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to their home or other address, IKEA is not liable

for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by this guarantee

- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA service provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the service provider or its authorized service partner will reinstall the repaired appliance or install the replacement if necessary.
- The appliance's serial number or warranty seal has been removed or defaced.

How country law applies

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law (ACL). You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This guarantee is not intended in any way to limit or exclude such rights and remedies that you may have under law. You can find out more information about the Australian Consumer Law on the ACCC website: www.accc.gov.au

Area of validity

This IKEA guarantee applies only to products purchased and installed in AUSTRALIA.

What you must do to make a claim under the guarantee:

To make a claim under the guarantee contact the IKEA after-sales customer service center at the above address, the IKEA catalog or refer to www.ikea.com.au for your local store customer service phone number, online email, and opening times. Please describe the problem that you are facing with the appliance in detail along with your product article number (8 digit code) and date of purchase at the time of call registration.

Please do not hesitate to contact the dedicated after sales customer service center for IKEA appliances to:

1. Make a service request under this guarantee;
2. Ask for clarification on the installation of the IKEA appliance in the dedicated IKEA kitchen furniture.
3. Ask for clarification on user manual contents and specifications of the IKEA appliance. To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual section of this booklet before contacting us.

How to reach us if you need our service



The IKEA after-sales customer service center will assist you on the phone with basic troubleshooting for your appliance at the time of service call request. Please refer to the IKEA catalog or www.ikea.com.au and select your local store for local store phone numbers and opening times.



Please describe the problem that you are facing the appliance in detail along with your product article

number (8 digit code) and date of purchase at the time of call registration



SAVE THE SALES RECEIPT!

Kindly keep all these details and the original invoice of purchase handy during the service technician's visit to enable him to carry out the job. It is your proof of purchase and required for the guarantee to apply. Note that the receipt reports also the IKEA article name and number (8 digit code) for each of the appliances you have purchased.






Country name in local languages	elirifil	Opening times
Australia	Victoria: (03) 8523 2154 New South Wales: (02) 5020 664 1 Queensland: (07) 3380 6800 IKEA Perth: (08)9201 4532 IKEA Adelaide: (08) 8154 4532	
Osterreich	13602771461	Mo-Fr: 8 – 20
Belgib / Belgique	26200311	Ma-Vr: 8 – 20 / Lun-Ven: 8 – 20
Blafl ramie	24003536	nori-ltr: 8 – 20
Canarias	913754126	Lunes-Viernes: 8 – 20
Kuno();	http://www.ikea.com	8 -20
Hrvatska	8003636	Pon-Pet: 8 – 20
eeska republika	225376400	Po-Pa: 8 – 20
Danmark	70150909	Man.-Fre.: 9 – 20
Eesti	http://www.ikea.com	E-R: 8 – 20
Suomi	981710374	Lu-ye: 8 -20
France	170480513	Lun-Ven: 9 – 21
Deutschland	6929993602	Mo-Fr: 8 – 20
Great Britain	2076601517	Mon-Fri: 8 – 20
EAAaiSo	2109696497	aEut-flap: 8 – 20
Magyarország	(06-1)-3285308	Hetfa-Pentek: 8 – 20
Italia	+39 0732/691238	Lun-Ven: 8 – 20
Ireland	2076601517	Mon-Fri: 8 -20
Island	5852409	Manudagur-Ristudagur Kl.: 8 – 20
Latvija	http://www.ikea.com	P.- Pk.: 8 – 20
Lietuva	(0) 520 511 35	Pirm.-Penkt.: 8 – 20
Mayorca	913754126	Lunes-Viernes: 8 – 20

Malta	+356 (0)25464000	Mon-Fri: 8 – 20
Norge	23500112	Man-Fre: 8 – 20
Nederland	050-7111267 / +31 507111267	Ma-Vr: 8 – 20
Polska	225844203	Poniedziałek-Piatek: 8 – 20
Portugal	213164011	Seg.-Sex.: 9 – 21
Romania	212044888	Luni-Vineri: 8 – 20
POCCHR	84957059426	n0H-riFITH: 9 – 21
Cp6mja	117555444	flowiler: 8 – 20
Slovensko	(02) 50102658	Pon-Pia: 8 – 20
Slovenija	+386-1-8107781	Ponedeljek-Petek: 8 – 20
Espana	913754126	Lunes-Viernes: 8 – 20
Sverige	0775-700 500	Man-Fre: 8 – 20
Schweiz / Suisse / Svizzera (Ticino)	225675345	8 bis 20 Werkstage / Lun-Ven: 8 – 20
Tiirkiye	+90/262/644 65 95	Pzt-Cuma: 8 – 20
YKpaitia	http://www.ikea.com	noHeAinox-n'finivius: 8 – 20
Maroc / 44.41	+212 (5) 20100900 www.IKEA.ma	10.00 -17.00



© Inter IKEA Systems B.V. 2018
23199
AA-2039829-4
991.0540.900_04 – 220323
D00004572_03

Documents / Resources

<div>UTDRAG</div> <div></div>	<div>0</div> <div>IKEA UTDRAG Built-In Extractor Hood [pdf] Instruction Manual UTDRAG Built-In Extractor Hood, UTDRAG, Built-In Extractor Hood</div>
<div>UTDRAG</div> <div></div>	<div>00</div> <div>IKEA UTDRAG Built-In Extractor Hood [pdf] Instruction Manual UTDRAG, Built-In Extractor Hood, UTDRAG Built-In Extractor Hood</div>
<div>UTDRAG</div> <div></div>	<div>000</div> <div>IKEA UTDRAG Built-In Extractor Hood [pdf] Instruction Manual UTDRAG, Built-In Extractor Hood, UTDRAG Built-In Extractor Hood</div>
<div>UTDRAG</div> <div></div>	<div>0000</div> <div>IKEA UTDRAG Built-In Extractor Hood [pdf] Instruction Manual UTDRAG, Built-In Extractor Hood, UTDRAG Built-In Extractor Hood</div>
<div>UTDRAG</div> <div></div>	<div>00000</div> <div>IKEA UTDRAG Built In Extractor Hood [pdf] Instruction Manual UTDRAG, Built In Extractor Hood, UTDRAG Built In Extractor Hood, Extractor Hood</div>

References

- [Home | ACCC](#)
- [Hej! Welcome to IKEA Global](#)
- [IKEA Australia | Affordable Swedish Home Furniture - IKEA](#)

-  [Inspiration aménagement intérieur mobilier abordable - IKEA](#)

Manuals+.