 




iLOG ELD Application User Guide

[Home](#) » [iLOG ELD](#) » iLOG ELD Application User Guide 

iLOG ELD Application

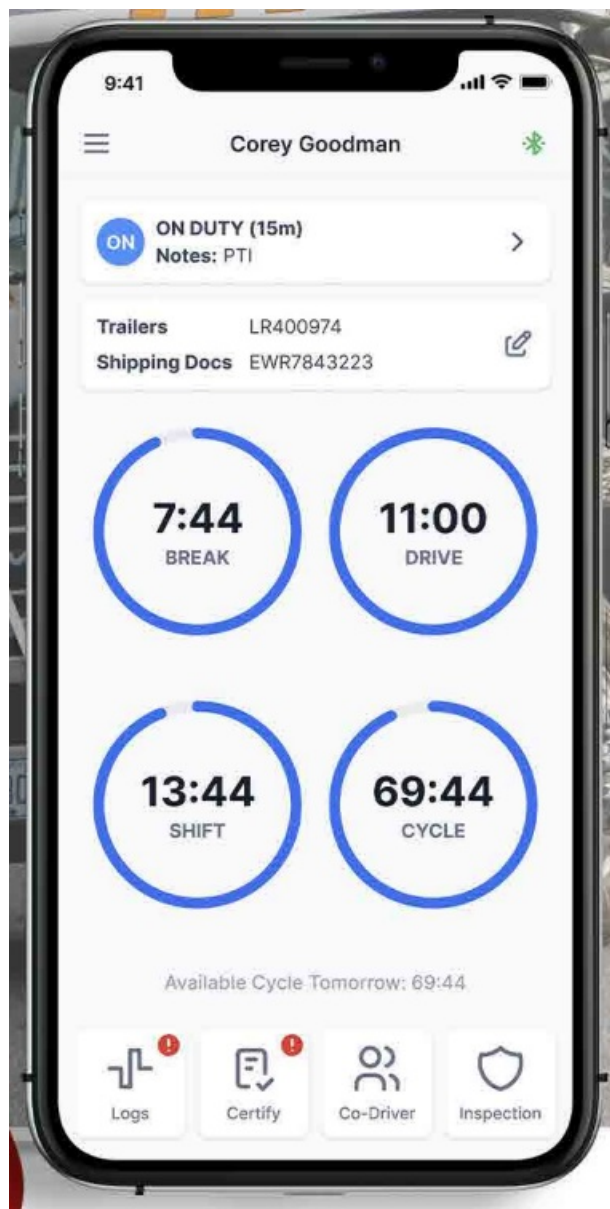

 
Please keep this manual in your vehicle at all times!

Contents

- 1 [Login](#)
- 2 [Select your vehicle](#)
- 3 [Roadside Inspection](#)
- 4 [Transfer ELD records](#)
- 5 [ELD Malfunctions](#)
- 6 [Documents / Resources](#)
- 6.1 [References](#)


Login

Log in to the application using your username and password. If you don't have a I LOG ELD account, please contact your fleet manager or your company's safety personnel.

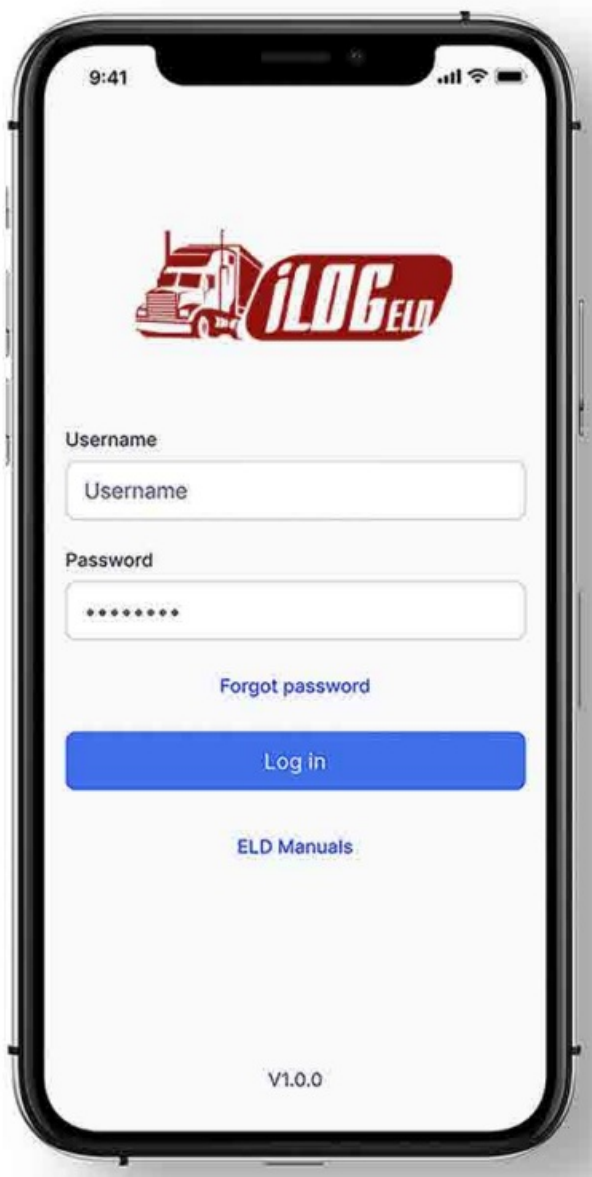

Select your vehicle

 Select your vehicle by matching the Vehicle number or VIN number. You can search for your vehicle by the Vehicle number or VIN number. If you are not presented with the "Select Vehicle" screen, your fleet manager has pre-assigned you to a vehicle. You can assign yourself to a different vehicle by going to Menu and selecting "Change Vehicle".

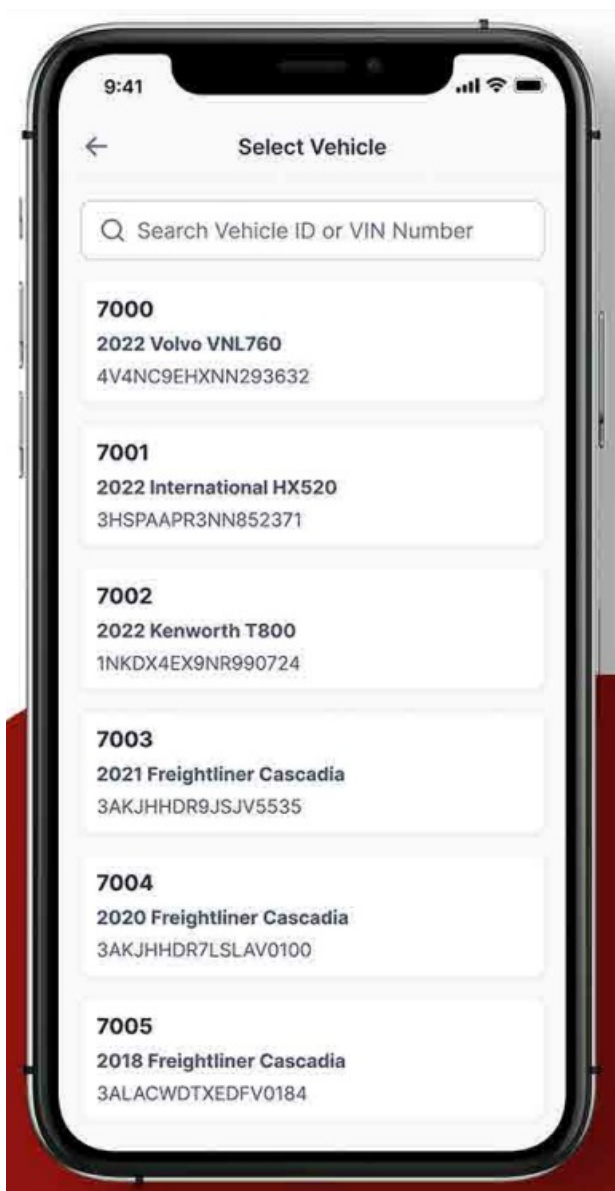


Roadside Inspection

Roadside Inspection (Follow the given guidelines to show your records too the officer)

Click the “Menu” icon on the top left corner and select DOT Inspection.

 Tap “Being Inspection” and show your electronic logbooks 8-day summary to the officer.

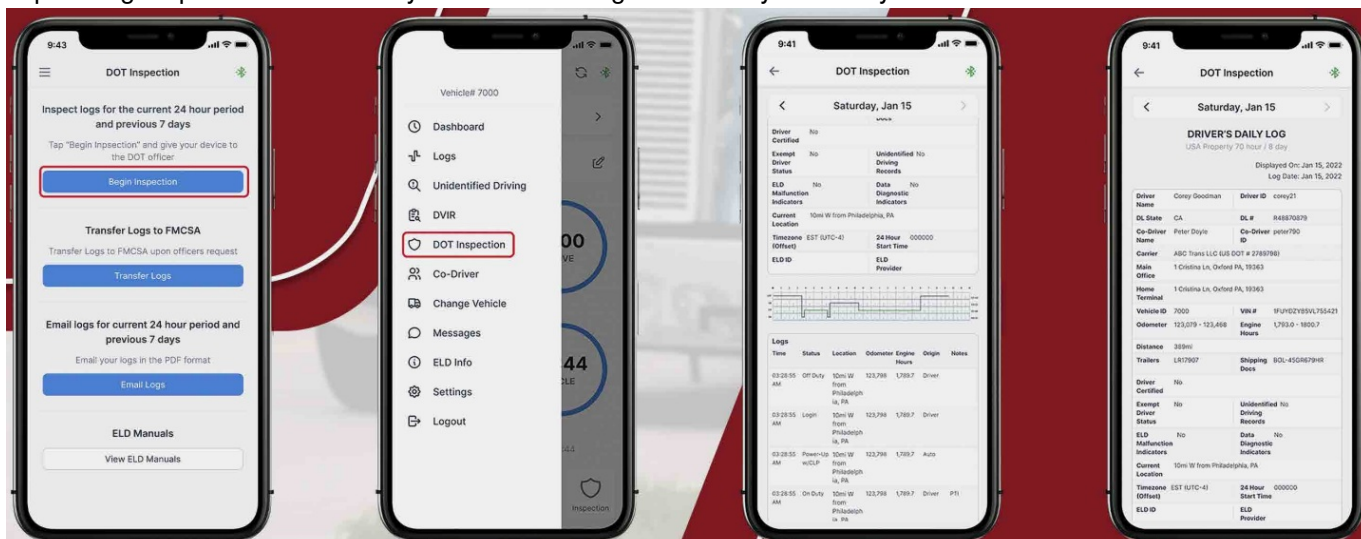


Transfer ELD records

Transfer ELD records (Follow the given guidelines to send your records to DOT)

Click the “Menu” icon on the top left corner and select “DOT Inspection”.

 Tap “Transfer Logs” to send your ELD records to DOT. In the pop-up window, write your comment and click the “Transfer Logs” button.

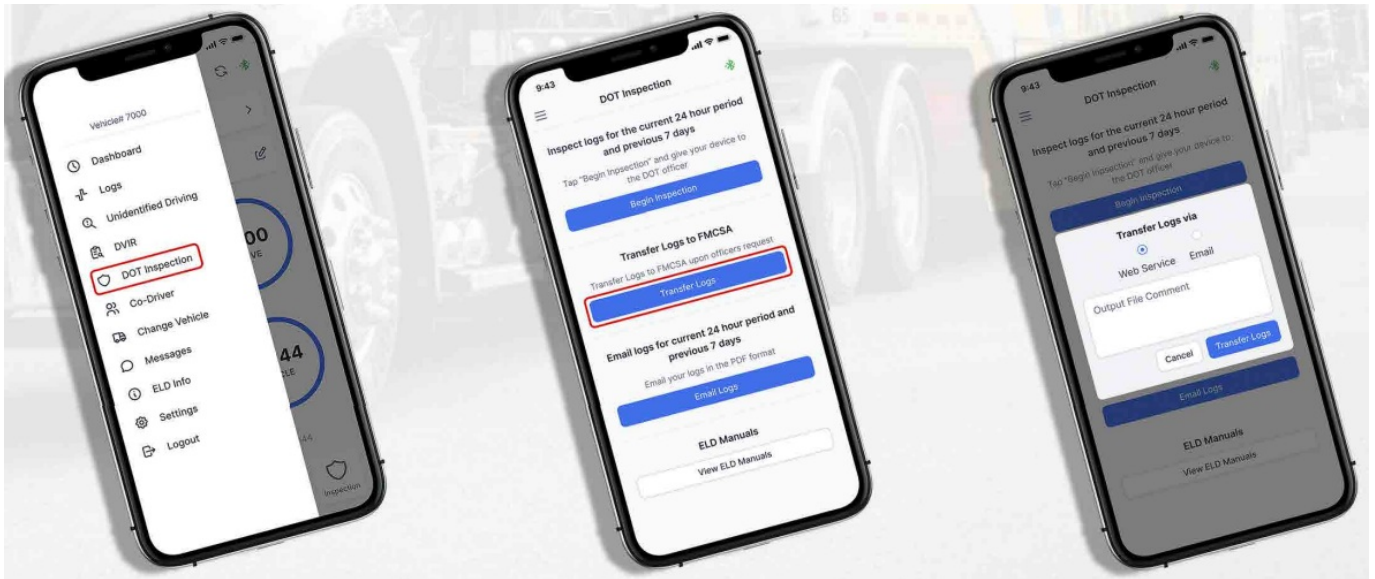

ELD Malfunctions

§395.22 Motor carrier Responsibilities

A motor carrier must ensure that its drivers possess on board a commercial motor vehicle and ELD information pocket containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions.

The following instructions are in accordance with the guidelines set forth in §395-34 Our ELD will monitor and report malfunction data based on section “4.6 ELD’s Self-Monitoring of Required Functions/” table 4:

- P** – “Power compliance” malfunction,
- E** – “Engine synchronization compliance”¹ malfunction,
- T** – “Timing compliance” malfunction,
- L** – “Positioning compliance” malfunction,
- R** – “Data recording compliance” malfunction,
- S** – “Data transfer compliance” malfunction,
- O** – “Other” ELD detected malfunction.



info@ilogeld.net
[267-391-6168](tel:267-391-6168)



Documents / Resources



[iLOG ELD Application](#) [pdf] User Guide
Application

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.