



iMICE K818 2.4G+Bluetooth Mini Dual Mode Keyboard User Manual

[Home](#) » [iMICE](#) » iMICE K818 2.4G+Bluetooth Mini Dual Mode Keyboard User Manual 



**2.4G+Bluetooth
Mini dual mode keyboard**



For a better user experience of the product, please read this manual before using it.

Contents

- [1 Product features:](#)
- [2 Connection Description:](#)
- [3 Multi-device connection:](#)
- [4 Connection supplement](#)
- [5 FN combination function](#)
- [key:](#)
- [6 Troubleshooting:](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Product features:

1. Support switching back and forth across devices

2. mode switching; the mainstream equipment of the general market
3. Bluetooth 5.0 is better compatible with new and old devices
4. Connect version 5.0 to hibernate and wake up faster
5. With high-frequency equipment switching, the keyboard works smoothly

Connection Description:

Note: FN key is the second key in the bottom left corner of the keyboard

1. Turn the power switch to ON to turn on the keyboard 2.4G mode: (system default) Take out the USB receiver and plug it into the computer

Bluetooth mode:

Press and hold FN, then press 1, and then press and hold for 3 seconds, the blue light flashes, and Bluetooth device 1 enters the searched state on the device side—open the system settings—turn on Bluetooth-search and add

Multi-device connection:

1. Fn +1 is connected to Bluetooth device 1
2. FN+2 is connected to Bluetooth device 2
3. FN+3 is connected to Bluetooth device 3
4. FN+4 is connected to USB, 2AG wireless reception
5. FN+1.2.3.4 combined single press can switch the paired device
6. FN+1.2.3, long-press the flashlight for 3 seconds to start the state of being searched (connect the new device)


Connection supplement

1. The initial connection keyboard needs to switch the device to the corresponding system
2. If the system is not switched, the function key may not work normally!
3. The use distance of the keyboard is 5-10m, and the distance is related to different equipment and environmental factors

FN combination function key:

Multimedia buttons				Connect switch	
FN + F1	According to the desktop	FN + F7	In a song	FN+Q	android
FN + F2	Display bad good operation	FN + F8	The next song	FN+W	Window
FN + F3	Load screen	FN + F9	Play/Pause	FN+E	Apple IOS
FN+F4	search	FN+F10	mute		
FN + F5	The calculator	FN + F11	Reduce the volume		
FN + F6	Lock screen	FN + F12	Increase the volume		
FN + "ESC"	Switch the keyboard	FN + "P"	Kao fullscreen		

FN+ arrow on page, next page, 'HOME' key and 'END' key, and other functions

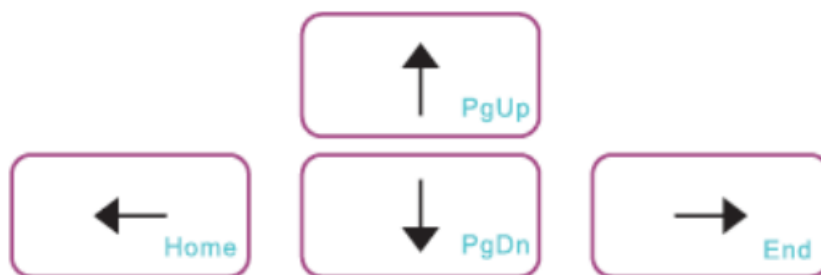

Troubleshooting:

1. When the keyboard can't be searched, try Bluetooth on the switch device to search again
2. When the keyboard is turned on and there is no indicator light try to charge the keyboard
3. After connecting other devices, you need to delete the old records before connecting back to the original devices
4. When the pairing fails, the failed pairing record needs to be deleted and the second pairing is performed

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	<p>iMICE K818 2.4G+Bluetooth Mini Dual Mode Keyboard [pdf] User Manual K818, 2A5YJ-K818, 2A5YJK818, K818 2.4G Bluetooth Mini Dual Mode Keyboard, 2.4G Bluetooth Mini Dual Mode Keyboard</p>
---	---