



iMin D4 Desktop Pos Terminal Instruction Manual

[Home](#) » [iMin](#) » iMin D4 Desktop Pos Terminal Instruction Manual 



iMin Technology Pte Ltd
Intelligence for Business

Contents

 
- [1 Troubleshooting Guide for iMin Device](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Troubleshooting Guide for iMin Device

If you have run into an issue with your iMin Device, read on for some of the common issues below:

Screen (touch panel) Not Working/Flashing/Flickering

1. Make sure software is updated to the latest version: Go to Wireless update->Check for updates, install the new updates.


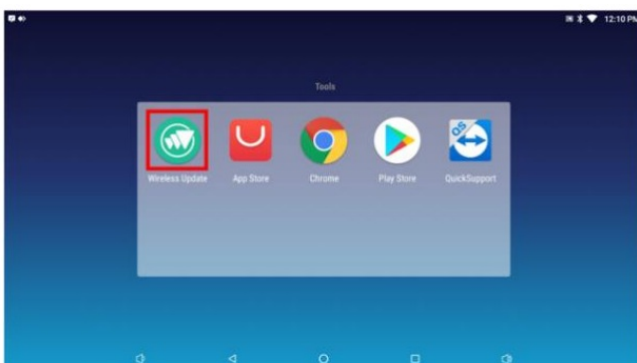


*iMin will release new updates regularly to ensure the system is at optimum performance. (if touch is inaccessible, may rely on external mouse/peripherals to navigate)

2. Restart your device, press the button power for 3 seconds, select Restart in the menu.
3. Switch off the power source and turn on your device after a while (approx. 5 minutes).
4. Perform a factory reset under the Go to Settings->Backup & reset->Factory data reset.
5. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg.

Main/Secondary Display Black Out

  1. Check and make sure the power sources are good and available.
2. Press the power button to bring up the screen display.
3. Check if there is screen off settings enabled, disable if necessary: Go to **Settings->Display->Sleep**.

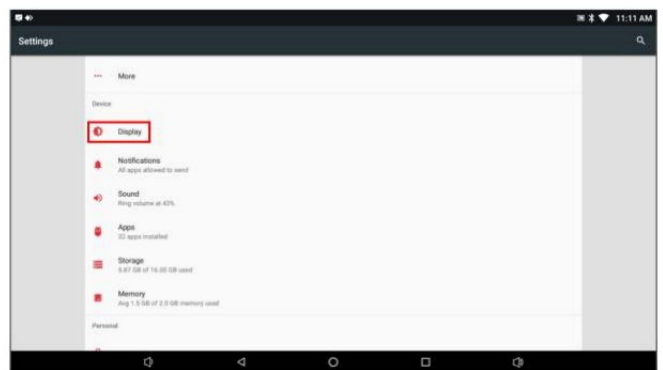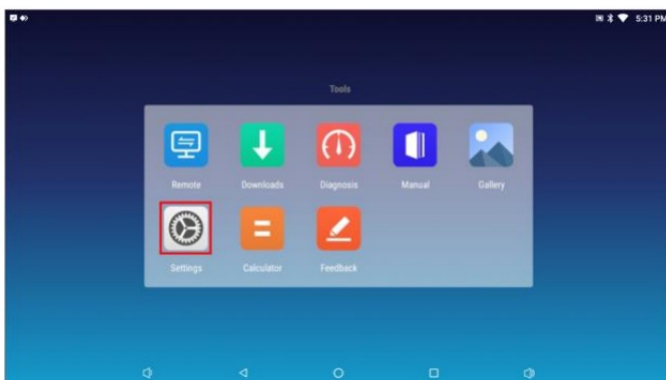

4. If persist, tilt the display to check whether the display is intermittently blackout.
5. Check the cable connection by following the video link below:
Video link:
D3-subscreen
<https://iminsd-mv.sharepoint.comtv:/g/personal/vingsengliowiminsg/EdbBWCFHbu9IoDv5H2M8ixsB6h-d2sr8ZvrvT9tcntSIXQ?e=FxJYZLD4-main> screen <https://iminsg-mv.sharepoint.com:/v:/g/personal/vingsengliowiminsg/EVo7YR9tcZFFvIIIRaJPIViMBwCGnV1Ox2lbvU35D2Fe=OLH3vy>
Sub-screen <https://iminsg-mv.sharepoint.com:/v:/g/personal/vingsengliowiminsg/EXj8twSBbVpMokCeACemSEB5dc.kidnoJBUE1Zhe=rWxJWR>
6. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a

 
support ticket or email us at services@imin.sg.

Printer Paper Jam/Printer Door Stuck (applicable for built-in printer model)



Red cover

Red handle trigger

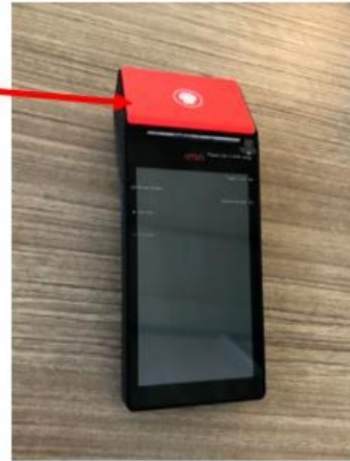

1. Open the printer cover red handle trigger on right – D1w and D4, Red cover – M2.



Cutter cover

2. If the printer door (for D1w and D4 model) is stuck, use the following steps:
 - i. Switch off the power source and turn on your device(for desktop D4), open the printer cover, and remove the jammed paper.
 - ii. If the previous step not working, open the printer cutter cover.

 


Follow the indicator
to clear the jam


roller

- iii. Turn the roller until the paper cutter is back to the original position by following the indication on the printer. Reinsert the printer cutter cover.

Refer pictures below:

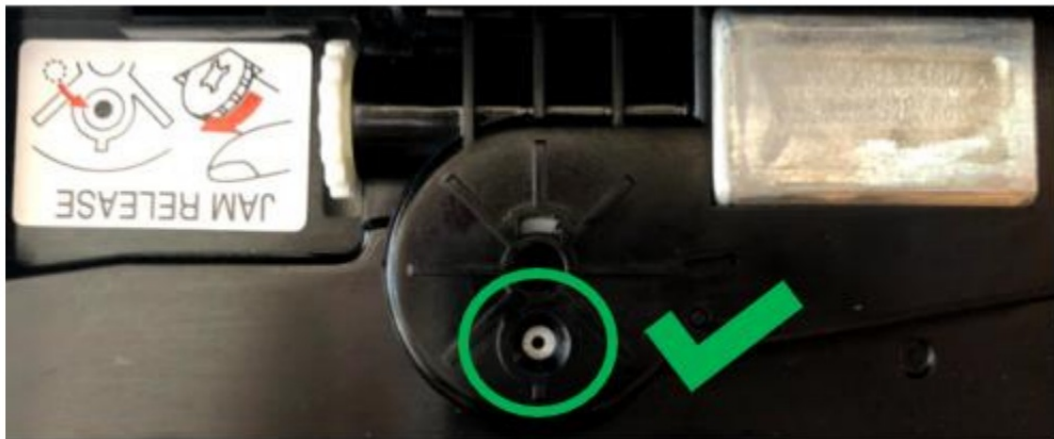

- The correct indication

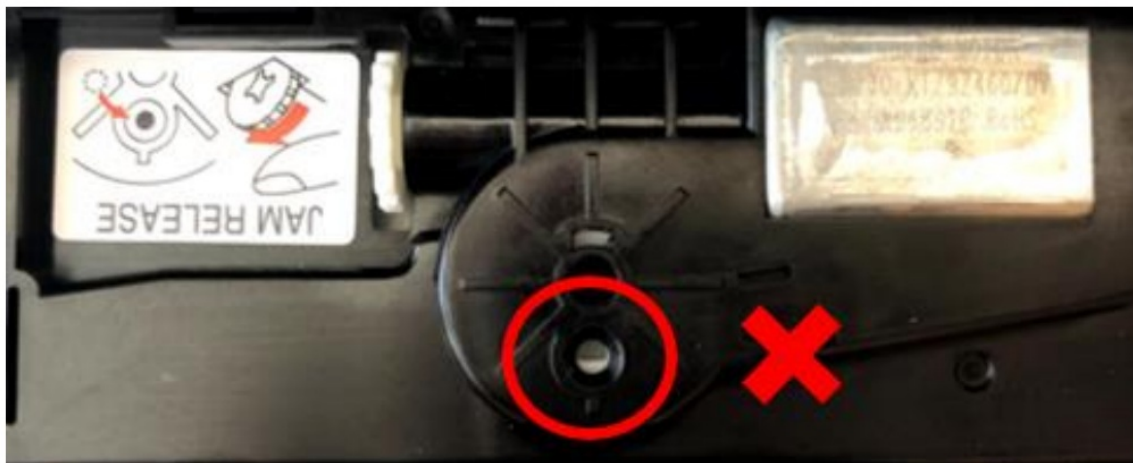 

- The wrong indication



iv. Open the printer cover to remove the jammed receipt paper.

*Important: do not use force open the receipt paper cover without turning back the paper cutter to its original position, it will damage the internal component.

Video link:

<https://iminsgmy.sharepoint.com/:v:/g/personal/vingsengliowiminsg/EVFoWNX5NIFLuEBEfg9zudsBgjNnzaVli1mbVLxG-gWMw?e=sLGRkq>

 
If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket, or email us at services@imin.sg.

Unable to Print

1. Ensure there is paper loaded into the printer.


2. Check the printer cover and make sure is properly closed.
3. Check printer connection status through user software (if user software has this feature)
4. Perform print test to verify printer status:

Go to **Diagnostic**→**Printer**→**Print test page**.

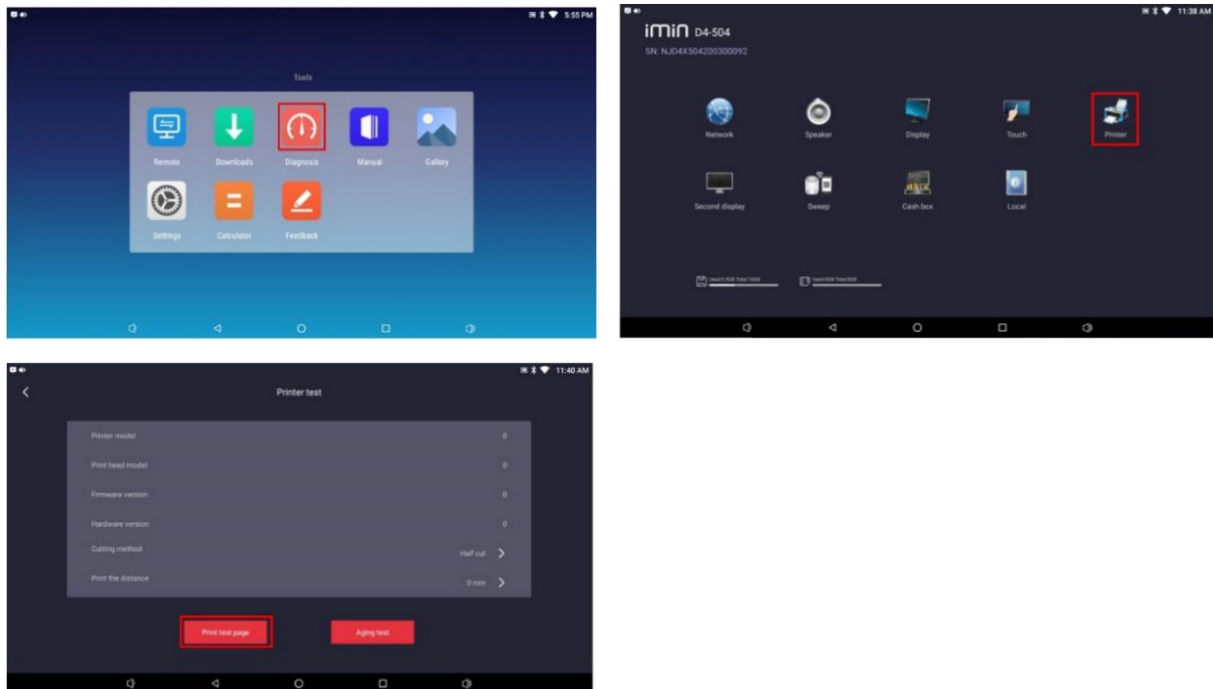

5. Close all background software to make sure only used software is connected to the printer
6. Restart the software and print again, clear the app cache if necessary.
7. Switch off the power source and turn on your device again (for desktop D4).
8. Make sure the device has been updated to the latest version:

 Go to **Wireless update**→**Check for updates**, install the new updates.

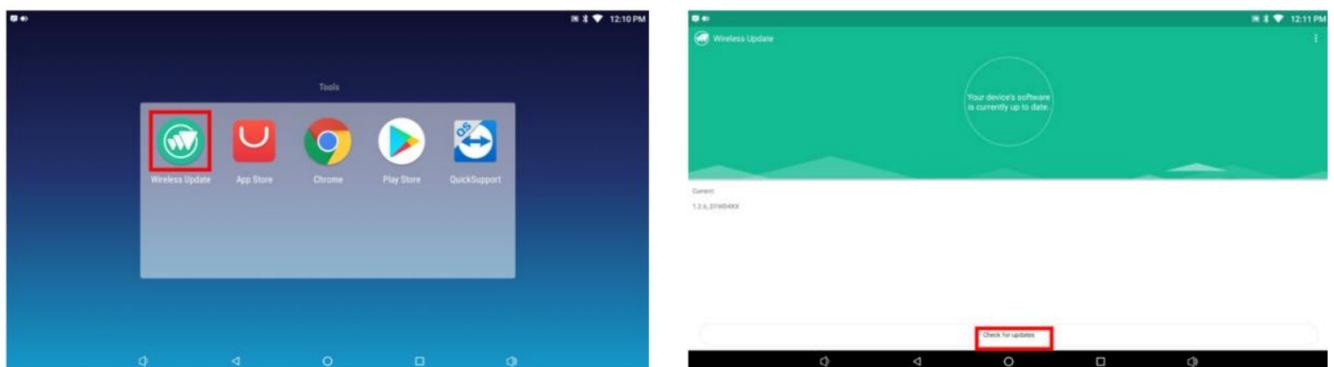

9. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg.

Printer Upgrade Failed (applicable for built-in printer model)

1. Ensure there is paper loaded into the printer.
2. Restart the device and wait for the update to process. (for M2 series)
3. Switch off the power source and turn on your device again(for desktop D4).
4. Wait and do not operate the device until the update is completed.
5. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a

 
support ticket or email us at services@imin.sg.

Device Unable to Turn On

1. Check whether the power adapter connection is normal. For devices with their own batteries (D2pro or M2M series), you need to confirm the battery level. Please use the respective charger adapter to charge the device. It is best to charge it for 5 minutes before turning it on.
2. Press and hold the switch button for about 8 seconds to force the device on
3. Unplug and plug the power adapter and power on the device.
4. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg.

Battery Depleted Fast/Charging Slow

1. Make sure software is updated to the latest version:
Go to **Wireless update->Check for updates**, install the new updates.

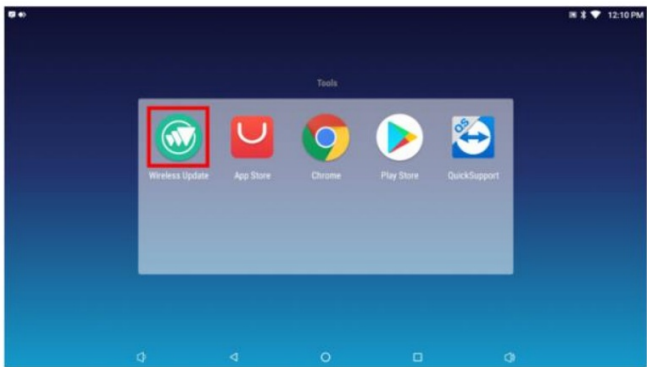


*iMin will release new updates regularly to ensure the system is at optimum performance.

2. Ensure the power supply source is stable, recommend charging the device with the power adapter provided by iMin.
3. Turn off another background app while charging.
4. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg. [Battery usage up to 8 operational hours*, charging time is 3 to 4 hours for a full charge, varies depending on application]
experimental result by iMin R&D center

The device is Getting Slow/Not Responsive/System Freeze

 
1. Long hold the power button for around 8 seconds to force shut down the device.
2. Turn on the device, make sure software is updated to the latest version: Go to **Wireless update->Check for updates**, install the new updates.

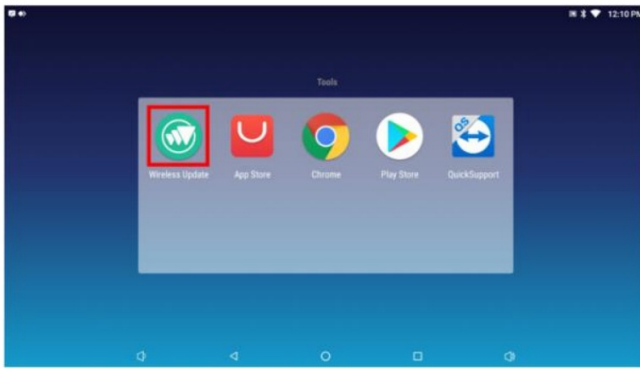

*iMin will release new updates regularly to ensure the system is at optimum performance.

3. Cultivate good usage practice with normal on and off the device, off device out of operational
4. Restart the application software occasionally to clear up unnecessary cache consumption.
5. Manually clear software cached data.
6. Perform restart to the device.
7. Perform factory reset:

 Go to **Settings->Backup & reset->Factory data reset.**

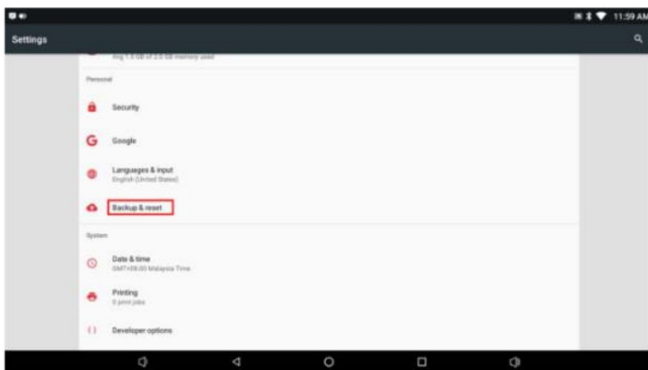

*Important: a caution factory reset will clear remove all the existing data, perform the necessary backup if needed. Please proceed carefully.

8. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket, or email us at services@imin.sd.

 
 
 
Internet Wi-Fi Problem

1. Make sure that your router is on and your device is discoverable.
2. Check for issues with your Wi-Fi network:

If able connects to a Wi-Fi network but cannot online, check your router cable connection. Try to connect the same network with other devices. If the same symptoms using other devices, there might be a service outage. Contact your internet service provider for assistance.


3. Restart both your device and router.
4. Perform troubleshoot on the device's network settings.
5. Forget the network and reconnect the network:

Go to **Settings-> Wi-Fi->select the network and click **Forget**.**

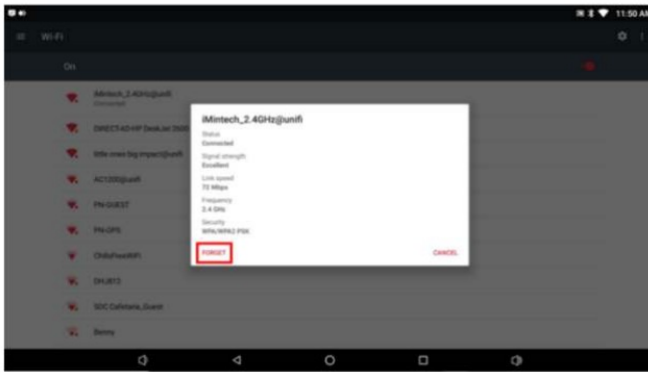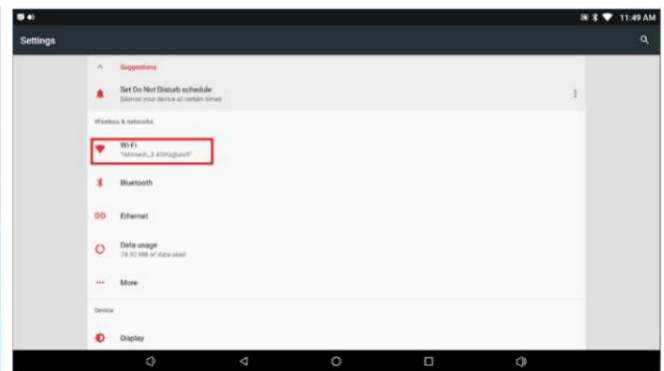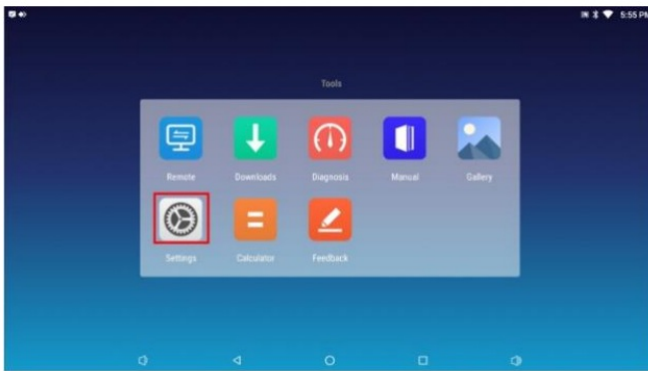



6. Perform network reset and reconfigure the network setting:

 Go to **Settings->Under Wireless & Network, click More...>Network settings Reset.**

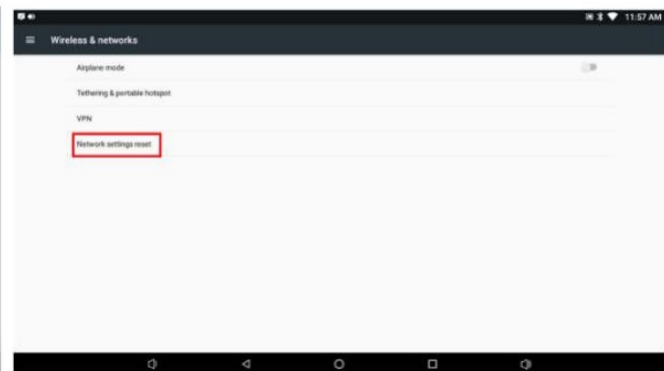

7. Connects the device to other networks (eg. mobile hotspots or other WiFi networks)

  8. Perform a factory reset under the Go to Settings->Backup & reset->Factory data reset.

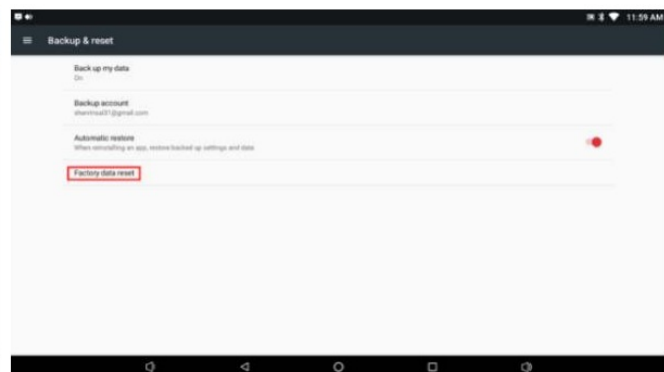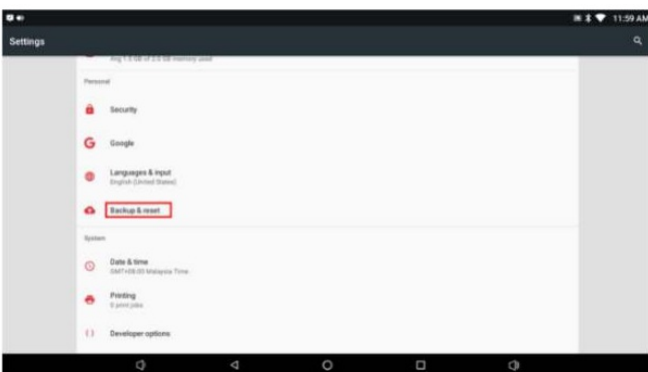

*Important: a caution factory reset will clear remove all the existing data, perform the necessary backup if needed. Please proceed carefully.

 
9. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg.

Date and Time Keep Resetting/Restore Back to an Earlier Time?

1. If the device is working online, connect the device to the internet network to allow time and date sync.

2. Ensure the time setting is configured enabled for network time synchronization.

Go to Settings->Date & Time->Automatic Date & Time

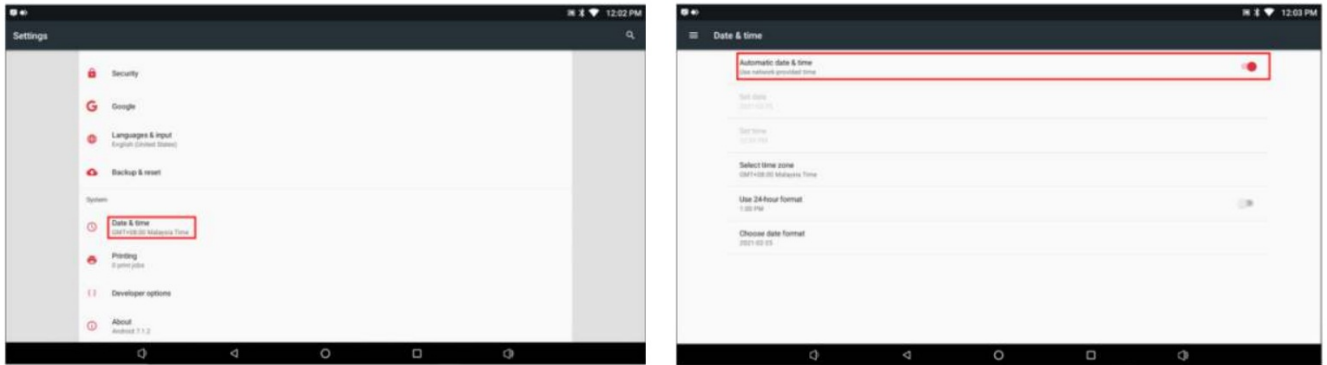

3. If the use of the device does not involve the network, replace the CR battery in the device by following the video link below:

(Remark: warranty wise is covered unless critical damage is done to the device, which is irreparable will result in the void, please refer to technical expertise to carry further action)

Video link:

D2-

<https://iminsgmy.sharepoint.com/:v:/g/personal/vingsengliowiminsg/EQNxDBH2NFRAleQSQYFPwBIXSMEe=eAvOIk>

D3- <https://iminsg->

[my.sharepoint.com/:v:/g/personal/vingsengliowiminsg/EZIAY2wRexLlaR0mjsXqUIBF4LcgdXGWatcubnaul e=fN6Ovi](https://iminsgmy.sharepoint.com/:v:/g/personal/vingsengliowiminsg/EZIAY2wRexLlaR0mjsXqUIBF4LcgdXGWatcubnaul e=fN6Ovi)

 
D4- <https://iminsgmy.sharepoint.com/:v:/g/personal/vingsengliowiminsg/EcUZninfwSNKI4t5HaFZX0BCIVRe=hkjep3>

4. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg.


Cash Box Cannot Open

1. Ensure the cash drawer is connected to iMin devices.
2. Check the cash drawer and cable are in good condition.
3. Make sure software is updated to the latest version:


Go to Wireless update->Check for updates, install the new updates.

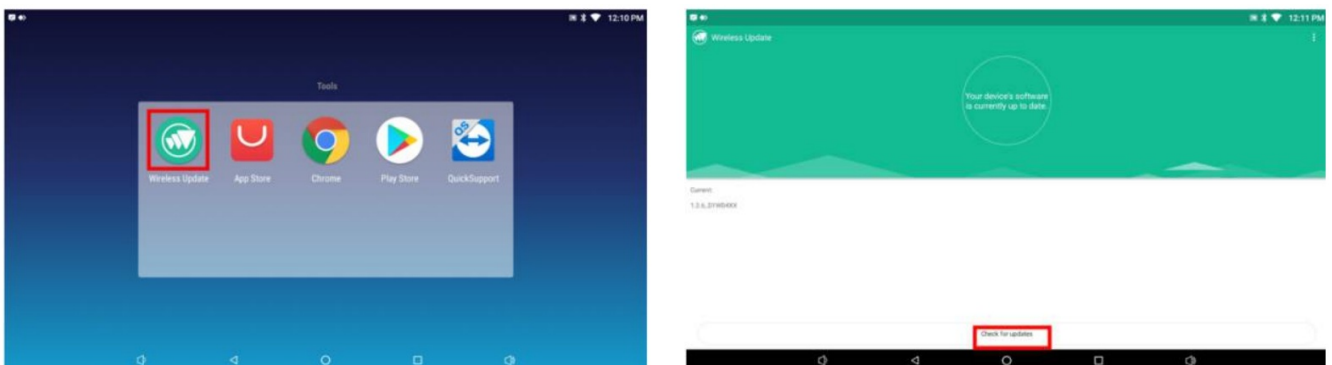

 4. Cash box and type of printer connection are correlated. Refer below to configure the cash box set based on printer connection used for your software
 - i) For Bluetooth printers, the cash drawer setting is at the diagnosis app. Refer below Go to 'Diagnosis' App->Select 'Cash Box', Click on the 'Setting' icon at the bottom right

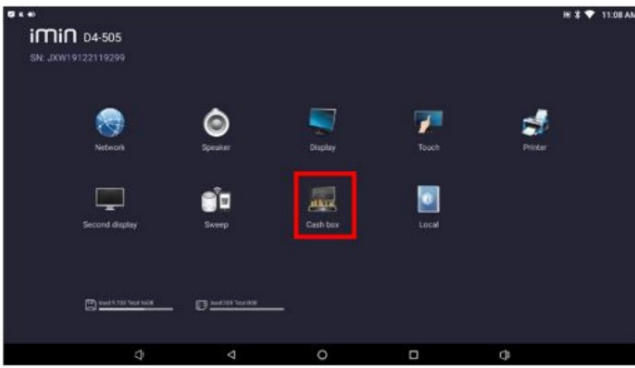

 Select 'Cash Drawer After Printing' and click 'OK'.

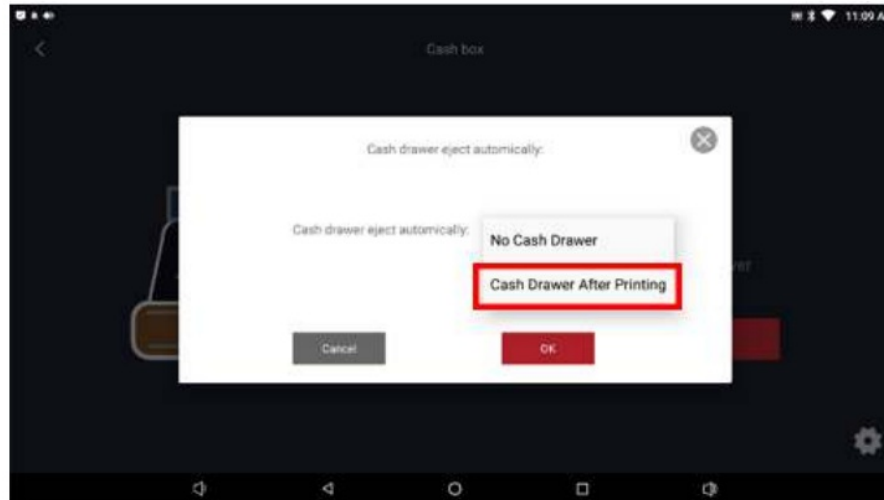






ii) For USB printer connection, software needs to include iMin cash box SDK. Refer to the below link.

URL: <https://docs.imin.sg/docs/en/GeneralFunctionModules.html#cashbox>


5. If the problem persists, please contact the respective product supplier or iMin technical support team, drop us a support ticket or email us at services@imin.sg.

Firestore Push Notification Type Only – No Notification

     1. Make sure the device operating in the English language.
2. Go to 'Setting', click the search icon and search for 'doze'. Select 'Battery optimization'.

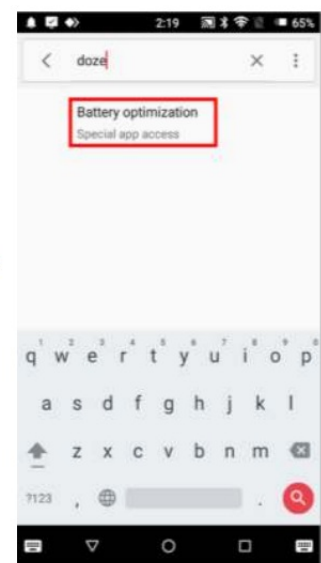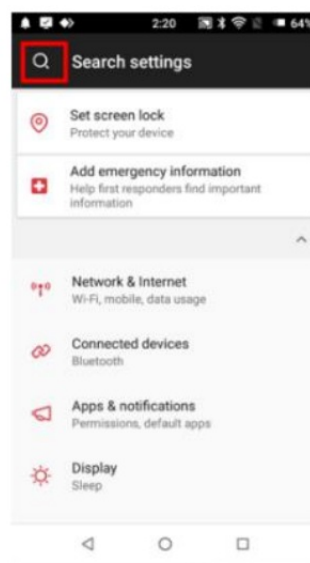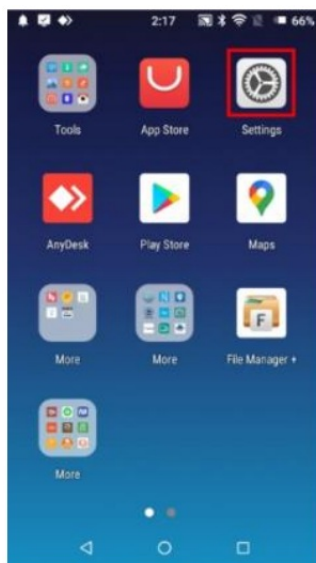

 3. Select 'Notification access', enable 'Google Play services'. Restart the device.

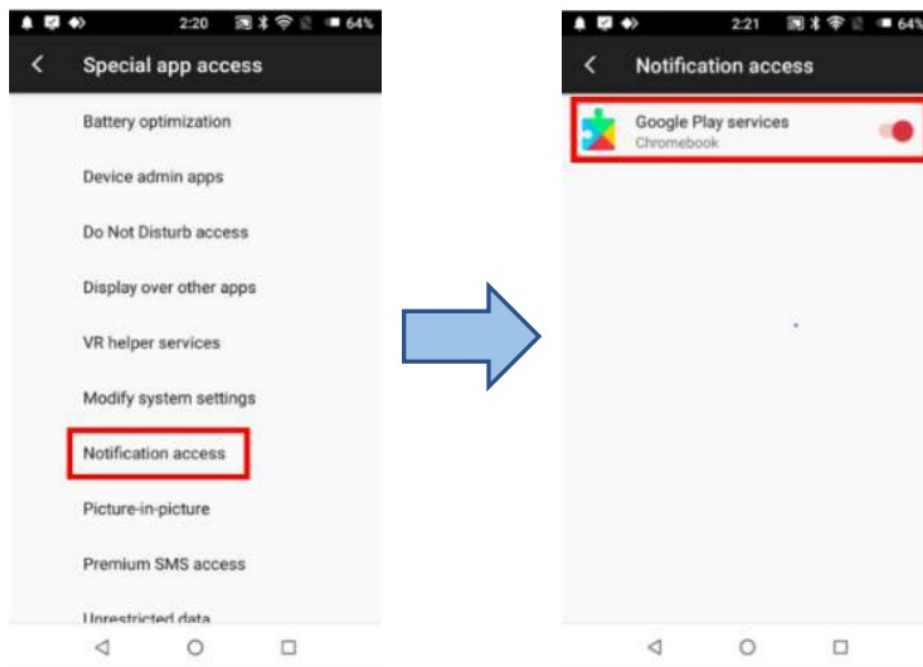

Others

External devices problem (non-iMin products: scanner, cash drawer, printer, etc.)

1. Consult relevant software providers on configuration inside the app.
2. Consult relevant hardware providers on hardware troubleshooting.

Get more help

- If you try the above troubleshooting steps but none is resolving your problem, contact the iMin support team.
- Submit ticket or email technical inquiries to service@imin.sg.

**Copyright © 2021 iMin Technology Pte Ltd,
573943
All Rights Reserved
11 Bishan Street 21 #03-05 Singapore
Tel: +65 6741 3019 Website : www.imin.sg**

Documents / Resources

	<p>imin D4 Desktop Pos Terminal [pdf] Instruction Manual D4 Desktop Pos Terminal, D4, Desktop Pos Terminal</p>
--	--