

imin I20D04 D1w POS Device User Manual

Home » imin » imin I20D04 D1w POS Device User Manual

Contents


- 1 imin I20D04 D1w POS Device
- 2 Installation guidelines
- 3 brief introduction
- 4 terminal installation
- **5 Technical Specifications**
- 6 Wrong operation of the printer
- 7 Common troubleshooting
- 8 Safety information
- 9 Disclaimer
- 10 FCC Warning
- 11 Documents / Resources
- **12 Related Posts**



imin I20D04 D1w POS Device




Installation guidelines

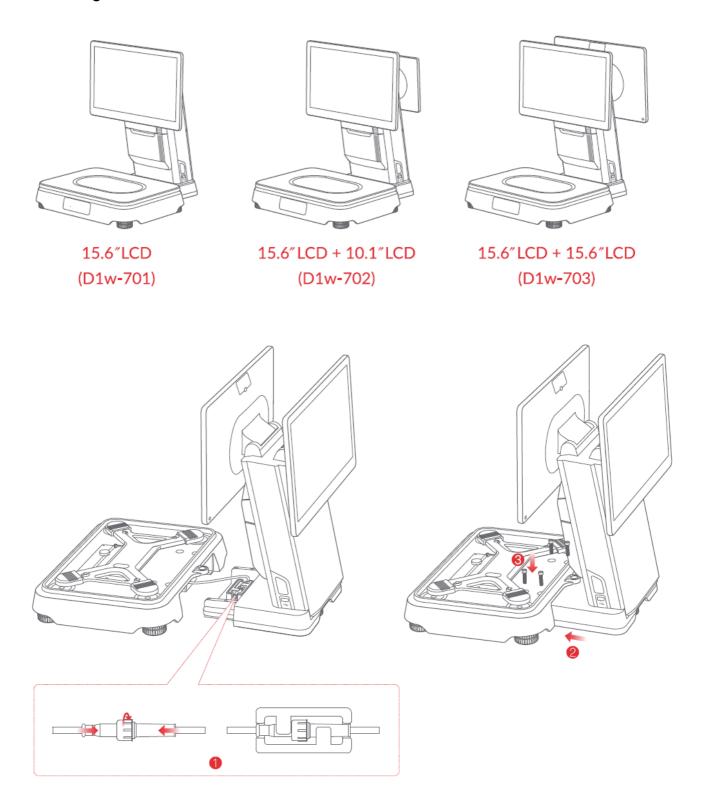

- Take out the connecting wire of POS and connect with scale (Note the alignment of the two dots) , turn the nut tight and insert it into the slot;
- Connect Scale with POS;
- Using the hexagon wrench and screws provided to assemble the POS and scale;
- Place the weighing pan on the scale; (t Using the adjustable feet under the Scale and POS to adjust the level
 of the scale such that the indicator is
 positioned at the centre of the bubble (Scale can only achieve accurate weight after adjusting the indicator).

brief introduction

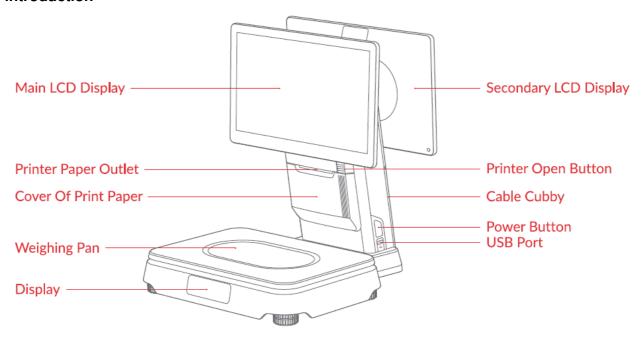

Main LCD Display

Provide touch screen for the operator. Secondary LCD Display (Customer-Facing) Use this front-facing screen (optional, configuration specs varies) to display ads to customers.

Power Button

Start up: Short press on the button when machine is in power-off mode.Power off/ restart: Long press on button 2-3 seconds to choose either option when machine is in power-on mode.Power off (alternative): Press button for 11 seconds when machine is in power-on mode.

Cable Cubby

Pull open to reveal connectors and cabling.

Printer Paper Outlet

Printing receipt when power on

Printer Open Button

Open the cover of printer and replace printing paper.

USB Port


For connecting printer or peripherals with USB Type-A interface.

Weighing Pan

Used for weighing goods.

Display

Display the weight value.

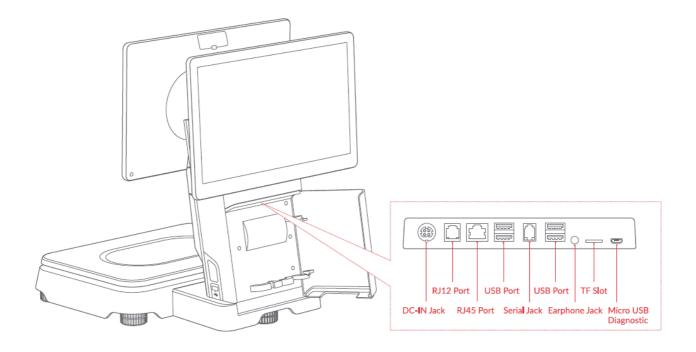

DC-IN Jack

For connecting power adapter.

RJ12 Port

For connecting external cash box (electrical pulse 120ms output instead of sustained power supply). The device only supports 24V/1A cash box. If 12V money box is used, there may be damage potential circuit of cash box.

RJ45 Port

For connecting to internet or LAN.


USB Port

For connecting printer or peripherals with USB Type-A interface.

TF Slot

For inserting external TF card.Micro USB Diagnostic/ Debugging Port For connecting diagnostic or debugging equipment.

terminal installation

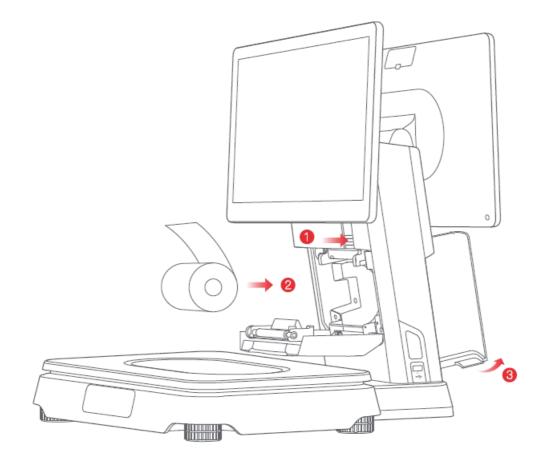

Open The Paper Cover

Press the open button and the paper cover will pop up automatically.

Install Printing Paper

Put in 80mm thermal paper and pull out a section outside of the printing paper outlet, then close the cover again.

Connect Power Cable

Connect the power adapter to the DC in jack at the bottom of the host, plug the adapter into the AC socket.

Technical Specifications

OS	Android 11		
Processor	4-Core, Quad-core ARM Cortex-ASS, 2.0GHZ		
LCD Display	15.6" resolution : FHD 1920 * 1080		
Memory/ Storage	2GB RAM + 16GB ROM		
Touchscreen	10-points capacitive screen		
WIFI	802.11 b/g/n (2.4Ghz)		
Bluetooth	Bluetooth 5.0		
Printer	80mm wide printer, diameter 80mm, with automatic cutter		
Speaker	1 * 1.SW		
External Interface	S * USB Type-A, 1 * RJ11, 1 * RJ12 (24V), 1 * RJ4S, 1 * Earphone, 1 * DC-IN, 1 * Type-C		
External SD Card	MicroSD (TF) up to 128GB		
Dimensions	38cm * 23.4cm * 46.4cm		
Power Adapter	Output power 60W, Input: AC100-240V/2.5A, Output: DC24V/2.5A		
Range	Max=15/30kg		
Division Value	e=d=5/10g		
Accuracy Level	(ill)		
Operating Temperature	-10°(- +40°(
Storage Temperature	-10°(- +50°(
Humidity	Relative humidity < 85%, no condensation phenomenon		
Altitude Limit	Below 5000 metres		

LCD Display Technical Specification 10.1" LCD display resolution : HD 800 * 1280 LCD Display Technical Specification 15.6" LCD display resolution : FHD 1920 * 1080

Wrong operation of the printer




Do not tilt the printing paper




Do not let the printing paper involve into the gap of inside cabin



Do not pull printing paper too long and then into the paper bin

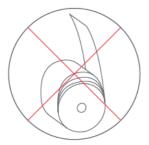


Do not put loose paper into the paper cabin

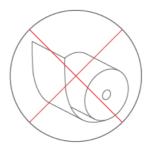

Please pay attention for the direction of pinting paper

Troubleshooting operation for paper jam



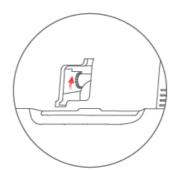

Common troubleshooting

Symptom	Solution
Crash	· Press the Power key for 11 seconds to shutdown. short press to press restart.
	· Check that the paper compartment cover is closed properly.
Printer does not work	· Check if a paper jam has occurred.
	· Check if the paper roll is inverted.
Print blank content	· Check whether 80mm thermal printer paper roll is used.
	· Check if the thermal head is dirty and, if dirty, use a cotton swab dipped in anhydrous alcohol to test it.
Print blur	· Replace with good quality thermal paper to avoid blur printing.
	· Remove the weighing pan to check if the indicator is position at the centre of the bub ble.
	· Check the 5 adjustable feet whether are in firm contact with the supporting table.
Inaccurate weighing	· Check if there is debris around and at the bottom of the X bracket which causes inac curate weighing.

	Toxic or harmful substances and elements					
Part name	Plumbum (Pb	Mercury (Hg)	Cadmium (Cd)	Chromium \ Cr(VII)) (Cr(VII))	/II Polybrominated (biphenyl	Polybrominated di phenyl ethers (PB DE)
Circuit board	X	0	0	0	0	0
Head of printe r	Х	0	0	0	0	0

Means that the content of the toxic and harmful substances in all homogeneous materials of the component is below the limit

specified in SJ/ 1113363-2006.

Means that the content of the toxic and hazardous substances at least in a homogenous material of the component exceeds the limit specified in SJ/-2006; However, the components marked with "X" in the above table are out of proportion because there is no mature alternative technology in the industry at present. Products that have reached or exceeded the environmental protection service life should be recycled and reused in accordance with the electronic information products control and management measures or local environmental laws and guidelines. They should not be discarded at will or with household waste.

Safety information

- Please plug-in power adapter to only its corresponding AC socket.
- After the installation of the Intelligent Payment Electronic Scale is completed, do not move alone to avoid human injury caused by falling.
- Do not use in explosive gas atmosphere.

- Do not disassemble the equipment. It should be serviced or recycled only by iMin or an authorised service provider.
- This is a Grade B product. The product may cause radio interference and interfere with medical devices. The user may be required to take practical measures to reduce the possibility of causing interference to radios, televisions and other electro nic devices.
- · About the battery replacement:
- 1. Do not attempt to replace the battery yourself you may damage the battery, which could cause overheating, fire and injury.
- The replaced/ used battery should be disposed according to local environmental laws and guidelines. Do not
 dispose in fire. It should be serviced or recycled by iMin or an authorised service provider, and must be
 recycled or disposed of separately from household waste.
- Do not expose the device to moisture, dampness, or wet weather, such as rain, snow or fog.
- Do not use the device in extreme cold or hot environments eg, near a fire or lit cigarette.
- Do not topple, throw, or bend.
- Use in optimally clean and dust-free environment to avoid tiny particles clogging and seeping through gaps in the device.
- Do not attempt to use the device near medical equipment.
- We will not be responsible for any damage or problem caused by third party parts or components (other than
 the original products or approved products provided by us). Without our consent, you have no right to modify or
 alter the products.
- The operating system of this product is supported by official regular OS update. If the user breached the third
 party's ROM system or change the system file by hacking, it may cause unstable, undesired system operation
 and bring security risk.

Disclaimer

Due to regular updates and enhancements made to the product, some details of this document may be inconsistent with the physical product. Please take the product you received as current standard. The right to interpret this document belongs to our company. We reserve the right to ramend this specification without prio notice.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Documents / Resources

D Dow Model: DODOO POS Clevis to Mar Minural	imin I20D04 D1w POS Device [pdf] User Manual I20D04, 2AYD5-I20D04, 2AYD5I20D04, D1w, D1w POS Device, I20D04 D1w POS Device, PO S Device
Dow Model: 20004 POS Devot Ner Mount	imin I20D04 D1w POS Device [pdf] User Manual I20D04, 2AYD5-I20D04, 2AYD5I20D04, D1w POS Device, I20D04 D1w POS Device, POS Device

Manuals+,