

[Home](#) » [imax](#) » **Immax 07540L Smart Switch for Controlling Blinds and Shutters Instruction Manual** 



Contents [[hide](#)]

- [1 Immax 07540L Smart Switch for Controlling Blinds and Shutters Instruction Manual](#)
- [2 Technical specifications:](#)
- [3 RESET DEVICE \(ENTER PAIRING MODE\)](#)
- [4 INSTALACE](#)
- [5 Safety information](#)
- [6 Maintenance](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Immax 07540L Smart Switch for Controlling Blinds and Shutters Instruction Manual



Smart switch for controlling blinds and shutters Immax NEO, WiFi
PN: 07540L

Technical specifications:

- Protocol: Wi-Fi 802.11 b/g/n
- Frequency: 2.4MHz
- Maximum RF output power: WiFi: 20dBm
- Power consumption: AC 100-240V AC 50/60Hz
- Max. load: 800W
- Max. current: 10A
- Wireless range: 30 m direct line of sight, 10 m in built-up areas
- Operating temperature: -10 °C to 40 °C.
- Operating humidity: < 80%
- Network standby power (Pnet): 0.01mA
- Protection rating: IP20
- Material: plastic, glass
- Dimensions: 80 x 80 x 47mm
- Weight: 115g

IMMAX NEO PRO APPLICATION AND DEVICE PAIRING

Scan the QR code and download the Immax NEO PRO app. Or search for and install the Immax NEO PRO app from the App Store or Google Play. Launch the Immax NEO PRO app and tap 'Register' to create your own account using your email address.

Once you have registered, log in using your account.

CONNECTING VIA BLUETOOTH

Turn on Bluetooth on your phone and open the Immax NEO PRO app, tap '+' in the upper right corner of the "Home" page, and then select 'Add Device'.

Wait for Bluetooth to search for devices, then select 'Add'.


Enter your WiFi network access details.

Wait for the device to connect.




RESET DEVICE (ENTER PAIRING MODE)

Press the buttons shown in the picture simultaneously for at least 3 seconds. The LED backlight will start flashing. Then release the buttons. The device should now be in pairing mode.

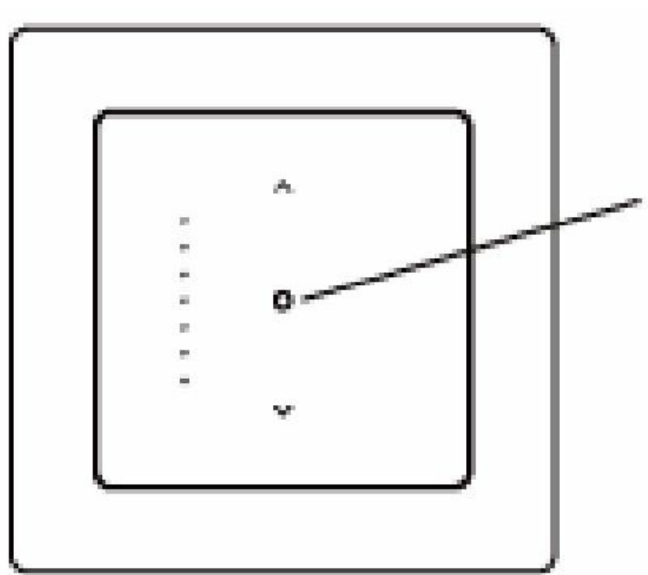

- Smart Curtain Switch

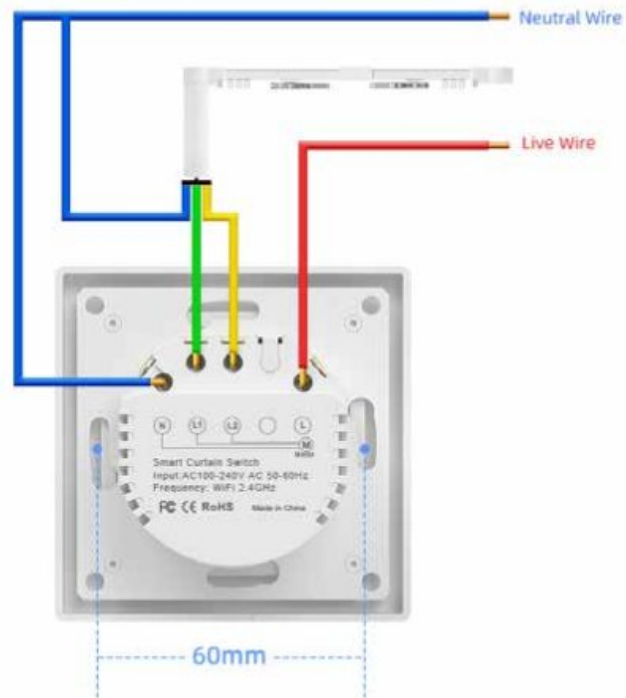

CONNECTION DIAGRAM

INSTALACE



1. Disconnect the button and frame from the base



2. Connect to the switch according to the wiring diagram



3. Install the base in the desired location



4. Install the frame and then the button

Safety information

WARNING: Keep out of reach of children. This product contains small parts that may cause choking or injury if swallowed.

WARNING: Every battery has the potential to leak harmful chemicals that can damage your skin, clothing, or the area where the battery is stored. To avoid the risk of injury, do not allow any substance from the battery to come into contact with your eyes or skin. Any battery may rupture or even explode if exposed to re or other forms of excessive heat. Handle batteries with care. To reduce the risk of injury caused by improper handling of batteries, take the following precautions:

- Do not use different brands and types of batteries in the same device
- When replacing batteries, always replace all batteries in the device
- Do not use rechargeable or reusable batteries.
- Do not allow children to install batteries without supervision.
- Follow the battery manufacturer's instructions for proper handling and disposal.

WARNING: The product and batteries should be disposed of at a recycling centre. Do not dispose of them with normal household waste.

WARNING: To ensure safe use of the product, the wires must be connected in accordance with applicable regulations at the installation site. Installation must only be carried out by a person with the appropriate electrical certification. During installation or if a fault is detected, the power cable must always be disconnected from the socket (in the case of direct connection, the relevant circuit breaker must be switched off). Incorrect installation may result in damage to the product and injury.

WARNING: Do not disassemble the product, as there is a risk of electric shock.

WARNING: Use only the original power adapter supplied with the product. Do not operate the device if the power cord shows signs of damage.

WARNING: Follow the instructions in the enclosed manual.

Maintenance

Protect the device from contamination and dirt. Wipe the device with a soft cloth; do not use harsh or coarse materials.

DO NOT use solvents or other aggressive cleaning agents or chemicals.

A Declaration of Conformity has been issued for this product. For more information, visit www.immax.cz

If you have any questions or need advice, please contact us at podpora@immaxneo.cz

Abbreviated version of the Declaration of Conformity

The manufacturer IMMAX hereby declares that the radio equipment type 07540L complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available on the following websites: www.immax.cz, www.immax.eu

Safety information for this product can be downloaded from www.immax.cz

If you have any questions or need advice, please contact us at podpora@immaxneo.cz.

Notes

The symbol indicates that the product must not be disposed of with municipal waste. For proper disposal, take the product to a designated collection point.

 
When disposing of the device, remove the batteries and light bulbs, if possible.

Take old appliances to designated collection points; they do not belong in municipal waste.

Waste electrical and electronic equipment from private households can be handed in free of charge at public collection points.


As the end user, you are responsible for deleting personal data from your old appliance.

ASEKOL: AK-016010, WEEE Reg. No. DE 88927148

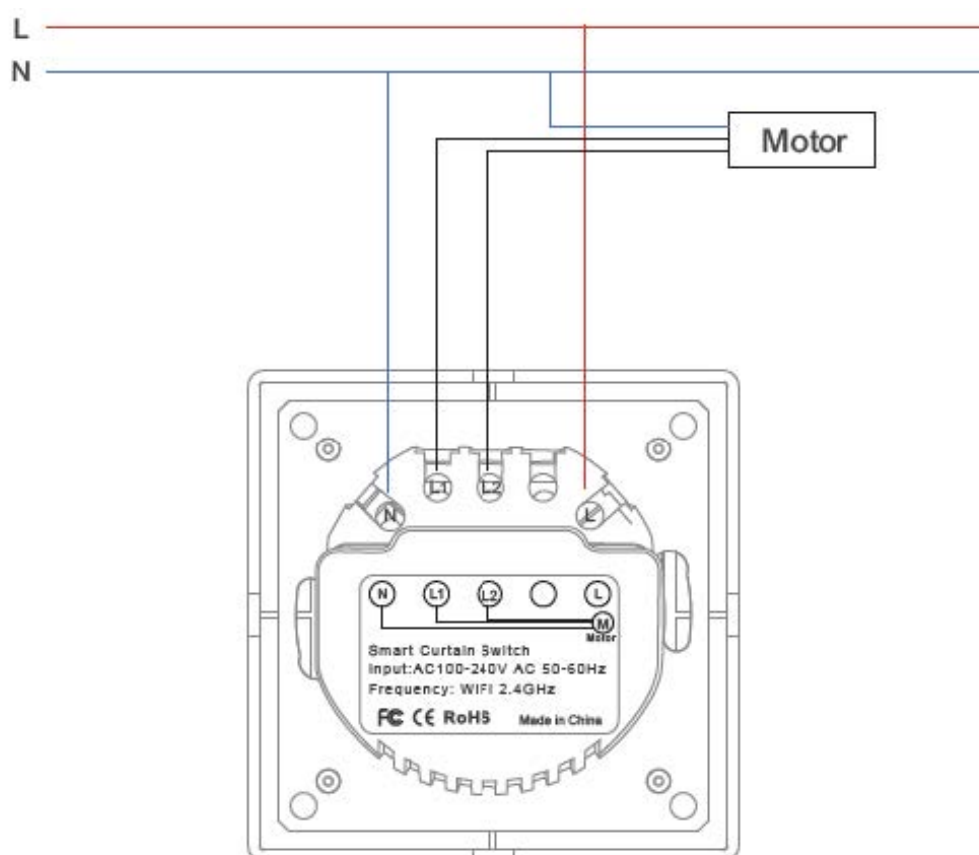

Read More About This Manual & Download PDF:

Documents / Resources

	<p>Immax 07540L Smart Switch for Controlling Blinds and Shutters [pdf]</p> <p>Instruction Manual</p> <p>07540L, 07540L Smart Switch for Controlling Blinds and Shutters, Smart Switch for Controlling Blinds and Shutters, Switch for Controlling Blinds and Shutters, Controlling Blinds and Shutters, Blinds and Shutters</p>
---	---

References

- [User Manual](#)

immax

07540L, 07540L Smart Switch for Controlling Blinds and Shutters, Blinds and Shutters, Controlling Blinds and Shutters, immax, Smart Switch for Controlling Blinds and Shutters, Switch for Controlling Blinds and Shutters

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.