



IMOU IPC-C22E Cue 2 Wireless WiFi Camera User Guide

[Home](#) » [imou](#) » IMOU IPC-C22E Cue 2 Wireless WiFi Camera User Guide

IMOU IPC-C22E Cue 2 Wireless WiFi Camera



Contents

[hide

1 Packing List

2 Camera Introduction

3 Operating with Imou Life App






4 Installing Camera

5 FAQ


6 Documents / Resources

7 Related Posts

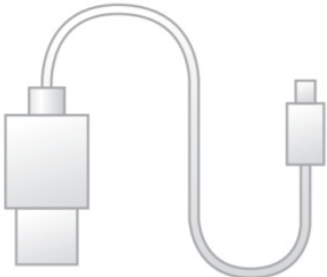Packing List

 <p>Camera x1</p>	 <p>Power Adapter x1</p>	 <p>QSG x1</p>
	 <p>Power Cable x1</p>	 <p>Mounting Foam x1</p>

Camera Introduction

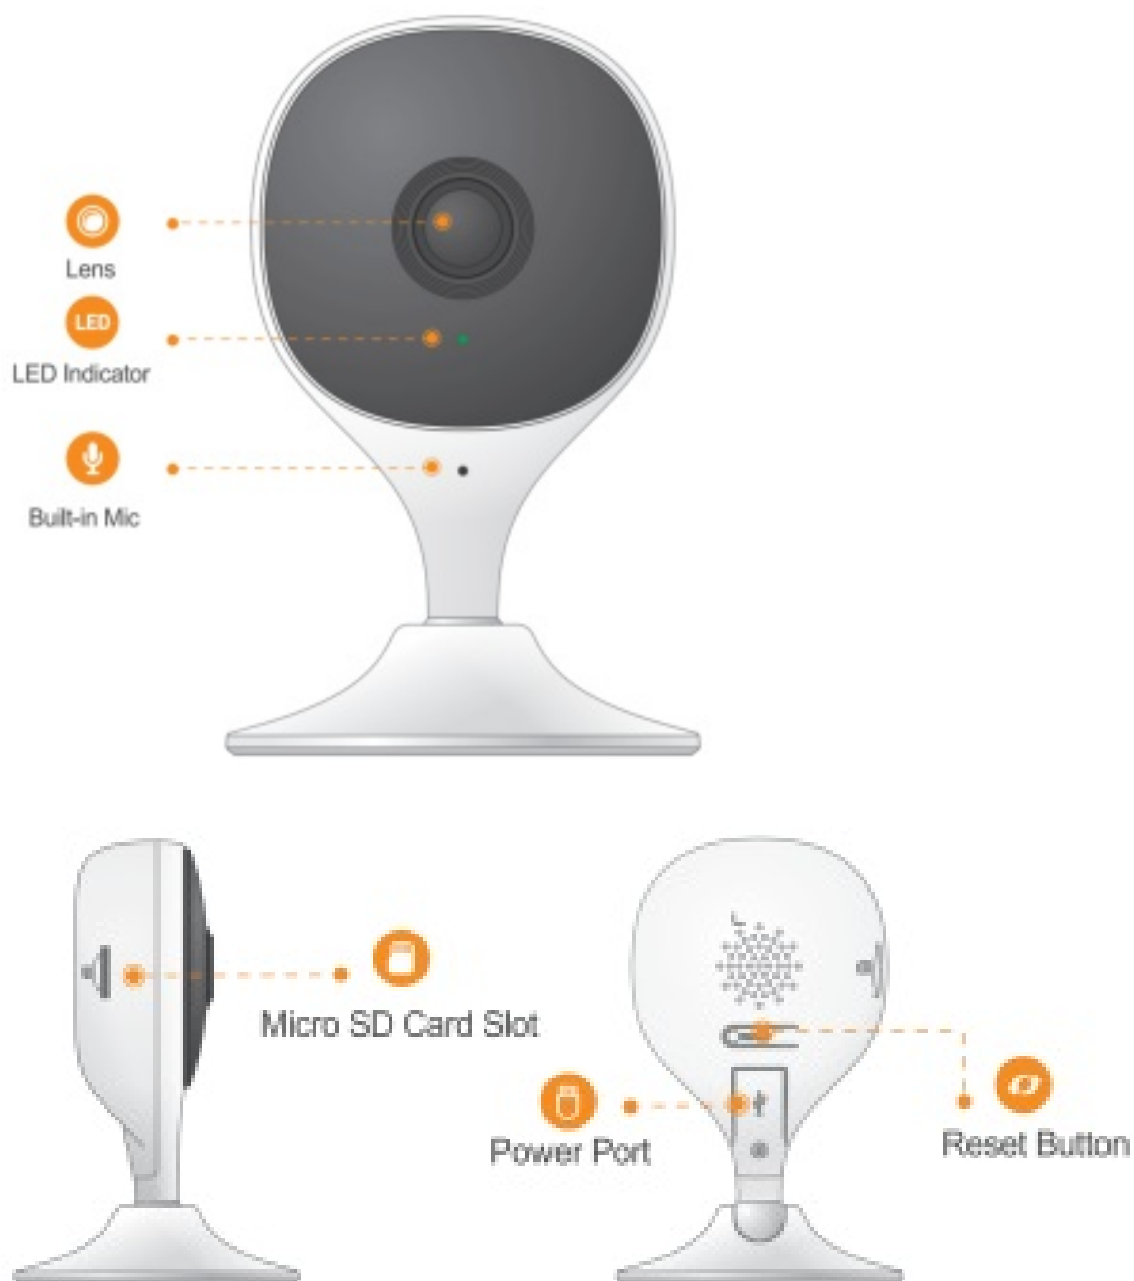

Note: Press and hold the reset button for 10 s to reset the camera.
The pattern of the LED indicator is included in the following table.

Off	<ul style="list-style-type: none"> Powered off/LED turned off Rebooting after reset
Red light on	<ul style="list-style-type: none"> Booting Device malfunction
Green light flashing	Waiting for network
Green light on	Operating properly
Red light flashing	Network connection failed
Green and red lights flashing alternately	Firmware updating

Operating with Imou Life App

Step 1

Scan the following QR code or search “Imou Life” in Google Play or App Store to download and install the app.

Note: If you have installed the app, update it to the latest version.



Step 2

Run Imou Life App, and then register an account for the first use.

Step 3

Connect the camera to power source with the power adapter.

Step 4

Camera indicator flashes for booting to be finished, and then the camera with green light

Step 5

Do the following operations to finish adding camera



Note:

- If you have more than one camera, do step 5 to add them one by one.
- If the Wifi network has changed or the indicator status goes wrong reset the camera, and then do step 5 to add it again

Installing Camera

Note: Make sure that the mounting surface is smooth and strong enough to hold at least three times of the device weight.



Step 1 Stick the mounting foam on the camera pedestal.

Step 2 Power up the camera.

Step 3 Adjust the mounting angle as needed, and then attach the pedestal on the mounting surface, press and hold it for 10s.

FAQ

► **Q: How to reset the camera to factory default?**

Press the reset button for 10 s, then the camera will restore to factory default and reboot automatically.

► **Q: The device cannot boot up?**

Check the LED indicator status. If it is not green light on, reset the camera and configure the camera again.

► **Q: What is the Wi-Fi password of the camera's Wi-Fi signal?**

The password is the safety code on the device label.

► **Q: The device is offline?**

Check the indicator status:

- If the green light is on, check whether the router can connect to the Internet. If Internet is working, restart the camera.
- If the red light flashes, reset the camera, and then configure the camera again.
- If the red light is on, it means the camera is faulty.

► **Q: How to connect the camera to a new Wi-Fi?**

- If camera is online, select **Device > Network Config** to change the Wi-Fi connection.
- If camera is offline, reset the camera, and then configure the camera again.

For more questions, please visit www.imoulife.com/web/support/help, or scan the QR code below.



Documents / Resources



[IMOU IPC-C22E Cue 2 Wireless WiFi Camera](#) [pdf] User Guide

IPC-C22E, Cue 2 Wireless WiFi Camera, IPC-C22E Cue 2 Wireless WiFi Camera, Wireless WiFi Camera, WiFi Camera, Camera