



Imou IPC-CX2E-A Consumer Camera Instructions

[Home](#) » [imou](#) » Imou IPC-CX2E-A Consumer Camera Instructions 

Contents

 
- [1 Imou IPC-CX2E-A Consumer Camera](#)
- [2 Package Content](#)
- [3 Camera Introduction](#)
- [4 Setting up Camera](#)
- [5 Installing Camera](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Imou IPC-CX2E-A Consumer Camera




Package Content

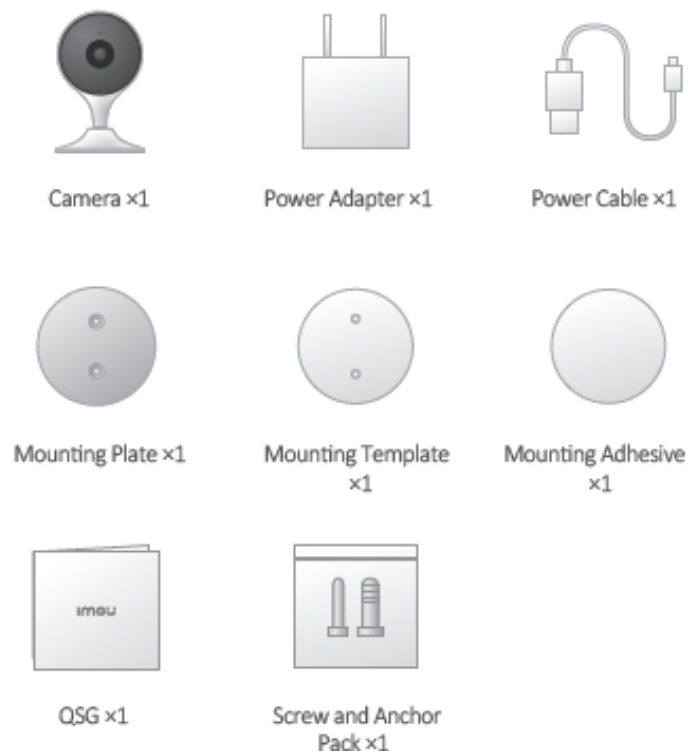

Camera Introduction

 Disconnect the camera from the power before installation or taking out its SD card.

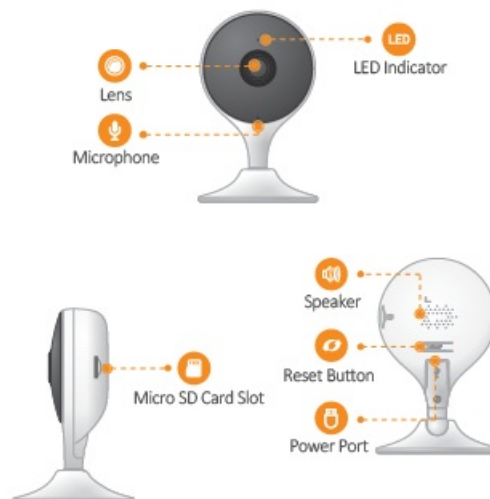

Press and hold the reset button for 10 s to reset the camera. See the table below for definitions of camera's LED behaviors.

LED Indicator Status	Device Status
Off	Powered off/LED turned off Rebooting after reset
Solid red	Booting Device malfunction
Flashing red	Network connection failed
Flashing green	Ready for network configuration
Solid green	Operating properly
Flashing green and red alternately Updating firmware	

Setting up Camera

Follow the steps below to add the camera to your Imou account.

1. Step 1 Scan the following QR code or search “Imou Life” in Google Play or
2. Step 2 Launch the app. Then create an account if you are a new user.
3. Step 3 Connect the camera to power source with the power adapter.
4. Step 4 After the camera boots up, the LED indicator light flashes green (wire-free camera) or is on solid green (wired camera). If the LED indicator status goes wrong, reset the camera.
5. Step 5 Follow the on-screen prompts to add the camera. Repeat the adding process if you have multiple cameras.



 
About the Guide

- This manual is for reference only. The operation of the actual product shall prevail if there is any inconsistency.
- All the designs and software are subject to change without prior written notice.
- All trademarks and registered trademarks mentioned are the properties of their respective owners.
- Please visit our website or contact your local customer service if there is any problem when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Installing Camera


Make sure that the mounting surface is strong enough to hold at least three times the weight of the camera.

Use Mounting Adhesive

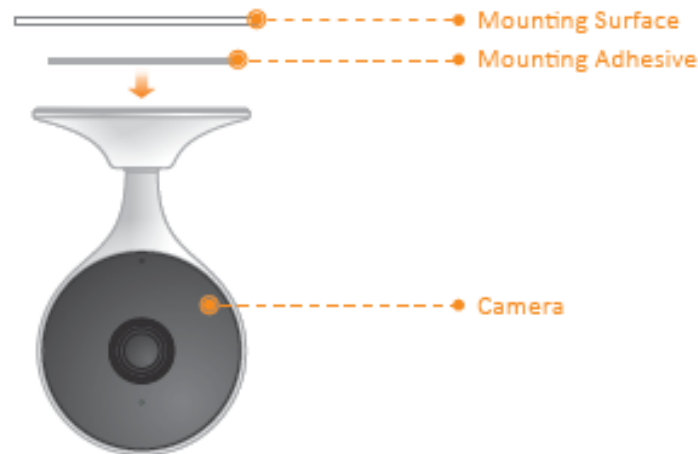

1. Step 1 Peel off the mounting adhesive and stick it to the bottom of the camera.
2. Step 2 Press and hold the device against the installation area for 10 seconds and then release.
3. Step 3 Power on the camera and then adjust its angle properly.

 Use Mounting Plate

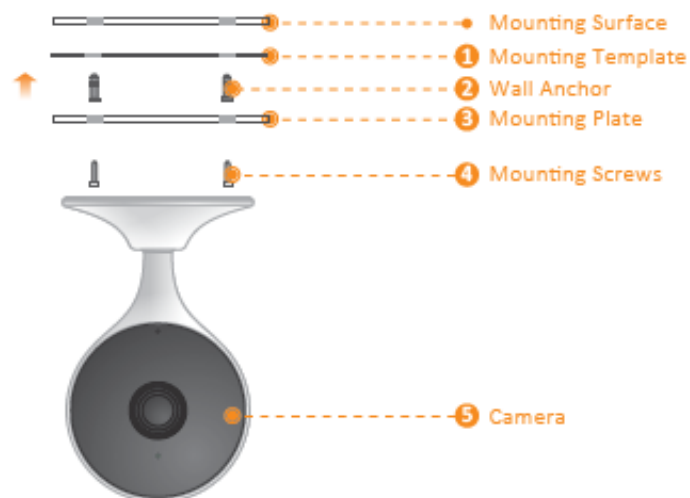

1. Step 1 Peel off the mounting template and stick it to the desired installation area.
2. Step 2 Drill holes into the mounting surface as the mounting template marks and then insert wall anchors as needed.
3. Step 3 Secure the mounting plate to the mounting surface with included mounting screws.
4. Step 4 Put the camera onto the mounting plate and ensure they attract to each other.
5. Step 5 Power on the camera and then adjust its angle properly.

FAQ

- Q: The device cannot boot up or work as expected?
Check the LED indicator status. If the light is not in green, press and hold the reset button for 10 s to reset the

camera.

- Q: How to connect the camera to another Wi-Fi network?
 - If the camera is online, select Device Details > Network Config to change the Wi-Fi connection on the app.
 - If the camera is offline, reset the camera, and then configure the camera again.
- Q: Connection takes too long?
 - Check if the distance between the camera and the router, and that between the camera and the smart phone is both within 5 m (16.4 ft) during the connection.
 - Check the Wi-Fi configuration of the router: Select the channel to auto, and the mode to 11bgn mixed.

- Q: When the micro SD card is full, how is the recorded video saved?

When the micro SD card is full, the system will overwrite the previous recorded videos. Save the important information in time.

- Q: Where are the recorded videos saved?

If you have activated the cloud storage and installed a micro SD card, the recordings will be both saved to the card and cloud. If the cloud storage is deactivated, the recordings are saved to the SD card. Videos recorded during live view or playback is saved on your phone.


- Q: The device is offline?

Check the indicator status:

- Solid green: Check whether the router can connect to the Internet. If the network is connected, restart the camera.
- Flashing red: Reset the camera, and then configure the camera again.
- Solid red: The camera is faulty.

For more questions, please scan the QR code below or visit: www.imoulife.com/web/support/help

Documents / Resources

	Imou IPC-CX2E-A Consumer Camera [pdf] Instructions IPC-CX2E-C, IPCCX2EC, 2AVYF-IPC-CX2E-C, 2AVYFIPCCX2EC, IPC-CX2E-A, IPCCX2EA, 2AVYF-IPC-CX2E-A, 2AVYFIPCCX2EA, IPC-CX2E-A Consumer Camera, Consumer Camera, Camera
---	---

References

- [imou Support](#)