



IMOU IPC-CX2S-C Consumer Camera User Guide

[Home](#) » [imou](#) » IMOU IPC-CX2S-C Consumer Camera User Guide 









Quick Start Guide
Version 1.0.1
1.251.32.17596-000


Contents

 
- [1 Package Content](#)
- [2 Camera Introduction](#)
- [3 Setting up Camera](#)
- [4 Installing Camera](#)
- [5 Use Mountkg Pin](#)
- [6 FAQ](#)
- [7 About the Guide](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Package Content

	
Caned xl	Power Adapter xl
	
Mottling Pate xl	Mooring Template xl
	
CISG xl	Sc

Camera Introduction


 Disconnect the camera from the power before installation °flaking out its SD card.

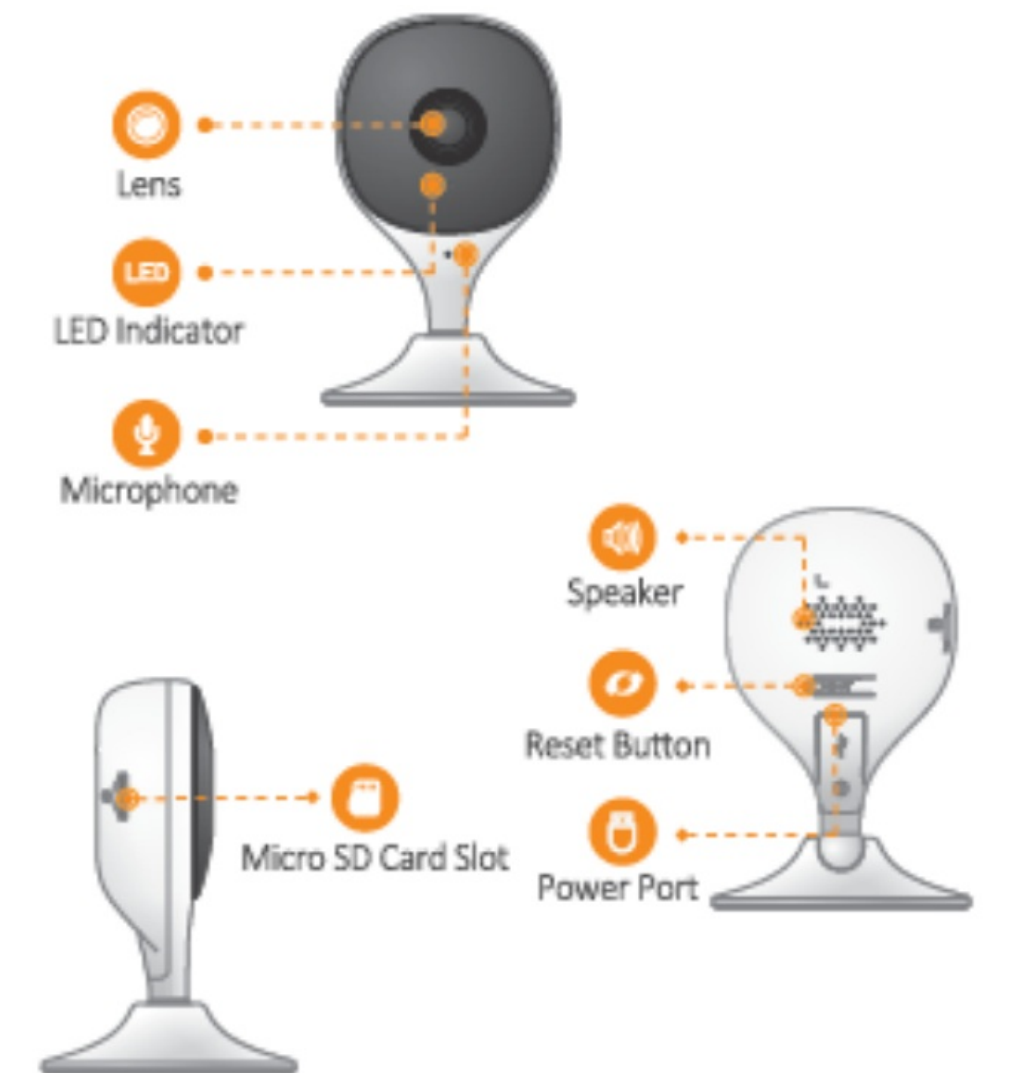

Press and hold the reset button for 10 s to reset the camera.
See the table below for definitions of the camera's LED behaviors.

LED Indicator Status	Device Status
Off	<ul style="list-style-type: none"> Power, QED turned off Rebooting after reset
Solid red	Booting Device malfunction
Flashing red	Network connection failed
Flashing green	Ready for network configuration
Solid green	Operating proudly
Flashing weer and red alternately	Updating firm: iya re

Setting up Camera

Follow the steps below to add the camera to your Imou account

Step 1 Scan the following QR code or search “Imou life” in Google Play or App Store to download and install the

app.



If you already use the app, make sure that you are using the latest version.



Step 2 Launch the app. Then create an account if you are a new user.

Step 3 Connect the camera to the Knife source with the power adapter.

Step 4 After the camera boots up, the LED indicator light flashes green (wire-free camera) or is on solid green (wired camera).



If the LED indicator status goes wrong, reset the camera.

Step 5 Follow the on-screen prompts to add the camera. Repeat the adding process if you have multiple cameras.

 


Installing Camera



Mae is sure that the mounting surface is strong enough to hold at least three times the weight of the camera.

Use Mounting Adhesive

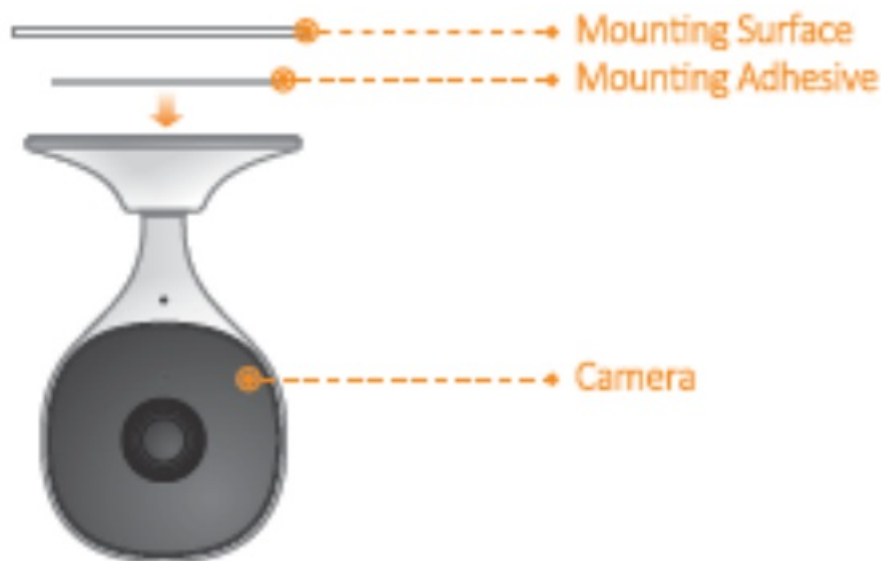

Step 1 Peel off the mounting adhesive and stick it to the bottom of the camera.

 


To paste the device firmly, clean and dry the mounting surface in advance.

Step 2 Press and hold the device against the installation area for 10 seconds and then release.

Step 3 Power on the camera and then adjust its angle properly,

Use Mounting Pin

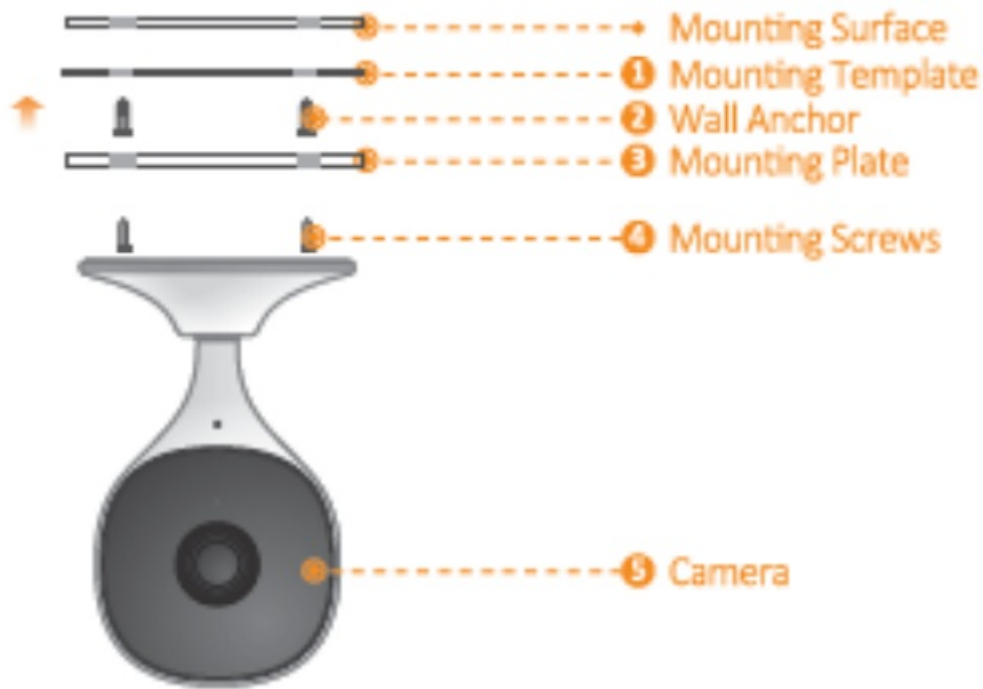

Step 1 Peel off the mounting template and stick it to the desired installation area

Step 2 Drill holes into the mounting surface as the mounting template marks and then insert wall anchors as needed.

Step 3 Stage the mounting plate to the mounting surface with included mounting screws.

Step 4 Put the anchors onto the mounting plate and ensure they attract each other.

Step 5 Push on the camera and then adjust its angle properly.

FAQ

Q: the device cannot boot up or work as expected?

Check the LED indicator status. If it is not in green, press and hold the reset button for 10 s to reset the camera.

Q: How to connect the camera to another Wi-Fi network?

- If the camera is online, select Dots > Network > Wi-Fi to change the Wi-Fi connection and the App.
- If the camera is offline, reset the camera and then configure the camera again.

Q: Connection takes too long?

- Check if the distance between the camera and the router, at that between the camera and the Wi-Fi router is both within 5 m (16.4 ft) during the connection.
- Check the router config. Router of the router: Set the channel to auto, and the mode to 11n mixed.

Q: When the micro SD card is full, how is the recorded video saved?

When the micro SD card is full, the system will overwrite the previous recorded video. Save the important information in time.

Q: where are the recorded videos saved?

If you have activated the cloud storage and installed a micro 513 card, the recordings will be both saved to the card and cloud. if the cloud storage is deactivated, the recordings are saved to the 50 card- 'videos recorded during live view or playback is saved on your phone,

Q: The device is offline?

Check the indicator status:

- Solid green: Check whether the router can connect to the Internet If the network is connected, restart the camera_ a Flashing red: Reset the camera, and then configure the camera again.
- Solid red: The camera Is faulty.




<http://www.imoulife.com/web/support/help>

For more questions, please scan the QR code below or [visit: www.irnoulife.com/tweb/support /help](http://www.irnoulife.com/tweb/support/help)

About the Guide

- This manual is for reference only. The operation of the actual product shall prevail if there is any inconsistency
- All the designs and software are subject to change without prior written notice.
- All trademarks and registered trademarks mentioned are the properties of their respective owners.
- Please visit our website or contact your local customer service if there is any problem when using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Documents / Resources

	<p>IMOU IPC-CX2S-C Consumer Camera [pdf] User Guide IPC-CX2S-C, IPCCX2SC, 2AVYF-IPC-CX2S-C, 2AVYFIPCCX2SC, IPC-CX2S-C Consumer C amera, Consumer Camera</p>
---	---