



IMPECCA FTF-4300 Tower Fan with Remote Control User Guide

[Home](#) » [IMPECCA](#) » IMPECCA FTF-4300 Tower Fan with Remote Control User Guide 

Contents

- [1 IMPECCA FTF-4300 Tower Fan with Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Getting Started and Assembly](#)
- [5 What's in the Box?](#)
- [6 How to Operate](#)
- [7 Cleaning](#)
- [8 TECHNICAL SPECIFICATIONS](#)
- [9 SIX MONTH LIMITED WARRANTY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



IMPECCA FTF-4300 Tower Fan with Remote Control



Product Information

Model: FTF-4300

Brand: IMPECCA

Website: www.impecca.com

Version: 1.1

Appliance Type: Tower Fan with Remote Control

Product Usage Instructions

Initial Safety Instructions

- Read all instructions before use to ensure safety.
- Do not use this product in a window.
- This appliance has a polarized plug. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- This product has overload protection (fuse). If the fuse blows, unplug the product and follow the fuse replacement steps provided. If the replacement fuse blows, contact an authorized service facility for examination and/or repair.
- This appliance is for household use only. Do not use outdoors.

READ ALL INSTRUCTIONS BEFORE USE TO ENSURE SAFETY, AS THEY MAY NOT ALL BE OBVIOUS.


- Any use of this product or its accessories in any manner not recommended by the manufacturer may cause injury to persons or damage to the appliance.
- This product has no user-serviceable parts except for the fuse. Other than the instructions provided in this manual, do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing.
- Do not allow a child to use this appliance. Keep the appliance out of children's reach at all times. Children should be supervised to ensure that they do not play with this appliance.
- Keep any parts or packaging materials well away from children. These are a potential source of suffocation or other danger.
- Always operate the appliance on a dry, flat, stable surface.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities that may lead to improper use or injury from operating the appliance.
- Discontinue any operation of the appliance if any of its parts malfunction or are damaged in any manner. Take the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not use the appliance if it has been submerged or placed under running water.
- Do not leave the product unattended while in use. Unplug the product from the electrical outlet when not in use.
- Before the appliance is used, check the unit (including the power cord) and all parts for any faults or defects. Do not operate the fan if the motor, housing, cable or any other parts appear to be damaged.
- Do not operate the fan in the presence of explosive or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking, or other heating appliance.
- Avoid contact with moving fan parts.

Getting Started and Assembly


1. Carefully remove the fan from the carton and pass the cord through the base.
2. Assemble the two base halves together by positioning the base half with the alignment pin over the other base half with the alignment sockets. Press the two halves together until flush.
3. Assemble the base to the tower bottom by aligning the 4 base sockets onto the tower bottom pins. Tighten the thumb screws securely.

Thank you for purchasing this quality fan from IMPECCA! To assemble your new fan:

1. Carefully remove the fan from the carton. Pass the cord through the base. Assemble the two base halves together. Position the base half with the alignment pin, over the other base half with the alignment sockets. Press the two halves together until flush.

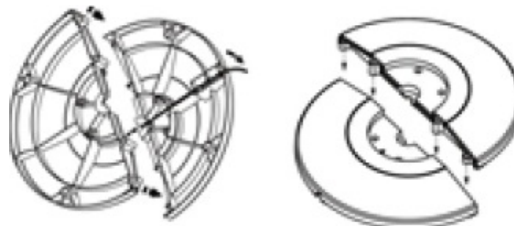

2. Assemble the base to the tower bottom. With the tower on its side, align the 4 base sockets onto the tower bottom pins. Tighten the thumb screws securely.

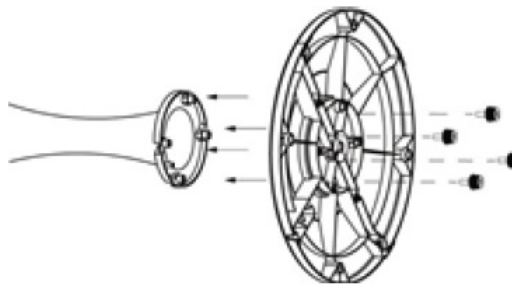

What's in the Box?

Please verify your box contains the following items:

- Fan with Remote Control



- User's Guide (Model: FTF-4300)




- Warranty (inside this User Guide)



- Tech Support Card





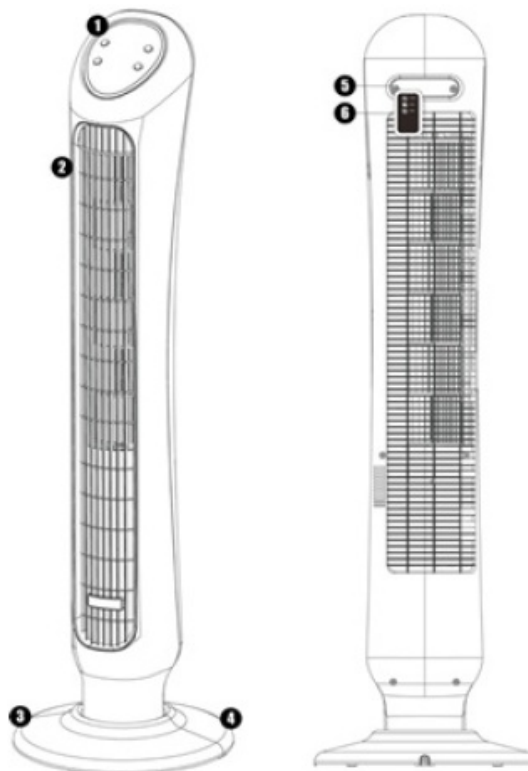

Unit Overview and Features



1. Control panel
2. Grill
3. Front base
4. Rear base
5. Carry handle
6. Remote control

How to Operate

1. This fan can be operated using the Manual Controls located on top of the unit or by the Remote Control.
2. Place the fan on a firm and level surface.
3. Plug the cord set into the outlet.

	On/Off: To turn fan on, press the Power button.
	Oscillation: To activate press the Oscillation button once. Press again to turn off.
	Sound Level/Speed Control: Press the Fan button repeatedly to change level.
	Auto-off Timer: This setting will automatically turn your fan off from 1 to 8 hrs. 1 hour: Press one time 2 hours: Press two times 3 hours: Press three times 4 hours: Press four times 5 hours: Press five times 6 hours: Press six times 7 hours: Press seven times 8 hours: Press eight times Turn Timer off: Press nine times or press power button

Remote Control

1. Install batteries (AAA size, not supplied) as shown.
2. All functions performed with the Remote Control work identically to the Manual Controls.
3. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Do not dispose of batteries in fire. Batteries may explode or leak.



Cleaning

Clean the fan regularly according to the instructions provided in the user manual.

- Be sure your fan is in the OFF position.
- Unplug the fan before cleaning.
- To clean inlet and outlet ribs, use a common household vacuum.
- Do not use water to clean these parts of the Fan.
- Do not disassemble for cleaning.

- Do not immerse the fan in water and never allow water to enter the Motor Housing.
- Do not use gasoline, paint thinner or other chemicals to clean the fan.

Storage Instructions

For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry place.

Troubleshooting Tips

If your fan fails to operate:

- Make sure the power cord is plugged into a working electrical outlet.
- If the problem persists, return the fan to the place of the original purchase or refer to the warranty for further assistance. Do not attempt to open the motor housing yourself as it may void the warranty and cause damage or personal injury.

If your Fan fails to operate: Be sure the power cord is plugged into a working electrical outlet. If you have a problem that cannot be resolved by the step listed above, please return the fan to the place of the original purchase or see your warranty. Do not attempt to open the motor housing yourself; doing so may void your warranty and cause damage to the fan or personal injury.

OTHER ELECTRICAL SAFETY

WARNING: To reduce the risk of fire, electric shock or personal injury:

- Do not use this fan with any solid-state speed control device.
- Unplug fan before cleaning or servicing.
- To reduce the risk of electric shock and injury to persons, do not use this product in a window.
- This appliance has a polarized plug, meaning that one blade on the plug is wider than the other. To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet and follow the fuse replacement steps later in this guide. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

- Completely assemble the product for use before plugging it into an outlet.
- Make sure the power cord does not touch any hot surfaces.
- Extension cords are not recommended for use with this appliance.
- Do not plug or unplug the product into/from the electrical outlet with wet hands.
- Discontinue any operation of the appliance if the cord or plug are damaged.
- To disconnect the fan from an electrical outlet, ensure the product is turned off and then pull directly on the plug; do not pull on the Power Cord.
- Do not put any stress on the power cord where it connects to the product, as this is likely to cause a malfunction or safety hazard.
- Always ensure the product is un-plugged from the electrical outlet and that all parts have stopped before assembling, disassembling, re-locating, or cleaning it.

- Do not route the cord underneath any carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or other appliances. Arrange the cord so it is away from areas where it could be tripped over.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY
DO NOT USE OUTDOORS
READ AND SAVE THESE INSTRUCTIONS

TECHNICAL SPECIFICATIONS

- 43" Tower Fan
- High-end Design with a Built-in Carry Handle
- Easy to set – Digital Controls with display
- Remote Control – Get full control on the fan settings through the Remote controller
- 110° Wide Oscillation gives you undisturbed and active cooling dynamic.
- 5-Speed Quiet Cooling Settings – Delivers blasts of Cool & Refreshing Air with peace of mind
- 8 Hour Timer – Select from a Half-Hour to 8-Hours shut off timer
- 60 W motor

CUSTOMER SUPPORT

Visit our website to contact us, find answers to Frequently Asked Questions, and for other resources which may include an updated version of this user's manual.

www.impecca.com

If you wish to contact us by phone, please be sure to have your model number and serial number ready and call us between 9:00am and 6:00pm ET, at +1 866-954-4440.

Keep tabs on Impecca's newest innovations and enter contests via our social network feeds:

Facebook: www.facebook.com/Impecca/

Instagram: www.instagram.com/impecca/

Twitter: @impeccausa

SIX MONTH LIMITED WARRANTY

Impecca® warrants this product against defects in material and workmanship to the original purchaser as specified below. Please register your product online within fourteen (14) days of purchase. PARTS – if the product is determined to have a manufacturing defect, within a period of six (6) months from the date of the original purchase, Impecca® will repair or replace the product parts at no charge (for parts) to consumers in the U.S.A. and Canada.

LABOR – if the product is determined to have a manufacturing defect, within a period of thirty (30) Days from the date of the original purchase, Impecca® will repair or replace the product at no charge to consumers in the U.S.A. and Canada. After thirty (30) Days, it will be the responsibility of the consumer. Shipping costs to and from our warranty service center are the sole responsibility of the consumer. To obtain warranty service by an authorized Impecca® service center, please email us at: service@impecca.com to obtain a Repair and Maintenance Authorization (RMA) number and to locate the Warranty Service Center nearest you. Once authorized, you must mail the product to the authorized Impecca® service center in its original product packaging materials or equivalent, to prevent damage while in transit. Further, should Impecca® determine that the product is outside of the Warranty terms, Impecca® will return the product to sender at sender's expense without being repaired or replaced, unless authorized by the consumer to service the out-of-warranty product at consumer's expense. All handling or restocking charges for returns and/or replacements shall be non-refundable. Impecca® specifically excludes from this warranty any non-electric/mechanical attachments, accessories, and disposable parts including, but not limited to, outside case, connecting cables, batteries, and AC adapters. Impecca® reserves the

right to repair or replace defective products with the same, equivalent, or newer models. We reserve the right to either repair or replace product at our discretion. Replacement may be either new or refurbished and while every endeavor will be made to ensure it is the same model, if same model is not available, it will be replaced with a model of equal or higher specification. Normal "Wear and Tear" is not covered by this, or any other, warranty. Further, Impecca® hereby reserves the right to determine "Wear and Tear" on any and all products. Tampering or opening the product casing or shell will void this warranty in its entirety. In addition, this warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; has been altered or modified without the written permission of Impecca®; has been serviced by a non-authorized repair center of Impecca®; has not been properly maintained or operated according to the operation manual; has been used for commercial, non-household purposes; has been cosmetically damaged; was not imported by Impecca®; was not manufactured according to specification of the United States market; was damaged due to improper installation or neglect by the consumer; was damaged due to improper packaging in shipment to the Warranty Service Center; was damaged due to natural disasters; or if the serial number for the product has been removed or defaced.

ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO SIX (6) MONTHS PARTS AND THIRTY (30) DAYS LABOR FROM THE DATE OF THE ORIGINAL RETAIL PURCHASE OF THIS PRODUCT. THESE WARRANTIES AND REMEDIES ARE THE SOLE AND EXCLUSIVE WARRANTIES AND REMEDIES IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. NO OTHER WARRANTIES, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, ARE GIVEN. IMPECCA® IS NOT RESPONSIBLE OR LIABLE FOR ANY DAMAGE, WHETHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, DIRECT OR OTHERWISE, OR WHETHER KNOWN OR SHOULD HAVE BEEN KNOWN TO IMPECCA®, INCLUDING LOST PROFITS, GOODWILL, AND PROPERTY AND PERSONAL INJURY RESULTING FROM ANY BREACH OF WARRANTY, THE INABILITY TO USE THE PRODUCT OR UNDER ANY LEGAL THEORY IN CONTRACT OR TORT. IMPECCA LIABILITY IS LIMITED TO THE ACTUAL PURCHASE PRICE PAID TO THE RETAIL SELLER OF THE DEFECTIVE PRODUCT.

No Impecca® dealer, agent, or employee is authorized to make any modification, extension, change or amendment to this warranty without the written consent and authorization from Impecca®. Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, or do not allow a limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Important: Be Sure to Register Your Product at WWW.IMPECCA.COM within 14 Days

Impecca® USA


PA 18711

www.impecca.com

service@impecca.com

- Do not send any returns to this address, as they may be lost and this will delay your repair and service process.

Documents / Resources

	<p>IMPECCA FTF-4300 Tower Fan with Remote Control [pdf] User Guide FTF-4300 Tower Fan with Remote Control, FTF-4300, Tower Fan with Remote Control, Tower Fan, Fan</p>
---	---

References

-  **Impecca!**

-  [Instagram](#)

Manuals+.