



# iN-Command NCTP1002X2 Sensor RV Tire Pressure Monitoring System Instructions

[Home](#) » [iN-Command](#) » iN-Command NCTP1002X2 Sensor RV Tire Pressure Monitoring System Instructions 

## iN-Command NCTP1002X2 Sensor RV Tire Pressure Monitoring System Instructions



### Contents

- [1 Assembly Instructions](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## Assembly Instructions

1. Pull parts per JDE work order NCTP100R on the outside of the bag. Seal the bag.



2. Remove the bag with all the NCTP100R add the red gasket and hardware pack to the bag. Add a 2×4 label.




3. Put the remaining parts back in the original box. Label with 2×4 label to cover up the original part number.



4. Get first article inspection.

## Documents / Resources

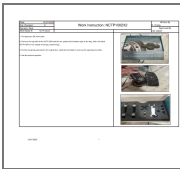

[iN-Command NCTP1002X2 Sensor RV Tire Pressure Monitoring System](#) [pdf] Instructions  
NCTP1002X2 Sensor RV Tire Pressure Monitoring System, NCTP1002X2, Sensor RV Tire Pressure Monitoring System, Pressure Monitoring System, Monitoring System