



inateck BCST-21 Wireless Bluetooth 2D Barcode Reader User Guide

 
[Home](#) » [inateck](#) » inateck BCST-21 Wireless Bluetooth 2D Barcode Reader User Guide 

Contents

- [1 inateck BCST-21 Wireless Bluetooth 2D Barcode Reader](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Quick Start](#)
- [5 Use of BCST-21](#)
 - [5.1 Connection](#)
 - [5.2 Setting](#)
- [6 Status Indicator](#)
- [7 PRODUCT SPECIFICATION](#)
- [8 Packing List](#)
- [9 FCC NOTE](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

inateck[®]

inateck BCST-21 Wireless Bluetooth 2D Barcode Reader

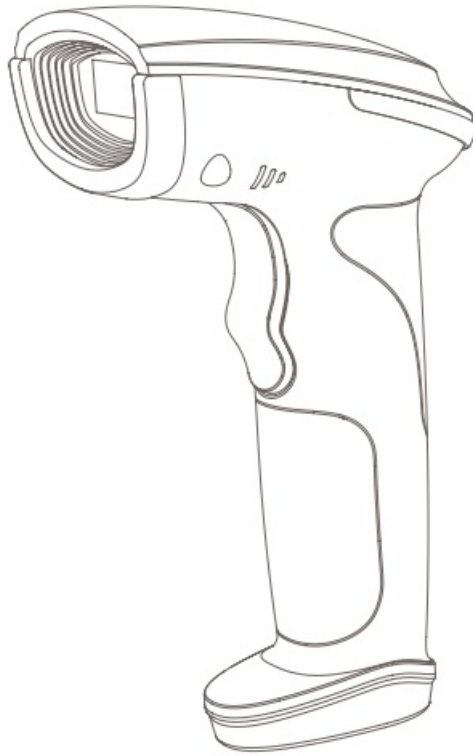

Product Information

Product Name	BCST-21
Manufacturer	Shenzhen Inateck Technology Co., Ltd.
Manufacturer Address	Suite 2507, Block 11 in Tian An Cloud Park, Bantian Street, Longgang District, Shenzhen, Guangdong, China
Service Center (North America)	Inateck Technology Inc. Address: 2078 Francis St., Unit 14-02, Ontario, CA 91761, USA Tel: +1 (909) 698 7018 (Working day 9 AM – 5 PM PST)
Service Center (United Kingdom)	Inateck Technology (UK) Ltd. Address: 95 High Street, Office B, Great Missenden, United Kingdom, HP16 0AL Tel: +44 20 3239 9869

Product Usage Instructions

 
To use the BCST-21 product, please follow the instructions below:

1. Ensure that the product is fully charged or has fresh batteries installed.
2. Turn on the BCST-21 by pressing the power button located on the device.
3. Pair the BCST-21 with your desired device (e.g., smartphone, tablet, computer) by following the pairing instructions specific to your device.
4. Once paired, the BCST-21 is ready to use. It can be used for scanning barcodes, capturing data, and transmitting information wirelessly to the connected device.
5. To scan a barcode, aim the BCST-21 at the barcode and press the scan button. The barcode data will be transmitted to the connected device.
6. If you encounter any issues or have questions about the product, please refer to the user manual or contact our

service centers for assistance.

Quick Start

Product Illustration

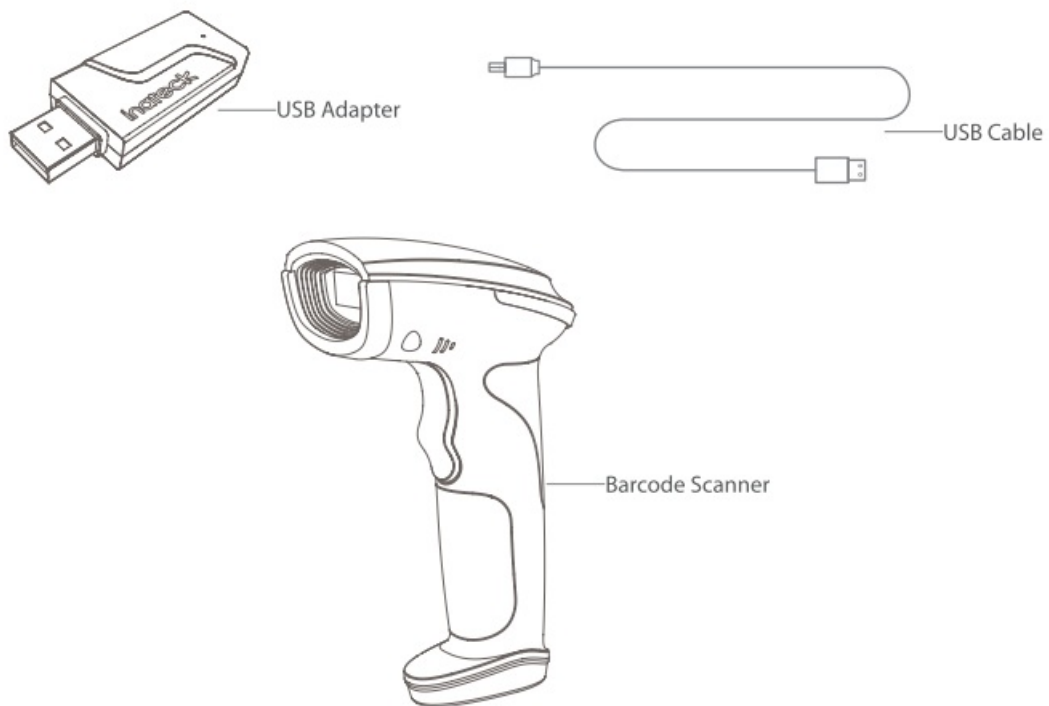

How to Set up successfully built.

- Plug the USB adapter into a computer. If the indicator light flashes once, it means the connection is
- Press the scanning button, and the barcode scanner will power on and connect the USB adapter automatically.

Frequently Used Barcodes

Note:

- Function Setting Steps: [Enter Setup] – [Specific Function Setting (for example, Low Volume)] – [Exit and Save]
- If there is a (*) before a certain setting barcode in this manual, it indicates the factory preset.



Enter Setup



Factory Reset



(*) Auto Red Light Shut off Mode



Continuous Scanning Mode



Hands-free Mode



Exit and Save



Enter Setup



(*)Enable Auto Sleep



Disable Auto Sleep



Silent



Low Volume



Exit and Save



Enter Setup



(*)Medium Volume



High Volume



Convert All Letters into Upper Case



Convert All Letters into Lower Case



Exit and Save



Enter Setup



(*)Do not Convert Letter Case



(*)Add Enter as the Suffix



Use Tab as Default Suffix



Exit and Save



Enter Setup

Use of BCST-21

 
Connection

- **Wireless Adapter Connection**

Wireless Adapter connection is the default setting. Plug the USB adapter into a computer and the LED indicator will flash once, indicating that the connection is successful. Short press the trigger on the scanner and it will emit a red beam. Then, the barcode scanner can work under wireless adapter mode.

Note:

If you receive an error during data transfer via the wireless connection, please scan the setting barcodes in sequence to reconnect the scanner to the adapter: “Enter Setup-wireless Adapter Mode-Exit and Save”



(*) Wireless Adapter Mode



Exit and Save



Enter Setup

- **Wired Connection**

Connect the scanner with your computer via the USB cable. The BCST-21 will transmit data via the USB cable to your computer.

- **Bluetooth Mode(HID)**

The Bluetooth mode (HID) is not the default mode. To enter this mode, please scan the setting barcodes in sequence:”Enter Setup-Bluetooth Pairing-Exit and Save”



Bluetooth Pairing(HID Mode)

Charging

Connect the scanner to a computer/charger directly via the included USB cable to charge it.



Exit and Save



Enter Setup

Setting

System Setting



(*) Windows



Mac OS

Keyboard Setting



(*)US Keyboard



Exit and Save



Enter Setup



German Keyboard



French Keyboard



Italian Keyboard



Spanish Keyboard



Exit and Save



Enter Setup



UK Keyboard



Canadian Keyboard



Japanese Keyboard (Romaji)



Exit and Save



Enter Setup



Swedish Keyboard



Dutch Keyboard



Danish Keyboard



Exit and Save



Enter Setup



Norwegian Keyboard



Portuguese keyboard



Polish keyboard



Exit and Save

Inventory Mode

Users may use inventory mode to keep the scanned barcodes in the cache of BCST-21 and upload them to a computer in batches. Under inventory mode, users are not restricted to the time or location when uploading data. Of course, history data can be cleared in the cache. More details about inventory mode are as below.

Note:

You don't have to "Enter Setup" or "Exit and Save" when read the 5 barcodes below. Simply scan the barcodes to get the functions.



Inventory Mode



(*)Common Mode



Clear Data in Cache
(for Inventory Mode Only)



Data Upload (for Inventory Mode Only)



Upload the Number of Scanned Barcodes
(for Inventory Mode Only)

Status Indicator

- **Green LED flashes once** Data is read and uploaded to the computer
- **Blue LED flashes once** Data is read and stored in cache
- **Blue LED stays on** The scanner is under Setting Mode
- **Yellow LED stays on** Low battery
- **Red LED stays on** Charging (red light off when fully charged)

PRODUCT SPECIFICATION

- **Material** ABS, PC, TPU
- **Voltage** DC 5V
- **Battery Capacity** 2000 mAh
- **Barcode Supported** Codabar, Code 11, Code 128, Code 39, Code 93, EAN-8, EAN-13, ISBN, ISSN, MSI, UPC-A, UPC-E, IATA 25, Industrial 25 / Standard 25, Interleaved 25, Matrix 25, China Postal Code
- **Resolution** 3mil
- **Scan Method** Auto/Manual
- **Lowest Contrast** 20%
- **Decoding Angle** Turning Angle 30°, Elevation Angle 75°, Deflection Angle 80°
- **Communication Frequency** 2.402GHz~2.480GHz

Packing List


- BCST-21 * 1
- USB Cable * 1
- User Guide * 1

FCC NOTE

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)
- This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Users, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- **Note:** The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

- The device has been evaluated to meet general RF exposure requirement.
- This equipment complies with FCC’s RF radiation exposure limits set forth for an uncontrolled environment.
- This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Documents / Resources

	inateck BCST-21 Wireless Bluetooth 2D Barcode Reader [pdf] User Guide 2A2T9-BCST21, 2A2T9BCST21, BCST-21, BCST-21 Wireless Bluetooth 2D Barcode Reader, Wireless Bluetooth 2D Barcode Reader, Bluetooth 2D Barcode Reader, 2D Barcode Reader, Barcode Reader, Reader
---	---