Inateck KB02028 Bluetooth Keyboard





Inateck KB02028 Bluetooth Keyboard Instruction Manual

Home » inateck » Inateck KB02028 Bluetooth Keyboard Instruction Manual

Contents


- 1 Inateck KB02028 Bluetooth
- Keyboard
- **2 Product Diagram**
- 3 Power ON/OFF KB02028
- 4 Pair KB02028 with a Surface Go
- 5 Troubleshooting in Bluetooth Pairing
- **6 LED Indicator**
- 7 Keyboard Backlight
- **8 Function Keys**
- 9 Restore Factory Settings
- 10 Check Battery Level
- 11 Charging
- **12 Product Specification**
- 13 Packing List
- 14 FCC Note
- 15 EU Declaration of Conformity
- **16 Service Center**
- 17 Documents / Resources
 - 17.1 References



Inateck KB02028 Bluetooth Keyboard



Product Diagram

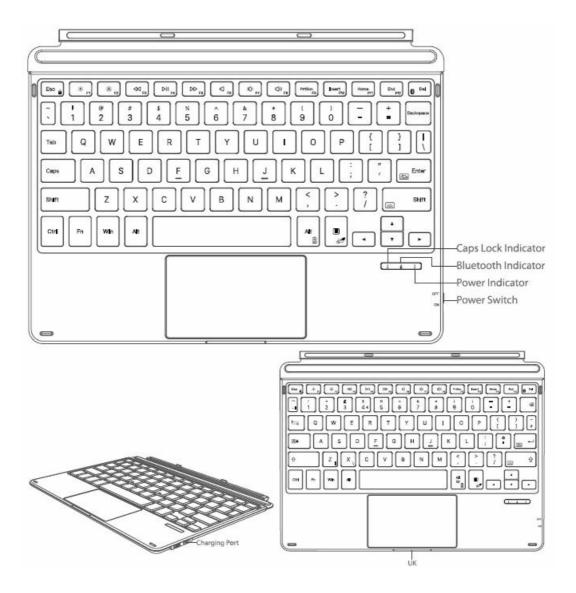

Power ON/OFF KB02028

1. **Power ON:** Toggle the switch to ON.

2. Power OFF: Toggle the switch to OFF.

Pair KB02028 with a Surface Go

- Step 1: For the first time you pair KB02028 with a Surface Go, you just need to toggle the switch on the KB02028 to the "ON" position and KB02028 will enter Bluetooth pairing mode automatically. To enter this mode, you can also hold simultaneously for 3 seconds and then the Bluetooth indicator will flash to indicate that KB02028 is under pairing mode.
- **Step 2:** On the Surface Go, select All Settings Devices Add Bluetooth or Other Device Bluetooth, and then "Inateck KB02028" will show up as an available device.
- Step 3: Select "Inateck KB02028" on Surface Go.
- Step 4: When the blue indicator keeps on, it means that KB02028 is paired with the Surface Go successfully.

Note:

If KB02028 doesn't work even though the blue indicator stays on, it might have been paired with another nearby computer. In this case, please follow the steps in "Troubleshooting in Bluetooth Pairing" to resolve the issue.

Troubleshooting in Bluetooth Pairing

- Step 1: Delete all the Bluetooth pairing records related to KB02028 on the Surface Go.
- Step 2: Hold simultaneously for 3 seconds. The 3 indicators will flash 3 times simultaneously and then the blue indicator will flash, which means that the keyboard enters Bluetooth pairing mode. Under this mode, please re-pair the keyboard with the Surface Go.

LED Indicator

| Indicator | Status Meaning | |
|---------------------------|---------------------|--|
| Charging Indicator-Red | Blinking | Low Battery, <20% |
| | Solid | Charging |
| Charging Indicator-Green | Solid Fully Charged | |
| Caps Lock Indicator-White | Solid | Caps Lock On |
| | Off | Caps Lock Off |
| Bluetooth Indicator-Blue | Solid | Bluetooth Connected |
| | Off | Bluetooth Unconnected |
| | Fast Blinking | Bluetooth Pairing |
| | Slow Blinking | Bluetooth Reconnecting |
| | | The second secon |

Keyboard Backlight

1. Hold Fn + simultaneously to adjust the backlight color. 7 colors are available in total.

2. Hold Fn + simultaneously to adjust the backlight brightness. 3 levels are at your choice.

Note:

When the battery level is lower than 20%, the backlight turns off automatically.

Function Keys

| Esc | Undo | ÷ò: | Brightness- | -\0;- | Brightness+ |
|------------|-------------------|-------------------|-------------|-------|-------------|
| | Enable Fn Lock | F1 | F1 | F2 | F2 |
| Idd | Last track | DII _{F4} | Play/Pause | DDI | Next track |
| F3 | F3 | | F4 | F5 | F5 |
| © F6 | Mute | ©3; | Volume- | (1)) | Volume+ |
| | F6 | F7 | F7 | F8 | F8 |
| PrtScn | Take a screenshot | Insert | Insert | Home | Home |
| F9 | F9 | F10 | F10 | F11 | F11 |
| End F12 | End F12 | Del | Delete | 2 | |

How to Use FI-F12

You may press the Fn + keys to enable/disable the Fn lock. (The keyboard disables the Fn lock by default.)

When the Fn lock is enabled:

- The press can trigger the functionality owned by
- Press Fn + odim the brightness of the screen;
- This method applies to all F Keys (
 F1 F12).

When the Fn lock is disabled (Default Status):

Press the to dim the brightness of the screen. Press simultaneously to use the functionality owned by

Fn+Key Combinations

| Fn + Alt | Check the Battery Level | |
|-----------|------------------------------|--|
| Fn + E | Turn on/off Touch Pad | |
| Fn + ®Del | Enter Bluetooth Pairing Mode | |
| Fn + Esc | Enable/Disable Fn Lock | |


Restore Factory Settings



Note:

After the factory reset, the keyboard would enter Bluetooth pairing mode automatically. You need to re-pair: KB02028 with your Surface Go.

Check Battery Level

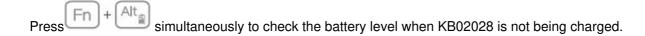

| Blinkina Frequency | Battery Level | | |
|--------------------|---------------|--|--|
| Once | 0-25% | | |
| Twice | 25%-50% | | |
| Three Times | 50%-75% | | |
| Four Times | 75%-100% | | |

Charging

When the battery level is under 20%, the red indicator will flash. Please recharge the KB02028 in time. The recommended charging voltage is 5V. To charge KB02028, you can connect the USB cable to the charger of a cellphone or the USB port of a computer. The keyboard will be fully charged after 3 hours.

Note: It is not recommended to charge KB02028 with a fast charger.

Product Specification

| Bluetooth Version | V5.3 | |
|--------------------------------|--------------|--|
| Bluetooth Range | 10m | |
| Charging Time | 2-3h | |
| Operating Time (Backlight on) | About 5h | |
| Operating Time (Backlight off) | About 50h | |
| Operating Temperature | -10°C -55°C | |
| Bluetooth Frequency Range | 2402-2480MHz | |
| Actuation Force | 60 ± 10g | |
| Battery Capacity | 500mAh | |

Packing List

- KB02028 *1
- Charging Cable *1
- Instruction Manual *1

FCC Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the Users, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note:

The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirements. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

EU Declaration of Conformity

- Inateck Co., Ltd. hereby declares that this device complies with the Directive 2014/53/EU.
- A copy of the Declaration of Conformity can be accessed from https://www.inateck.de/pages/euro-compliance.

Service Center

Europe

F&M Technology GmbH

• **Tel:** +49 341 5199 8410 (Working day 8 AM – 4 PM CET)

• Fax: +49 3415199 8413

• Address: Fraunhoferstraße 7, 04178 Leipzig, Deutschland

North America

Inateck Technology Inc.

• **Tel:** +1 (909) 698 7018 (Working day 9 AM -5 PM PST)

• Address: 2078 Francis St., Unit 14-02, Ontario, CA 91761, USA

EC/REP

- F&M Technology GmbH Fraunhoferstraße 7, 04178 Leipzig, Deutschland
- Tel: +49 341 5199 8410

UK/REP

- Inateck Technology (UK) Ltd. 95 High Street, Office B, Great Missenden, United Kingdom, HP16 OAL
- Tel: +44 20 3239 9869

Manufacturer

Shenzhen Inateck Technology Co., Ltd.

Address:

Suite 2507, Block 11 in Tian An Cloud Park, Bantian Street, Longgang District, Shenzhen, Guangdong, China.

Documents / Resources



<u>Inateck KB02028 Bluetooth Keyboard</u> [pdf] Instruction Manual KB02028, KB02028 Bluetooth Keyboard, Bluetooth Keyboard, Keyboard

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.