Home » inateck » inateck KB06101 Keyboard Instruction Manual

inateck KB06101 Keyboard Instruction Manual

Contents

- 1 inateck KB06101 Keyboard
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Frequently Asked**

Questions

- **5 Product Diagram**
- 6 Bluetooth Pairing
- 7 Shortcut Keys
- **8 LED Indicator**
- 9 Restore Factory Defaults
- 10 Check Battery Level
- 11 Charging
- **12 Product Specification**
- 13 Packing List
- **14 FCC**
- 15 Documents / Resources
 - 15.1 References

inateck

inateck KB06101 Keyboard

Product Information

Specifications:

Product Name: KB06101 Keyboard

• Language: English

• Connectivity: Bluetooth

• Compatibility: Windows devices

Product Usage Instructions

Bluetooth Pairing:

Step 1: Slide the power switch to the On position. The keyboard will enter Bluetooth Channel 1 pairing mode.

Step 2: To enter Bluetooth pairing mode manually, hold [Fn] + [Bluetooth Channel 1 Indicator] simultaneously.



Shortcut Keys:

The keyboard features various shortcut keys for functions like Undo, Brightness adjustment, Lock, Task View, Screenshot, Media controls, and more. These operations are applicable only to Windows devices.

Mouse Crossover Function:

If connected to two different Windows devices via Bluetooth channels 1 and 2, you can enable the mouse crossover function to transfer files between devices under the same local area network. Note that the transfer speed depends on the network bandwidth.

How to Use F1-F12:

You can press [Fn] + [Lock] to unlock/lock the function keys.

The behavior of the function keys changes based on the Fn Lock status.

Combination of Fn and Other Keys:

Short press [Fn] + [Bluetooth Channel Indicator] to enable/disable Fn Lock. Long press initiates pairing mode.

LED Indicator:


The keyboard features LED indicators for Caps Lock, Bluetooth connection status, and battery level. Refer to the manual for detailed meanings of different indicator states.


Frequently Asked Questions

Q: How do I reset Bluetooth pairing on the keyboard?

A: To reset Bluetooth pairing, go to the Bluetooth settings on your device, delete the existing pairing records for Inateck KB06101, and perform a factory reset by holding [Fn] + [Bluetooth Channel Indicator] simultaneously for 3 seconds.

Product Diagram

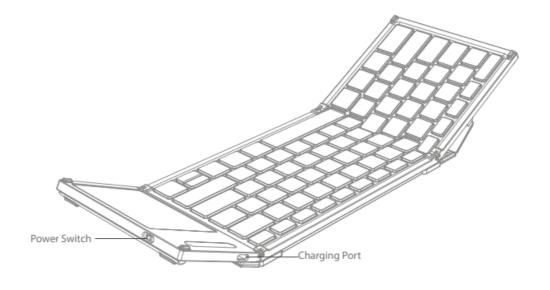

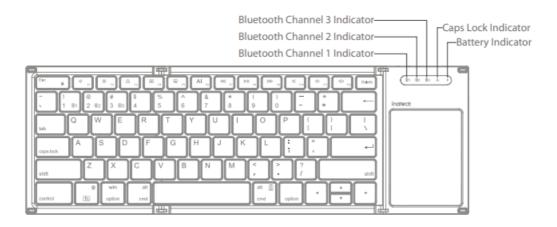



Bluetooth Pairing

Step 1: For the first use, slide the power switch to the On position and then KB06101 will automatically enter

Bluetooth Channel 1 pairing mode. To enter the Bluetooth pairing mode, you can also hold simultaneously. When the Bluetooth indicator flashes in blue, it means KB06101 is in Bluetooth Channel 1 pairing mode.

Step 2: On your iPad or Windows devices, turn on Bluetooth and then "Inateck KB06101" will show up in available devices list.

On Windows 11 devices, go to "Settings—Bluetooth and other devices—Turn on Bluetooth—Add devices—Bluetooth" to find "KB06101".

On iPad OS 17 devices, go to "Settings—Bluetooth—Turn on Bluetooth" to find "KB06101".

Step 3: Tap "Inateck KB06101" to pair it with your device and then the Bluetooth indicator will stay solid in blue, which means that Bluetooth pairing is completed.

Fix Bluetooth Pairing Problems

Step 1: Go to Bluetooth page, find "Inateck KB06101" in paired devices list and delete the previous pairing record. If there are multiple pairing records, please delete them all.

Step 2: Hold simultaneously for 3 seconds and then the five indicators will blink for 3 times once the factory reset is completed.

Step 3: Turn off Bluetooth on your device and turn it back on. Then, pair it with your Inateck KB06101.

Shortcut Keys

Esc	Undo	.⇔. F1	Brightness-	F2	Brightness+
☐ F3	Lock	60 _{F4}	Task View	F5	Take a screenshot
Al F6	AI (Inateck Origin)	F7	Last Track	DII F8	Play/Pause
DD F9	Next Track	F10	Mute	(1) F11	Volume-
(1) F12	Volume+	Delete	Delete		

Note: The following operations are only applicable to Windows.

Al Key Function Description

On Windows devices, the AI key can be used to wake up Inateck Origin, a software that supports AI translation, AI chat, and other functions.

- Hold the Al key for 2 seconds to access the Inateck Origin download page. You can also search for Inateck Origin on the Microsoft Store to download it.
- Short press the Al key:
 - 1. If no text is copied, it will activate Al chat;
 - 2. If text is copied, it will activate AI translation.

Mouse Crossover Function

If the keyboard is connected to two different Windows devices via Bluetooth channels 1 and 2 (up to three devices) under the same local area network, you can enter Inateck Origin to enable the mouse crossover function, allowing the transfer of documents, spreadsheets, images, and other files. Note: The transfer speed is affected by the bandwidth of the local area network.

How to Use F1-F12 You may press fn + Esc to unlock/lock the fn. (The keyboard disables the lock by default.)

When the Fn Lock is enabled:

Press F1 can trigger the functionality owned by F1 key;

Press the combination of Fn+F1 simultaneously will dim the brightness of the screen.

This method applies to all F Keys (F1-F12).

When the Fn Lock is disabled (Default Status):

Press F1 can dim the brightness of the screen.

Press the combination of Fn+F1 simultaneously will trigger the functionality owned by F1 key.

The Combination of Fn and Other Keys

fn + Esc	Enable/Disable Fn Lock
	Short press to enter 🕅 1
fn + (1 81)	Long press to enter ®1 pairing mode
	Short press to enter $\$2$
fn + (@ 2 82)	Long press to enter ② pairing mode
#	Short press to enter 3
fn]+["3 83]	Long press to enter 🕄 3 pairing mode

LED Indicator

Indicator	Status	Meaning
	Solid	Caps Lock On
Caps Lock Indicator	Off	Caps Lock Off
	Blinking	Bluetooth Pairing
	Off	Bluetooth Unconnected
Bluetooth Indicator	Solid	Bluetooth Connected
	Slow Blinking	Bluetooth Reconnecting
	Blinking	Battery level<20%
	Solid in Red	Charging
Battery Indicator	Solid in Green	Fully charged

Bluetooth Channel	Color
Bluetooth Channel 1	Blue
Bluetooth Channel 2	Orange
Bluetooth Channel 3	Green

Restore Factory Defaults

Hold + for 3 seconds and then the five indicators will blink for 3 times once the factory reset is completed.

Check Battery Level

Hold fn + simultaneously to check the battery level according to the blinking frequency of the red battery indicator.

Blinkina Frequency	Battery Level
Once	0-25%
Twice	25%-50%
Three Times	50%-75%
Four Times	75%-100%

Charging

When the battery level is under 20%, the red battery indicator will blink. You can connect the included USB cable to recharge the keyboard for 2~3 hours. The recommended charging voltage is 5V. The red battery indicator will stay solid when the keyboard is charging. Once it's fully charged, the battery indicator turns to green.

Sleep Mode

When KB06101 is left idle for 10 minutes, it will enter sleep mode and the Bluetooth connection will be disrupted. The connection can be rebuilt with a press of any key.

Product Specification

Bluetooth Version	Bluetooth 5.3
Bluetooth Range	10 m
Charging Time	2~3 h
Continuous Working Time	About 14 h
Operating Temperature	-10°C ~ +55°C
Bluetooth Frequency Range	2402-2480MHZ
Actuation Force	60±10g
Battery Capacity	140mAh

Packing List

- KB06101 *1
- Charging Cable *1
- Instruction Manual *1

EU Declaration of Conformity

Inateck Co., Ltd. hereby declares that this device complies with the Directive 2014/53/EU .

A copy of the Declaration of Conformity can be accessed from https://www.inateck.de/pages/inateck-eurocompliance.



FCC

Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Users, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery Safety Warning:

This product contains a built-in rechargeable lithium battery. Please observe the following safety precautions: do not dismantle, hit, crush, or expose the battery to fire. If the battery experiences severe swelling, discontinue use immediately. Avoid placing the battery in high-temperature environments, and do not use it if it has been immersed in water. During transportation, do not mix the battery with metallic objects.

Service Center

Europe

F&M Technology GmbH

Tel: +49 341 5199 8410 (Working day 8 AM – 4 PM CET)

Fax: +49 341 5199 8413

 
Address: Fraunhoferstraße 7, 04178 Leipzig, Deutschland

North America

Inateck Technology Inc.

Tel: +1 (909) 698 7018 (Working day 9 AM – 5 PM PST)

Address: 2078 Francis St., Unit 14-02, Ontario, CA 91761, USA





F&M Technology GmbH

Fraunhoferstraße 7, 04178 Leipzig, Deutschland

Tel: +49 341 5199 8410 Email: service@inateck.com

Postal code: 04178



Inateck Technology (UK) Ltd.

95 High Street, Office B, Great Missenden, United Kingdom, HP16 0AL

Tel: +44 20 3239 9869

Manufacturer

Shenzhen Inateck Technology Co., Ltd.

Address: Suite 2507, Block 11 in Tian An Cloud Park, Bantian Street, Longgang District, Shenzhen, Guangdong, China

Email: product@licheng-tech.com

Postal code: 518129

Documents / Resources



inateck KB06101 Keyboard [pdf] Instruction Manual 2A2T9-KB06101, 2A2T9KB06101, KB06101 Keyboard, KB06101, Keyboard

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.