



[Home](#) » [Incipio](#) » **INCIPIO ICPC001 Wireless Keyboard and Mouse Set User Manual** 

Contents [[hide](#)]

- [1 INCIPIO ICPC001 Wireless Keyboard and Mouse Set](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FEATURES AND SPECIFICATIONS](#)
- [5 TROUBLESHOOTING](#)
- [6 ONE YEAR WARRANTY](#)
- [7 FCC STATEMENT.](#)
- [8 FAQs](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



INCIPIO ICPC001 Wireless Keyboard and Mouse Set



Specifications

- Wireless Range: 10m/33ft
- Compatibility: PC and Mac
- Controls: Dedicated Volume/Mute Control Knob, Display and Media Control Keys
- Layout: Compact 78-Key
- Receiver: USB-A Wireless Receiver
- Power Source: 2 AAA Batteries (included)

Product Usage Instructions

Inserting Batteries

1. Remove the battery compartment covers from the keyboard and mouse.
2. Insert two AAA batteries into the battery compartments with the correct polarity.
3. Replace the battery compartment covers securely.

Keyboard and Mouse Setup

1. Take out the USB receiver from the keyboard or mouse battery compartment.
2. Insert the USB receiver into a USB port on your computer.

3. Ensure your computer is powered on.
4. Move, click, or type to automatically pair the mouse and keyboard.
5. Ensure the mouse switch is in the ON position.

Function Keys

The fn+F1-F12 keys have various functions, like opening help documents or support pages. They provide quick access to commonly used features.

 
Thank you for purchasing the INCIPIO Wireless Keyboard and Mouse Set, item ICPC001. A USB-A receiver is included inside your keyboard. Please read this manual carefully FIRST in order to get the most out of your keyboard and mouse.

INSERTING BATTERIES

In order to operate your keyboard and mouse successfully, you will need to insert two AAA batteries (included) into both the keyboard and the mouse. To do so, follow the steps below.

1. Pull the battery compartment covers off the keyboard and mouse. The battery compartment cover on the keyboard is located on the back. To access the battery compartment cover of the mouse, remove the magnetic mouse cover to access the inside.
2. Insert two AAA batteries inside the battery compartment of both the keyboard and mouse, making sure to insert them with the correct polarity (+,-) as shown on the battery compartment.
3. Once your batteries are properly inserted, place the battery compartment covers back on the keyboard and mouse.


For best results, always use new AAA batteries when powering your keyboard and mouse. Do not mix old and new batteries or different types of batteries.

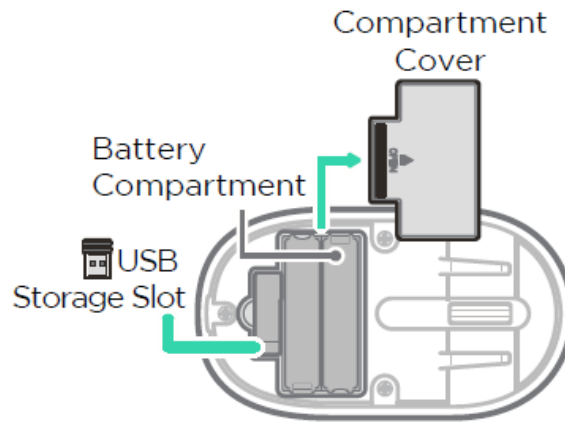

KEYBOARD AND MOUSE SETUP

To connect your keyboard and mouse to your computer, follow the steps below:

 1. Take out the USB receiver from the keyboard's or mouse's battery compartment.
2. Insert the USB receiver into one of your computer's USB ports.
3. Make sure that your computer is powered on.
4. The mouse and keyboard will automatically turn on and pair after moving, clicking, or typing.*

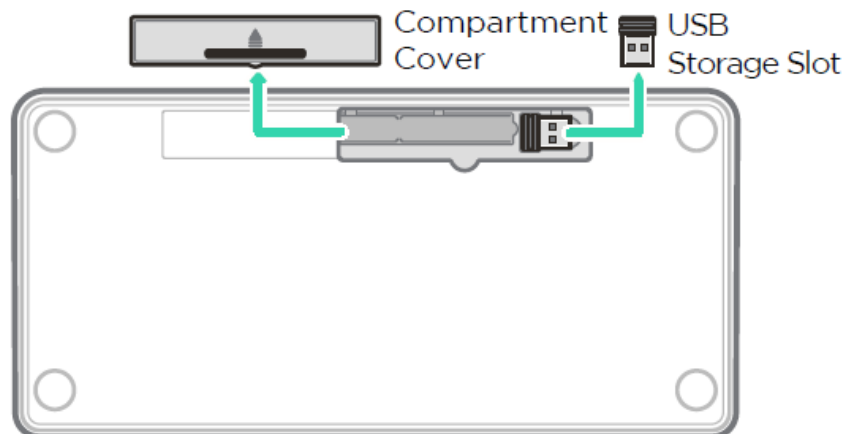


*Make sure the mouse switch is in the Other N position.

NOTES

- The mouse and keyboard will stop working once you pull the receiver out of the USB port or when the computer is turned off.
- You can store your USB receiver inside your keyboard or mouse, making it more portable and easier to store when not in use.

 - Your keyboard has the following additional features:
 1. Decrease Brightness
 2. Increase Brightness
 3. Previous Track
 4. Play/Pause
 5. Next Track
 6. Volume Adjustment Knob
 7. FN (Function) Key
- Note: You can press the volume adjustment knob to mute and unmute audio.

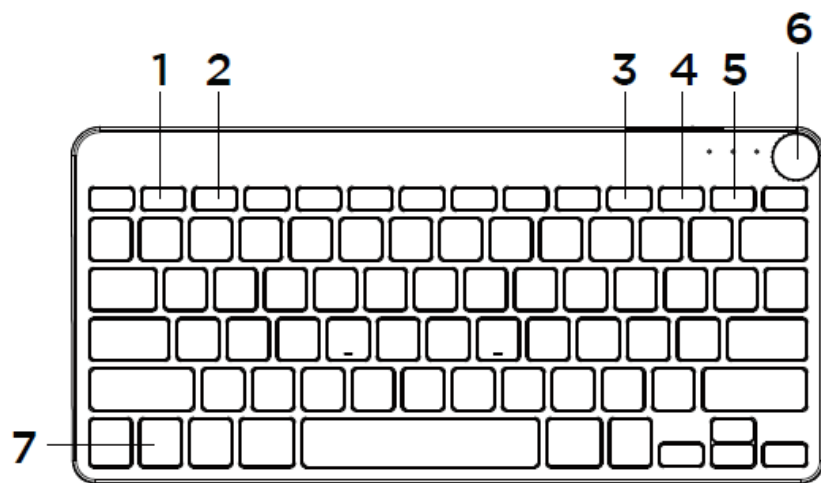

FN+F1-F12 KEYS

The fn+F1-F12 keys on the keyboard function as follows:

- Fn+F1: Usually used to open help documents or support pages. In Windows, press
- Fn + F1 to bring up the Help and Support Center, which provides system operation guides. Press Fn + F2 to rename it.
- En+F3: Search function. Press Fn+F3 in Explorer or in a specific program to open the search window for a file search
- Fn+F4: Open the address bar list. Press Fn+F4 in the browser to open the current list of address bars.
- Fn+F5: Refresh function. Refresh the content of the current operation page or window. To quickly navigate to the address bar.
- Fn+F7: There is no shortcut function in the Windows operating system, but it may be useful in individual programs, such as displaying recently used commands in a DOS

window.

- Fn+F8: Display startup menu. Pressing Fn+F8 while booting Windows displays the startup menu, including options such as Safe mode.
- Fn+F9: There is no shortcut function in the Windows operating system, But it can turn down the volume in Windows Media Player.
- Fn+F10: Opens the menu function. Press Fn+F10 to open the shortcut menu.
- Fn+F11: Full screen function. Press Fn + F11 to display the window in full screen.
- Fn+F12: save as function. Press Fn+F12 in a Word document or a specific program to open the file and save it as a program.

Note: These function keys may have different uses in different software and systems, but for the most part, they provide a convenient way to quickly access commonly used features.

FEATURES AND SPECIFICATIONS

- 10m/33ft Wireless Range
- PC and Mac Compatible
- Dedicated Volume/Mute Control Knob
- Display and Media Control Keys
- Compact 78-Key Layout
- USB-A Wireless Receiver
- Powered by 2 AAA Batteries(included)

PACKAGING CONTENTS

- Wireless Keyboard
- Wireless Mouse
- Wireless USB Receiver
- User's Manual With Warranty Information

IMPORTANT SAFETY PRECAUTIONS

When using your mouse and keyboard, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR KEYBOARD AND MOUSE
2. Never expose your devices to high temperatures, extreme cold, high humidity, moisture, or water.
3. To avoid the risk of electric shock, never attempt to open your devices or repair them without the assistance of certified professionals.
4. Your devices are not to be used by children or the infirm without suitable adult supervision.
5. Do not use your devices at temperatures under 32°F (0°C) or over 104°F (40°C).
6. Do not drop your devices, throw them, or subject them to strong impacts or physical trauma.
7. Contact the manufacturer for support if you detect any abnormalities when using your devices.
8. Keep this manual and all relevant information for future reference.
9. Clean your devices using a soft cloth or paper towel. Do not use harsh chemicals when cleaning, and never submerge your devices in water.
10. Please recycle or dispose of your keyboard and mouse properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your devices for further information.

TROUBLESHOOTING

If your Mouse or Keyboard is not working properly, please try the following:

- Make sure that both your device and your computer are powered on.
- Make sure the distance between the two devices is less than 10m.
- Make sure that your computer has suitable drivers for recognizing a USB mouse.
- Make sure the batteries in your mouse or keyboard have been inserted correctly.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries are not to be inserted with the wrong polarity.
- The supply terminals are not to be short-circuited. Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your

battery for further information

ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable. product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but not limited to, repair by unauthorized parties, tampering,

To Obtain Warranty Service and Troubleshooting Information:

- Call 1-[800-592-9542](tel:800-592-9542)
- Or visit our website at www.incipio.com.

To receive warranty service, along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

- Keyboard FCC ID: 2AAPK-CP211K
- Mouse FCC ID: 2AAPK-CP211M
- Receiver FCC ID: 2AAPK-CP211R

FCC STATEMENT.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Noncompliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INCIPIOO

©2025 GSICS 195 Carter Drive Edison, NJ 08817

- Support: 800 592 9542
- www.incipio.com

 
FAQS

Why is my Mouse or Keyboard not working properly?

If your device is not functioning correctly, consider the following:

- Ensure both devices are powered on.
- Check that the distance between the devices is less than 10m.
- Verify that your computer has suitable drivers for a USB mouse.
- Confirm the batteries are correctly inserted in the mouse or keyboard.

Documents / Resources

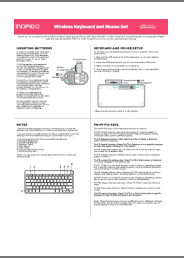	INCIPIO ICPC001 Wireless Keyboard and Mouse Set [pdf] User Manual ICPC001, ICPC001 Wireless Keyboard and Mouse Set, ICPC001, Wireless Keyboard and Mouse Set, Keyboard and Mouse Set, Mouse Set, Set
---	---

References

- [User Manual](#)

Incipio
ICPC001, ICPC001 Wireless Keyboard and Mouse Set, Incipio, Keyboard and Mouse Set, Mouse Set, Set, Wireless Keyboard and Mouse Set

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.