

# INFINITON SBS-562A77X DC Built in Refrigerator



## INFINITON SBS-562A77XDC Built in Refrigerator Instruction Manual

[Home](#) » [INFINITON](#) » INFINITON SBS-562A77XDC Built in Refrigerator Instruction Manual 

### Contents

- 1 INFINITON SBS-562A77XDC Built in Refrigerator
- 2 Product Information
- 3 Product Usage Instructions
- 4 Installation & location
- 5 Tips for special needs
- 6 Safety information
- 7 Before use
- 8 How to use
- 9 Food storage instructions
- 10 Cleaning & Maintenance
- 11 Troubleshooting
- 12 Product Fiche
- 13 Documents / Resources
  - 13.1 References

# INFINITON

INFINITON SBS-562A77XDC Built in Refrigerator



## Product Information

The Infiniton SBS-562A77XDC refrigerator is designed to offer safe and efficient usage with a focus on user convenience. It features LED lighting for better visibility and energy efficiency. The appliance requires proper ventilation space to function optimally.

### Specifications:

- Model: SBS-562A77XDC
- EAN: 8436546196976
- Brand: Infiniton

## Product Usage Instructions

### Before Use:

Prior to using the refrigerator, make sure to maintain adequate ventilation space around the appliance as specified: A – 30mm, B – 50mm, C – 100mm. Avoid placing heavy objects on top of the appliance to prevent damage.

### Tips for Special Needs:

Ensure that the vents are not covered or blocked to maintain proper airflow. If leaving the house for an extended period, follow these steps:

- Turn off and unplug the appliance
- Remove all food items
- Clean and dry the interior thoroughly

For LED light replacement, contact the nearest Authorized Service Center for assistance.

**Safety Information:**

Ensure that the refrigerator is not in contact with the wall to prevent vibrations. This can interfere with surrounding devices such as telephones and radios. Maintain distance from walls to avoid such interferences.

**How to Use:**

Follow the user manual instructions for operating the refrigerator efficiently. Pay attention to temperature settings and storage guidelines for optimal performance.

**Food Storage Instructions:**

Refer to the user manual for specific instructions on storing food items based on humidity levels and other factors. Proper storage helps in maintaining food quality and freshness.

**Cleaning and Maintenance:**

Regularly clean and maintain the refrigerator as per the guidelines provided in the user manual. This ensures the longevity and efficient operation of the appliance.

**FAQs**

- **Q: How do I replace the LED lights in the refrigerator?**

A: Contact your nearest Authorized Service Center for assistance with LED light replacement.

- **Q: What should I do if there are vibrations coming from the refrigerator?**

A: Ensure that the appliance is not in direct contact with the wall. Moving it slightly away can help reduce vibrations.


**Installation & location****1. Ventilation conditions**

The location you select for the installation of the appliance should be well ventilated. Do not locate the appliance near a heat source such as cookers, boilers, and avoid direct sunlight, thus ensuring the cooling effect and saving on energy consumption. Do not place it in a damp place, thus preventing it from rusting. The result of dividing the total space of the room in which the appliance is installed by the amount of refrigerant charge of the appliance should not be less than 8gr/m<sup>3</sup>.

**Note:** The amount of refrigerant required for the appliance is given on the nameplate, which is attached to the inside or outside of the product.

**2. Recommended space needed for heat dissipation**

When the appliance is operating, heat is emitted all around the appliance. Therefore, there must be at least 30 mm of free space at the top, more than 100 mm on both sides and more than 50 mm at the back of the appliance.

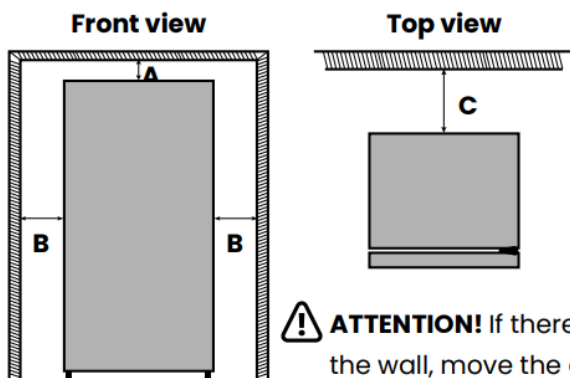

#### Required space in mm

A: 30mm

B: 50mm

C: 100mm



**ATTENTION! Unobstructed ventilation must be maintained around the appliance or in a built-in structure.**



**ATTENTION!** If there are vibrations due to the appliance being in contact with the wall, move the appliance away from the wall. The installation may cause interference to surrounding telephones, radios, televisions, so try to keep the appliance as far away as possible in such a case.

### 3. Ground level

Place the appliance on a firm, flat floor to keep it stable, otherwise it will cause vibration and noise. When the appliance is placed on materials such as carpets, mats, PVC... The legs of the appliance should be placed on solid plates.

### Recommendations for use

#### 1. Resting time

Once the appliance is properly installed and cleaned, do not switch it on immediately. It can be switched on after more than 1 hour of rest to ensure normal operation.

#### 2. Testing and cleaning

Confirm that all fittings inside the unit are correctly installed and wipe the interior with a soft cloth.

#### 3. Switching on

Connect the plug to the power socket to switch on the compressor. After 1 hour, open the freezer door (if available), if the temperature inside the freezer compartment drops considerably, it indicates that the refrigeration system is working normally.

#### 4. Food storage


Once the appliance is turned on, the internal temperature will be automatically controlled according to the user's temperature setting. Once it has cooled down completely, place the food, which usually needs 2 to 3 hours to cool down completely. In summer, when the temperature is high, it takes more than 4 hours for the food to cool down completely (try to open the appliance door as little as possible, to avoid the inside temperature to rise considerably).

### Tips for special needs

#### Moving the appliance

##### • Transport

Do not carry the appliance horizontally or upside down. Do not carry the appliance while holding the door or handle. The appliance must be transported by lifting the bottom of the appliance. **IMPORTANT:** The installation of this unit requires the intervention of several people.

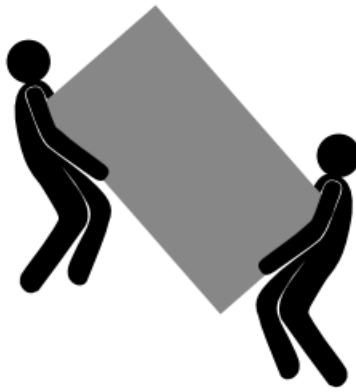


- **Location**

Do not place your appliance near a heat source, e.g. cooker, boiler or radiator. Avoid direct sunlight.

- **Leveling**

Be sure to level your appliance using the front leveling feet. If it is not level, the sealing performance of the appliance door gasket will be affected, or it may even cause your appliance to malfunction. After placing the appliance in position, wait 4 hours before using it, to allow the refrigerant to settle.

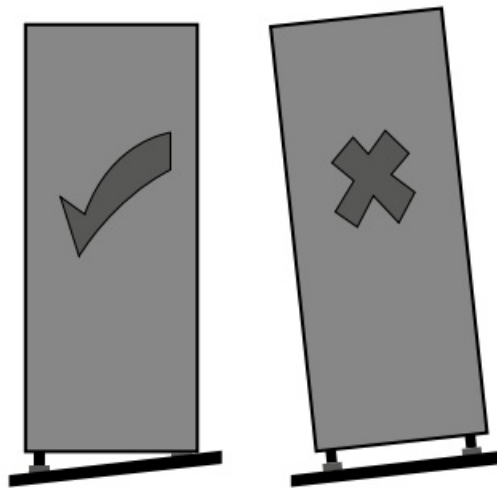

- **Installation**


Do not cover or block vents.

If you are going to be away from home for a long period of time:

- If the appliance will not be used for several months, turn it off first and then unplug the appliance from the electrical outlet.
- Remove all food.
- Clean and dry the interior thoroughly. To prevent mould and mildew sources and do not place heavy objects on top of it.

### **LED light replacement**

To replace any of the LEDs, contact your nearest Authorised Service Centre. Note: The numbers and location of the LED strips may change depending on the model.

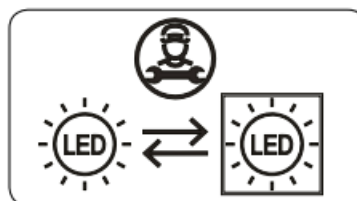

- If the product is equipped with LED light
- This product contains a light source of energy efficiency class <E>.

- If the product is equipped with LED strip(s) or LED card(s):
- This product contains a light source of energy efficiency class <F>.

## Safety information

For your safety and to ensure correct use, before installing and using the device for the first time, please read this user manual carefully, including its tips and warnings. To avoid unnecessary errors and accidents, it is important to ensure that all persons using the device are thoroughly familiar with its operation and safety features. Keep these instructions and ensure that they remain with the device if it is moved or sold, so that all those who use it throughout its lifetime are adequately informed about the use and safety of the device.

For the safety of life and property, observe the precautions in these user instructions, as the manufacturer is not liable for damage caused by omission.

### Safety of children and vulnerable people

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children up to 8 years of age can charge and discharge this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are 8 years of age or older and supervised.
- Keep all containers away from children. There is a risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the power cord (as close to the appliance as possible) and remove the door to prevent children from getting an electric shock if it falls or closes.
- If this appliance with magnetic door seals replaces an older appliance that has a spring-loaded latch on the door or lid, make sure that the spring-loaded latch cannot be used before discarding the old appliance. This will prevent it from becoming a death trap for a child.

### General safety

- **WARNING!** Keep ventilation openings, in the appliance cabinet or built-in structure, free of obstructions.
- **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
- **WARNING!** Do not damage the refrigerant circuit.
- **WARNING!** Do not use other electrical appliances (such as ice cream makers) inside refrigeration appliances unless they are approved for this purpose by the manufacturer.
- **WARNING!** Do not touch the bulb if it has been on for a long period of time as it may be very hot.
- **WARNING!** When positioning the appliance, make sure that the power cord is not trapped or damaged.
- **WARNING!** Do not locate multiple portable power outlets or portable power suppliers on the back of the appliance.

Do not store explosive substances such as aerosol cans with a flammable content.

- The refrigerant isobutane (R-600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

- During transport and installation of the unit, ensure that none of the components of the refrigerant circuit are damaged.
- Drain open flames and sources of ignition.
- Ventilate the room in which the appliance is located thoroughly.
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cable may cause a short circuit, fire or electric shock.
- This appliance is intended for use in household and similar applications, such as
  - Staff kitchen areas in shops, offices and other working environments;
  - Hotels, motels and other residential-type environments;
  - Non-commercial and similar applications.
- **WARNING!** Any electrical components (plug, power cord, compressor, etc.) must be replaced by a certified service agent or qualified service personnel.
- **WARNING!** The bulb supplied with this appliance is a “special purpose lamp bulb” which can only be used with the appliance supplied. This “special purpose lamp” cannot be used for domestic lighting.
- The power cord must not be extended. Make sure that the power plug is not crushed or damaged on the back of the appliance. A crushed or damaged power plug may overheat and cause a fire.
- Make sure that it can be connected to the power socket of the appliance properly.
- Do not pull on the mains cable.
- If the power socket is loose, do not push the power plug. There is a risk of electric shock or fire. Do not operate the appliance without the lamp.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove or touch items in the freezer compartment if your hands are wet or damp, as this may cause skin abrasions or freezer burns. Avoid prolonged exposure of the appliance to direct sunlight.

## Daily use

- Do not heat the plastic parts of the appliance.
- Do not place food products directly against the rear wall.
- Frozen food must not be refrozen once it has thawed.
- Store prepackaged frozen food in accordance with the frozen food manufacturer’s instructions.
- Appliance manufacturers’ storage recommendations should be strictly followed. Refer to the relevant instructions.
- Do not place carbonated soft drinks in the freezer compartment as it creates pressure in the container, which may cause it to burst and damage the appliance.
- Ice lollies may cause freezer burn if consumed directly from the appliance.
- To avoid contamination of food, follow the instructions described in this manual.
- Opening the door for prolonged periods may cause a significant temperature rise in the appliance compartments.
- Regularly clean surfaces that may come into contact with food and accessible drainage systems.
- Clean the water tanks if they have not been used for 48 h; Flush the water system connected to a water supply if no water has been drawn for 5 days.

## Care and cleaning

- Before servicing, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal or sharp objects. Do not use sharp objects to remove any ice frost that may appear on the appliance. Use a plastic scraper.
- Regularly check the drain in the refrigerator for defrosted water.
- If necessary, clean the drain. If the drain is blocked, water will accumulate at the bottom of the appliance.

## Installation

**Important!** For electrical connection, carefully follow the instructions given in the following chapters of this manual.

Unpack the appliance and check it for damage.

- Do not connect the appliance if it is damaged. Report any damage immediately to the place of purchase. In this case, keep the packaging carefully.
- It is advisable to wait at least four hours before switching on the unit to allow the oil to return to the compressor.
- There should be adequate air circulation around the appliance, as this prevents the appliance from overheating. To achieve sufficient ventilation, follow the installation instructions.
- Whenever possible, the back of the product should be against a wall to prevent access to hot components (compressor, condenser) and to avoid possible burns.
- The appliance must not be located near radiators or cookers.
- Make sure that the power plug is accessible after installation of the appliance.

## Service


- Any electrical work required to service the appliance must be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorised Service Centre, and only original spare parts must be used.

## Energy Saving

- Do not put hot food in the appliance;
  - Do not pack food together as this prevents air circulation;
  - Make sure that food does not touch the back of the compartment(s);
  - If there is a power failure, do not open the door(s);
  - Do not open the door(s) frequently;
  - Do not keep the door(s) open for a long time;
  - Do not set the thermostat to very high temperatures;
  - Some accessories, such as drawers, can be removed for larger storage volume and lower energy consumption;
- Do not use the thermostat in very high temperatures; Do not place the thermostat in very high temperatures.

## Environmental protection

This appliance does not contain gases that could damage the ozone layer, neither in its refrigerant circuit nor in the insulation materials. The appliance must not be disposed of with municipal waste and rubbish. The insulation foam contains flammable gases. The appliance must be disposed of in accordance with the regulations of the appliance to be obtained from the local authorities. Avoid damaging the cooling unit, especially the heat

exchanger. The materials used in this appliance marked with the symbol  are recyclable.






■ This symbol on the product or on its packaging indicates that this product must not be treated as household waste. Instead, it must be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.

### Packing materials

Materials with the symbol  are recyclable. Dispose of the packaging in a suitable collection container for recycling.

### Disposal of the appliance

1. Disconnect the plug from the socket.
2. Cut the power cord and discard it.

**Warning!** During use, service and disposal of the appliance, pay attention to this symbol, which is located on the back of the appliance (rear panel or compressor). This symbol will be yellow or orange in colour. It is a fire hazard warning sign. There are flammable materials in the refrigerant and compressor piping. Keep away from the source of fire during use, service and disposal..

### Before use

**WARNING!** This appliance must be grounded for safety.

- The power cord of this appliance is equipped with a three-prong plug which fits into a standard three-prong outlet to minimize the possibility of electric shock.
- Do not, under any circumstances, cut or remove the third grounding prong from the supplied power cord.
- This refrigerator appliance requires a standard 220-240V, 50/60 Hz three-prong grounded outlet.
- This appliance is not designed for use with a power inverter.
- The cord must be secured behind the appliance and must not be left exposed or dangling, This will prevent accidents and/or injury.
- Never unplug the appliance by pulling on the power cord.
- Always grasp the plug firmly and pull it out.
- Do not use an extension cord with this appliance.
- If the power cord is too short, have a qualified electrician or serviceman install an outlet near the appliance. Use of an extension cord may adversely affect the performance of the unit.

### Climate Range

Information about the climate range of the appliance is detailed on the rating plate, which is attached to the inside or outside of the appliance.

It indicates at which ambient temperature the appliance appliance is optimal.

Climate range	Suitable ambient temperature
<b>SN</b>	From +10°C to +32°C
<b>N</b>	From +16°C to +32°C
<b>ST</b>	From +16°C to +38°C
<b>T</b>	From +16°C to +43°C

**Note:** The limit values of the ambient temperature range for the climatic classes for which the appliance is designed and the internal temperatures of the appliance may be affected by factors such as the location of the appliance, the ambient temperature and the frequency of door opening. When operating in an environment other than the specified climate class (i.e., beyond the rated ambient temperature range), the appliance may not operate properly.

**Note:** Information on the climate range of the appliance is detailed on the rating plate, which is attached to the inside or outside of the appliance. The information about the climate range of the appliance is detailed on the rating plate, which is attached to the inside or outside of the appliance.

### Freon Free

The Freon-free refrigerant (R600a) and the foamed insulation material (cyclopentane) used in the appliance are environmentally friendly. R600a is flammable and is sealed in a refrigeration system. In the event of a refrigerant leakage due to a damaged refrigerant circuit, be sure to keep the appliance away from heat sources and open windows to ventilate as quickly as possible.


### Locks

If this product is equipped with a padlock, keep the key out of the reach of children. As a safety precaution, break old padlocks or latches when discarding.

### How to use

#### Product Description

Due to technological innovations, the product description in this manual may not completely match your appliance. More detailed information corresponds to the final product.

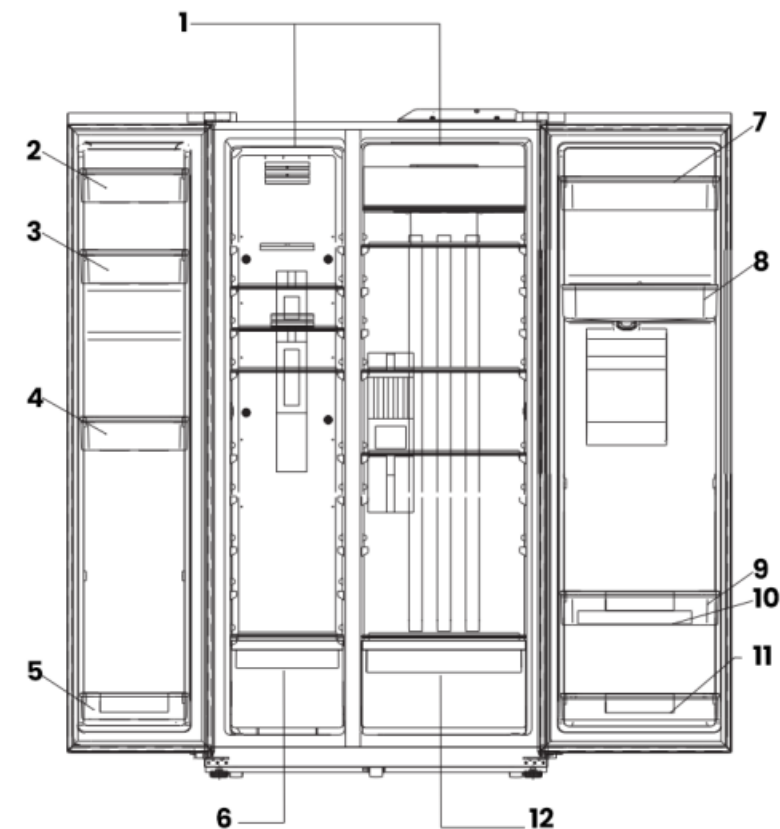


1	LED light
2	Freezer balcony
3	Freezer bottle rack
4	Freezer bottle rack
5	Freezer bottle rack
6	Freezer drawer
7	Refrigerator balcony
8	Water tank
9	Refrigerator bottle rack
10	Refrigerator fridge
11	Refrigerator bottle rack
12	Refrigerator drawer

**Note:** Your model may look different from this and other images in this manual depending on the features of your model.

**Note:** To get the most out of the product, place all shelves and drawers in the original position as shown in the picture above.

## Functions

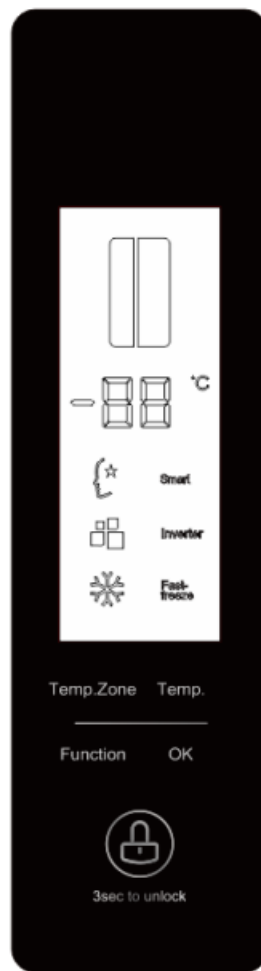

- **Before use**

- Clean the appliance with warm water and detergent, and dry it with a cloth. Note: The electrical components should be cleaned with a dry cloth.

- **Display on door**

The display is located on the cold room door, the interface display is as follows: Operating mode:

1. "Temp.Zone" temperature zone selection button 2.
2. "Temp" refrigerator temperature setting button " " 3.
3. "Function" button to put the refrigerator into intelligent quick freezing mode.
4. "OK" button: to confirm the temperature setting or function status.
5. When the display lights up, if there is no touch operation, it will dim after 3 minutes; when the display dims, the first time the keypad is activated, at this time, if you press any key within a short period of time, the key will be invalid; after pressing the "OK" button 3s will be unlocked, then press the button and the key will be put into operation.

- **First switch-on**

When the refrigerator is turned on for the first time, the control panel display will return to the normal display after 2 seconds..

- **Mode of use**

If no operation is performed on the refrigerator with the door closed for 3 minutes, the light on the control panel will go out.

Open the door or press any button, the light will turn on.

- **Adjusting the temperature in the refrigerating chamber (2°C ~ 8°C).**

Press the "Temp.Zone" button until the refrigerator temperature appears on the display quickly, then you can

adjust the refrigerator temperature. Press the “Temp” button, and the temperature will change by 1 with each press. The refrigerator temperature setting cycles as follows: 2 °C – 3 °C – 4 °C – 5 °C – 6 °C – 7 °C – 8 °C – OF– 2 °C. The refrigerator does not cool in the “OFF” state..

- **Adjusting the temperature in the freezer chamber (-24°C ~ -16°C).**

Press the “Temp.Zone” button until the freezer temperature appears on the display quickly, so you can adjust the freezer temperature. Press the “Temp” button, the temperature will change by 1 with each press. The freezer temperature setting cycles as follows:

-24 °C – -23 °C – -22 °C – -21°C – -20 °C – -19 °C- -18 °C – -17 °C – -16 °C – -24 °C

- **FAST FREEZE**

- With this function, the food in the freezer cools down quickly. With this function, the freezer temperature is -32°C.
- Press the “function” button until the fast freeze icon flashes, then press the “OK” button to activate this function, and the light will turn on.
- Press the “function” button until the fast freeze icon flashes, then press the “OK” button to deactivate this function, and the light will turn off.
- When the set time is up, the fast freeze will stop automatically and the light will turn off. In Smart operation mode, the refrigerator will interrupt the fast freeze function.

- **SMART**

In “Smart” mode, the temperature is 5°C in the refrigerator compartment and -18°C in the freezer compartment. Press the “function” button until the smart icon flashes, then press the “OK” button to access this function and the light will turn on.

Press the “function” button until the smart icon flashes, then press the “OK” button to deactivate this function, and the light will turn off. In the quick freeze function, the refrigerator will quit the smart function.

- **Delayed start-up**

To avoid damage caused by the sudden switching off and starting of the refrigerator, there is a special function in the equipment that, if the switch-off time is less than 5 minutes, the refrigerator will not start immediately.

- **Permanent memory**

When the power supply is disconnected, the working conditions are automatically locked. When the power supply is reconnected, the equipment will operate with the same values as before the disconnection.

- **Child lock**

When unlocked, press the child lock key.



It will automatically lock the unit, or as long as there is no activity on the display for more than 30 seconds. To unlock the unit, you can press the “FUNCTION” key for 3 seconds..

- **Open door alarms**

When the door is left open for 3 minutes and the display is continuously on, the alarm sounds until the door is closed and the display returns to normal.

Any fault in the thermostat, such as “E0”, “E1”, “E2”, will display the alarm until the fault is fixed. If the freezer thermostat temperature is above -10°C, the freezer temperature zone displays the freezer temperature, click any button to stop flashing, at the same time it has reached the highest freezer temperature. Press any button or 5 seconds later and it will return to normal display.

## **Water dispenser**

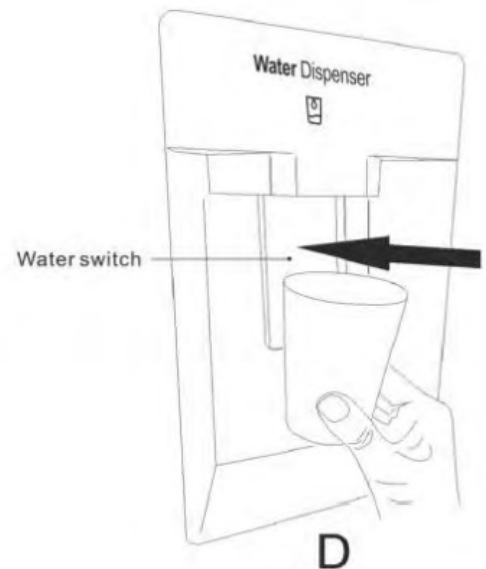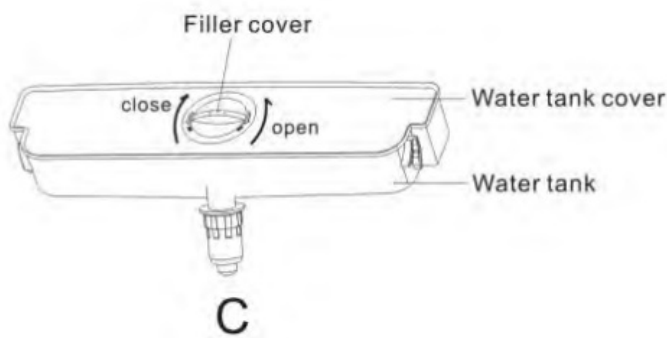

1. Open the refrigerator door to ensure that the water dispenser is securely fastened.
2. Open the water tank cap. Slowly fill the water tank, avoiding spills, until the tank is full. Then close the water tank filler cap. See picture C.
3. Once full, turn the thermostat knob to the maximum number and return 30 minutes later, then fill your glass in the water dispenser. See image D.
4. When using the water dispenser, some water may drip and collect on the bottom of the dispenser. Please wipe with a cloth when necessary.
5. The maximum fill should be less than the reservoir cap, as indicated by the maximum fill line.

**NOTE:** Do not remove the cup until there is no drop of water left.

## Food storage instructions

### Cautions for use

- The appliance may not operate steadily (there is a possibility that it may defrost or the temperature may rise too high inside) if it is placed for a prolonged period of time below the cold limit of the climatic range for which the appliance is designed.
- Information on the climate range can be found on the rating plate.
- The internal temperature may be affected by factors such as the location of the appliance, ambient temperature, how often the door is opened, etc. The setting of any temperature control device may have to be varied to take these factors into account.
- Effervescent beverages should not be stored in the freezer compartment (if present).

Some products such as ice cream should not be consumed too cold, as they may cause burns from direct cold contact.



### Location of food storage

Due to the circulation of cold air inside the appliance, the temperature of each area is different, so different types of food should be placed in different areas.

The refrigerator compartment is suitable for storage of food that does not need to be frozen, cooked food, beverages, eggs, some condiments that need to be kept cold, etc. The vegetable drawer (if available) is suitable for the storage of vegetables, fruits, etc. The freezer compartment is suitable for the storage of ice cream, frozen food and food that will be kept for a long time.

## Use of the refrigerator compartment

- **Refrigerator door shelves and balconies (if fitted):** To remove a glass shelf, lift it slightly, slide it towards you and remove it from its position. To remove a door shelf, lift it slightly and remove it from its place. Avoid food coming into contact with the rear wall. When removing or placing shelves or racks, please hold them firmly and handle them with care to avoid damage.
- **Vegetable box (if available):** Pull out the vegetable drawer to access the food. If you are going to clean the cover of the vegetable drawer, be sure to put it back in place so that the internal temperature of the drawer is not affected, thus preventing the food inside from deteriorating.
- **Vegetable drawer humidity regulator (if fitted):** The humidity regulator is used to conserve the humidity inside the vegetable crisper, thus keeping the vegetables and fruits stored inside fresh. When the regulator is set to the right side, with more exposed holes, the internal humidity is kept at a low value. When the regulator is set to the left side, with fewer exposed holes, the internal humidity level of the drawer is high.

High level of humidity	Low level of humidity
	

## Storage of fruit and vegetables

In the case of appliances with a cold compartment, a statement should be made to the effect that some types of fresh fruit and vegetables are sensitive to cold and are therefore not suitable for storage in this type of compartment.

## Use of the FRIDGE compartment (if available)

This is the ideal place to store meat, sausage, fish, dairy products, eggs and cooked dishes, as well as bread, pastries and bakery products.

## Storing food in the refrigerator compartment

- Preferably store food that is fresh and in perfect condition. In this way, they will retain their quality and freshness for longer.
- In the case of pre-cooked products or packaged foods, pay special attention to the best-before or use-by dates indicated by the manufacturer.
- It is also advisable to wrap or cover food well before placing it in the refrigerator so that it retains its aroma, colour and flavour. This also prevents flavour transfer from one food to another or discolouration of plastic parts in the refrigerator compartment.
- Allow hot food or beverages to cool to room temperature before placing them in the refrigerator compartment.

**Note:** Do not obstruct or block the air outlet openings with foodstuffs to allow free circulation of air. Food placed in the vicinity of the air outlet openings may freeze as a result of the cold air coming out of the air outlet openings.

**WARNING!** Depending on the air circulation inside the refrigerator compartment, different cooling zones are created in the refrigerator compartment:

- The coldest areas are located in front of the air outlet openings. Store the most delicate foods (fish, sausages, meat) in the coldest zones.
- The least cold zone is located in the upper part of the back door. It is advisable to store cured cheese and butter, for example, in this zone. In this way the aged cheese can release its aroma and the butter will be easier to spread on bread.

### **Use of the FREEZER (if available)**

The freezer compartment is suitable for storing deep-frozen products, preparing and storing ice cubes and freezing fresh food.

**Note:** Always make sure that the freezer door is closed and sealed completely. If it is not properly closed, food may thaw. Heavy frost build-up occurs in the freezer compartment.

### **Maximum freezing capacity**

The indications regarding the freezing capacity in 24 hours are given on the rating plate of the appliance. The maximum freezing capacity in 24 hours is given on the rating plate of the appliance.

### **Pay special attention:**

- When shopping, remember that it is best to buy frozen food at the last minute. Try to transport them directly home wrapped in an insulated bag. Once at home, you should immediately place them in the freezer compartment.
- Try to place large quantities of food in the top drawer, as they freeze more quickly.
- Arrange the food with sufficient space between them to ensure proper air circulation.
- Frozen products must not come into contact with fresh food.

### **Freeze fresh food**

If you decide to freeze food yourself, use only fresh food in perfect condition. Rinse vegetables before freezing so that their flavour, aroma and colour do not deteriorate, thus preserving their nutritional value. Aubergines, courgettes and asparagus do not need to be rinsed. More details on this method can be found in any cookery book or manual that deals with aspects of freezing food.

### **Foods suitable for freezing:**

Bread and pastries, fish and seafood, meat, vegetables, fruit, herbs, shelled eggs, dairy products such as cheese, butter and cottage cheese, cooked dishes and leftovers, e.g. soups, stews, soups and gravies. such as soups, stews, cooked meat or fish, potato dishes, gratins and sweet dishes, gratins and sweet dishes.

### **Foods that should not be frozen:**

Vegetables that are normally eaten raw, e.g. lettuce or radishes, eggs in their shells, grapes, whole apples, pears, peaches, hard-boiled eggs, yoghurt, sour milk, fresh sour cream, crème fraîche and mayonnaise.

### **Food packaging**

Pack the food hermetically so that it does not dehydrate or lose its flavour.

1. Place the food in the packaging provided for this purpose.
2. Remove any air that may be present in the packaging.



3. Close it hermetically.
4. Mark containers, indicating contents and date of freezing.

**Appropriate materials for the packaging of foodstuffs:**

Plastic foil, polystyrene bags and sheets, aluminium foil, boxes and specific packaging for freezing food. These products can be found in specialised shops.

**Unsuitable materials for food packaging:**

Wrapping paper, parchment paper, cellophane, rubbish bags, used shopping bags.

**Materials suitable for closing the packaging:**

Rubber bands, plastic clips, twine, special adhesive tape for freezing. Polystyrene plastic bags or sheets can be heat-sealed with a plastic sealer.

**Freezing timetable**

The shelf life varies depending on the type of food frozen at a standard temperature of -18°C:

- Fish, sausage, cooked dishes, bread and pastries – up to 6 months
- Cheese, poultry and meat – up to 8 months
- Fruit and vegetables – up to 12 months

**Cleaning & Maintenance**

**WARNING!** Before cleaning, unplug the power plug first; Do not connect or disconnect the power plug with wet hands, as there is a risk of electric shock and injury. Do not spill water directly on the appliance, thus avoiding rust, electricity leakage and accidents.

**Internal and external cleaning**

Food residues in the interior can cause a bad smell, so it should be cleaned regularly. Infiniton brand suggests that you clean the interior at least once a month.

Remove all interior elements (shelves, drawers, etc.) and clean with a soft towel or sponge dampened with warm water. Wipe off dust accumulated on the surface of the appliance frequently.

After using detergent, be sure to rinse it with clean water and then wipe it dry with a cloth.

**WARNING!** Do not use bristle brushes, wire brushes, detergent, soap powder, alkaline detergent, benzene, gasoline, acid, hot water and other corrosive or soluble elements to clean the surface of the appliance, door gasket, plastic decorative parts, etc. to avoid damage. Carefully dry the door seal, clean the groove with a wooden stick wrapped with cotton thread.

**What to do if there is a failure in the power supply or cooling system?**

- Try to open the appliance door as little as possible, so that food can be stored safely and freshly for hours even in summer.
- If you receive the power cut warning in advance:
  1. Set the thermostat to the highest setting one hour in advance, so that the food is completely frozen (Do not store new food during this time!). Restore the temperature to the original setting when the power supply comes back on.
  2. You can also make ice in an airtight container and put it inside the appliance to extend the storage time of fresh food.

**Safety checks after maintenance**

- Is the power cord broken or damaged?
- Is the plug firmly inserted into the socket?
- Is the socket overheating abnormally?

**Note:** Electric shock and fire may occur if the power cord and plug are damaged or stained with dust. If there is any abnormality, unplug the power cord and contact the supplier.

## Troubleshooting

Whenever there is a problem with the appliance, check if you can solve it by following the tables below. If the problem persists, contact customer service.

DESCRIPTION	POSSIBLE CAUSE	SOLUTION
No refrigeration at all at all	<ul style="list-style-type: none"> <li>• Is the plug disconnected?</li> <li>• Are the switches and fuses broken?</li> <li>• Is there no electricity or has the power supply been cut off?"</li> </ul>	<ul style="list-style-type: none"> <li>• Re-plug.</li> <li>• Open the door and check if the light is on.</li> </ul>
Abnormal noise.	<ul style="list-style-type: none"> <li>• Is the appliance stable?</li> <li>• Does the appliance reach up to the wall?</li> </ul>	<ul style="list-style-type: none"> <li>• Adjust the adjustable feet.</li> <li>• Remove it from the wall</li> </ul>
Poor cooling efficiency.	<ul style="list-style-type: none"> <li>• Do you put out hot food or too much food?</li> <li>• Do you open the door frequently?</li> <li>• Do you put the bag of food on the door seal?</li> <li>• Does it get direct sunlight or is it near an oven or cooker?</li> <li>• Is it well-ventilated?</li> <li>• Is the temperature too high?</li> </ul>	<ul style="list-style-type: none"> <li>• Put food in the freezer when hot food cools down.</li> <li>• Check and close the door.</li> <li>• Remove the refrigerator from the heat source.</li> <li>• Keep the distance between food to ensure good ventilation.</li> <li>• Set the right temperature.</li> </ul>
Bad smells inside.	<ul style="list-style-type: none"> <li>• Has any food spoiled?</li> <li>• Do you need to clean the fridge?</li> <li>• Do you wrap food with strong smells?</li> </ul>	<ul style="list-style-type: none"> <li>• Throw away spoiled food.</li> <li>• Clean the fridge.</li> <li>• Pack strong-flavored foods.</li> </ul>

## Error codes

Error code	Meaning	Possible cause	Solution
E01	Sensor warning		Contact the official service centre as soon as possible
E02	Sensor warning		Contact the official service centre as soon as possible
E03	Sensor warning		Contact the official service technician as soon as possible
E06	Sensor warning		Contact the official service technician as soon as possible
E07	Sensor warning		Contact the official service technician as soon as possible
E08	Low voltage warning	This warning is displayed if the power supply provides a voltage of less than 170V.	This is not a malfunction of the equipment, but an error that helps to prevent damage to the compressor. It is necessary to increase the voltage back to the required levels. If this warning persists, contact an authorized technician.
E09	Freezer does not cool sufficiently	It is likely to occur after a long blackout.	<p>1. Set the freezer temperature to a colder setting or set the freezer to Super Freeze mode. This should clear the error code once the required temperature has been reached. Keep the doors closed to improve the time it takes to reach the correct temperature.</p> <p>Remove any products that have defrosted during this error. These should be consumed within a short period of time.</p> <p>3. Do not add any fresh products to the freezer compartment until the correct temperature has been reached and the error does not continue. If this warning persists, contact the authorised technicians.</p>

## Product Fiche


Model	SBS-562A77XDC
Energy Efficiency Class	D
Door Panel	Inox
Handle type	RECESSED
Flat back	YES
Wheel	YES

Product dimensions (HxWxD) mm	1770x912x704
Packing dimensions (HxWxD) mm	1860x973x767
Net Weight (kg)	86
Gross weight (kg)	96
Loading capacity (40HQ)	48
Certification	CE
Energy consumption (kwh/24h)	0,704
Energy consumption (kwh/year)	257
Number of shelves in the freezer	4
Number of shelves in the refrigerator	4
Temp. Control (electronic/mechanical)	ELECTRONIC
External display	Digital
Water dispenser	YES
Super freeze	YES
Holiday mode	YES
Door alarm	YES
Defrosting System	AUTO
Airflow cooling	YES
Food care drawer	YES
LED interior light	YES
Safety glass shelf	YES
Star rating	4
Defrosting system	AUTO
Number of drawer	4
Storage time during power-off	9H
Freezing capacity in 24 hrs (kg)	10
LED interior light	YES
Ice Maker	NO

Door Panel	Inox
Handle type	RECESSED
Flat back	YES
Wheel	YES
Product dimensions (HxWxD) mm	1770x912x704
Packing dimensions (HxWxD) mm	1860x973x767
Net Weight (kg)	86
Gross weight (kg)	96
Loading capacity (40HQ)	48

[info@infiniton.es](mailto:info@infiniton.es)

## Documents / Resources

	<p><a href="#">INFINITON SBS-562A77XDC Built in Refrigerator</a> [pdf] Instruction Manual SBS-562A77XDC, ean 8436546196976, SBS-562A77XDC Built in Refrigerator, SBS-562A77XDC, Built in Refrigerator, Refrigerator</p>
---	---

## References

- [Infiniton Electrodomésticos | Envío Gratis | Entrega con instalación | Tecnología al mejor precio](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.