



Infinity TSS-SAT500CHR Powered Subwoofer System User Manual

[Home](#) » [Infinity](#) » Infinity TSS-SAT500CHR Powered Subwoofer System User Manual 

Contents

- [1 Infinity TSS-SAT500CHR Powered Subwoofer System](#)
- [2 Product Usage Instructions](#)
- [3 TSS-Sub500 Specifications](#)
- [4 TSS-500 PACKING/ACCESSORIES](#)
- [5 SUBWOOFER CONTROLS](#)
- [6 SUBWOOFER CONNECTIONS](#)
- [7 OPERATION](#)
- [8 Test Set Up and Procedure](#)
- [9 Block Diagram](#)
- [10 Troubleshooting Flow Chart](#)
- [11 Integrated Circuit Diagram](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



Infinity TSS-SAT500CHR Powered Subwoofer System



TSS-Sub500 Specifications

- **Frequency Range:** Not specified
- **Amplifier Output:** 100W
- **Low-Frequency Driver:** Not specified
- **Crossover Frequency:** Not specified
- **Dimensions (H x W x D):** Not specified
- **Weight:** Not specified

Product Usage Instructions

Unboxing and Setup

1. Remove all items from the packaging.
2. Ensure that all the accessories mentioned in the user manual are present.
3. Place the subwoofer in the desired location in your room.
4. If using a stand or wall bracket, follow the instructions provided to securely mount the subwoofer.
5. Connect the power cable to the subwoofer and plug it into a power outlet.
6. If using satellite speakers, connect them to the subwoofer using the provided wire sets.
7. If using an audio source, connect it to the subwoofer using the appropriate inputs (Line Input or LFE Input).

Powering On and Adjusting Settings

1. Ensure that the power switch on the subwoofer is in the “Off” position.
2. Turn on your audio source (if applicable).
3. Turn on the subwoofer by flipping the power switch to the “On” position.

4. Adjust the volume potentiometer to your desired listening level.
5. If available, select the appropriate input configuration (Line In or LFE) based on your audio setup.
6. If available, adjust the settings for features such as Auto-Turn-On, input frequency, ATO level, etc., according to your preferences.

Troubleshooting

If you encounter any issues with the TSS-Sub500, refer to the troubleshooting section in the user manual or contact Infinity Systems customer support for assistance.

FAQ

- **Q: What is the frequency range of the TSS-Sub500?**

A: The frequency range of the TSS-Sub500 is not specified in the user manual.

- **Q: What is the output power of the amplifier?**

A: The amplifier of the TSS-Sub500 has an output power of 100W.

- **Q: How do I connect satellite speakers to the subwoofer?**

A: To connect satellite speakers to the subwoofer, use the provided wire sets and follow the instructions in the user manual.

- **Q: How do I adjust the volume of the subwoofer?**

A: The volume of the subwoofer can be adjusted using the volume potentiometer located on the subwoofer.

TSS-Sub500 (TSS-500 SYSTEM)

SERVICE MANUAL

- Infinity Systems Incorporated
- 250 Crossways Park Dr. Woodbury, New York 11797
- Rev0 6/2006

Note: The TSS-Sub500 is part of the TSS-500 system

Satellite loudspeakers

(Charcoal) order Infinity part# TSS-SAT500CHR (Platinum) order Infinity part# TSS-SAT500PLT

Center channel: Call Infinity Systems parts department (Charcoal) (Platinum)


TSS-Sub500 Specifications


- **Frequency Range:** 39Hz – 150Hz (±3dB)
- **Amplifier Output:** 100 watts RMS
- **Low-Frequency Driver:** 8" (203mm)
- **Crossover Frequency:** 120Hz, 24dB/Octave (line-level [non-LFE] input)
- **Dimensions (H x W x D):** 15-7/8" x 13-5/8" x 14-5/8" (403mm x 346mm x 371mm)
- **Weight:** 131.7 lb (14.4kg)

Infinity continually strives to update and improve existing products, as well as create new ones. The specifications and construction details in this and related Infinity publications are therefore subject to change without notice.

TSS-500 PACKING/ACCESSORIES

Item #	Description	Part Number	Qty
1	Warranty Card	405-000-05110-E	1
2	Owner's Manual	406-000-05307-E	1
3	Packing	Not for Sale	1
4	Packing Bag	Not for Sale	4
5	Inner Carton	Not for Sale	1
6	Packing Bag	Not for Sale	1
7	Nut wrench (metal bar)	399-FE-00630-E	1
8	15' RCA cable	370-000-00273-E	1
9	Rubber feet for stands (Platinum)	373-000-05051-E	1
	Rubber feet for stands (Charcoal)	373-000-05050-E	1
10	Screw for stands (5) ¼ x 20 x1" (Platinum)	371-000-05108-E	1
	Screw for stands (5) ¼ x 20 x1" (Charcoal)	371-000-05114-E	1
11	Wall Bracket ball end (5) (Platinum)	373-000-05054-E	1
	Wall Bracket ball end (5) (Charcoal)	373-000-05055-E	1
12	40' Wire set (2)	370-000-00276G-E	2
13	20' Wire set (3)	370-000-00277G-E	3
14	Satellite stand (Platinum)	325-ABS-05126-0VAE	4
	Satellite stand (Charcoal)	325-ABS-05127-0BAE	4
15	Wall bracket	398-ABS-00317-0VAE	5
16	Center table stand (Platinum)	325-ABS-05127-0VAE	1
	Center table stand (Charcoal)	325-ABS-05126-0BAE	1
17	Rubber gasket for stand	336-RUB-05200-0VAE	1
18	Subwoofer Top Packing	431-000-05639-E	1
19	Packing Bag	Not for Sale	1
20	Subwoofer Btm Packing	431-000-05640-E	1
21	Desiccant	Not for Sale	3
22	Outer Carton (Platinum)	402-000-05533-E	1
	Outer Carton (Charcoal)	402-000-05534-E	1

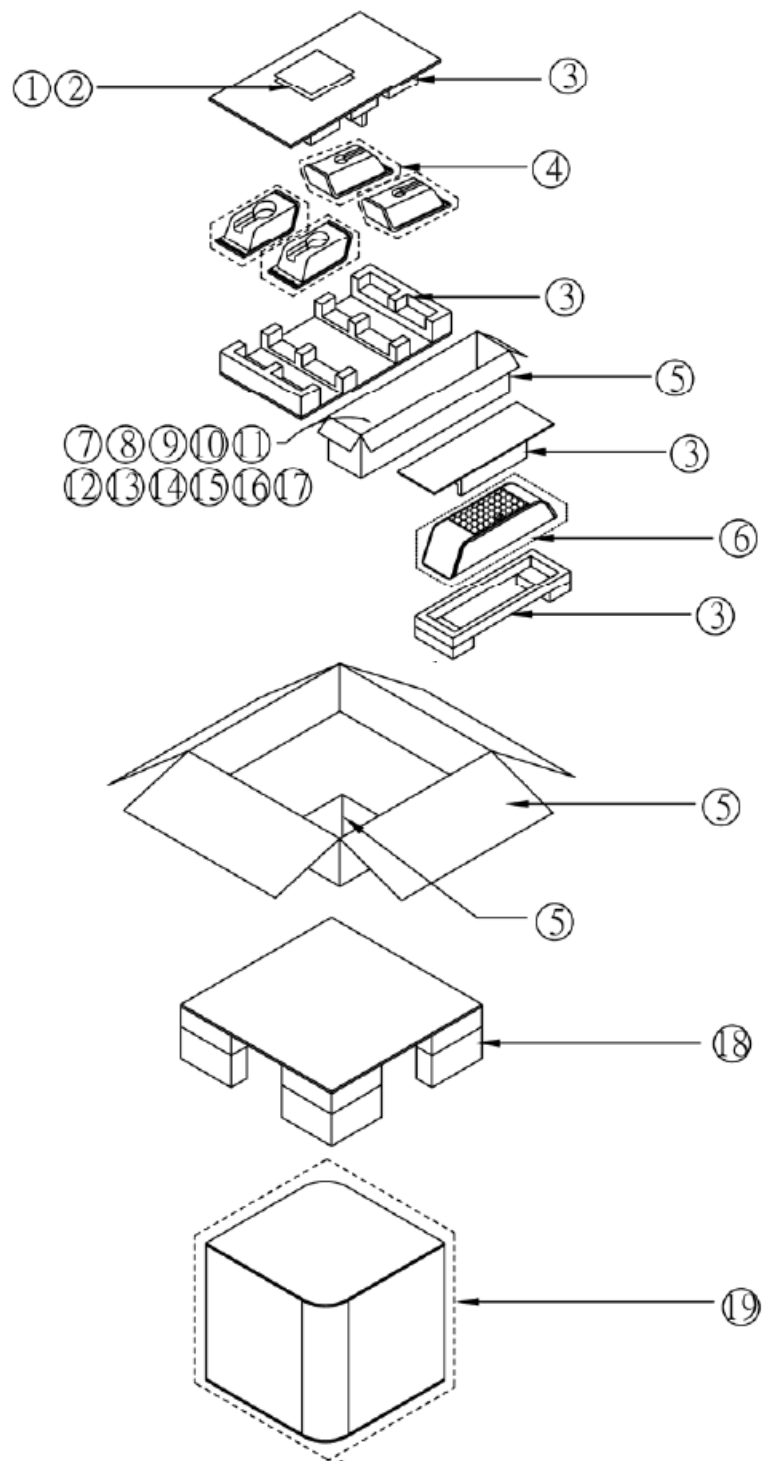

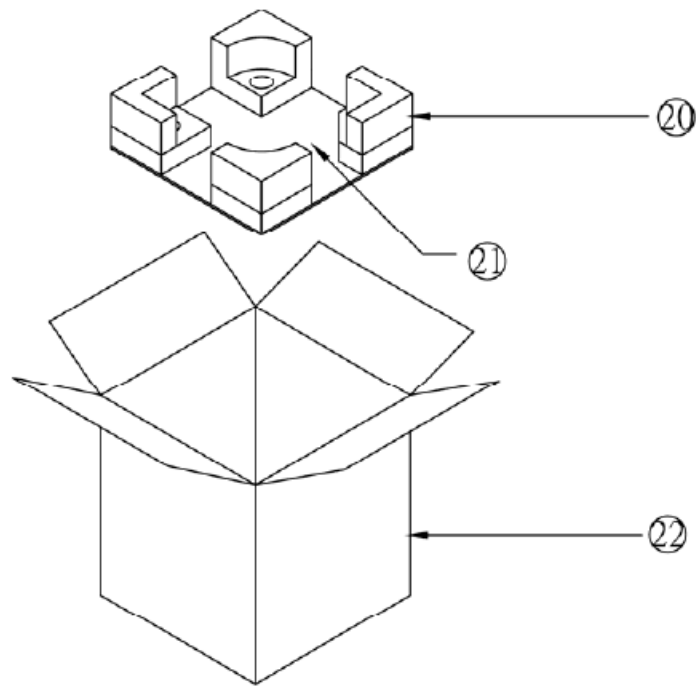

TSS-Sub500	100W Powered Sub/ Plate Amp				
LINE VOLTAGE	Yes/No	Hi/Lo Line	Unit	Notes	
US 120VAC/60Hz	Yes	108-132	Vrms	Normal Operation	
Europe 220-240VAC, 50-60Hz	Yes	220-240	Vrms	Normal Operation	
Parameter	Specification	Unit	QA Test Limits	Conditions	Notes
Amp Section					
Type (Class AB, D, other)	AB	AB	n/a	120V Model	External Sink required
Type (Class AB, D, other)	G	G	n/a	230V Model	External Sink required
Load Impedance (speaker)	4	Ohms	n/a	Nominal	
Rated Output Power	100	Watts	95	Single input driven	
THD@ Rated Power	0.5	%	1	22K filter	
THD @ 1 Watt	0.1	%	0.5	22K filter	
DC Offset	10	mV-DC	50	@ Speaker Output	

Damping factor	>100	DF	100	50Hz, 4 Ohms load	Measured at amplifier board speaker output terminals, Output power 90 Watts
Input Sensitivity					
Input Frequency	50	Hz	50	Nominal Freq.	
Line Input (L&R)	13.8	mVrms	±2dB	To 1 Watt	Single input driven, AP Zo=600 Ohms
LFE Input	8.62	mVrms	±2dB	To 1 Watt	LFE input driven only, AP Zo=600 Ohms
Signal to Noise					
SNR-A-Weighted	100	dBA	85	rel. to rated power	A-Weighting filter
SNR-unweighted	80	dBr	80	rel. to rated power	22K filter
SNR @ 1W-unweighted	60	dBr	60	rel. to 1W Output	22K filter
Residual Noise Floor	1	mVrms	2	- Volume @max, using RMS reading - DMM/VOM (or A/P)	
Residual Noise Floor	1	mVrms(max)	2	Volume @max, w/ A/P Swept Bandpass Measurement (Line freq.+ harmonics)	
Input Impedance					
Line input L&R , LFE	>10	K ohms	n/a	Nominal	
Filters					
Low Pass (fixed or variable)	4th order fix	—	±2dB		
Subsonic filter (HPF)	2nd order	Hz	±2dB		
Limiter (yes/no)	YES	—	Functional		
THD at Max. Output Power	1	%	Functional		
Features					
LFE Input	YES		Functional		

Volume pot Taper (I ink/log)	LOG	—	Function al		
ATO	YES		Function al		
Input Configuratio n					
Line In (L,R)	L ,R	—	Function al		RCA inputs
Line level in LFE	LFE		Function al		
Signal Sensing (A TO)					
Auto-Turn-On (yes/ no)	YES	—	Function al		
ATO Input Frequency	50	Hz	Function al		
ATO Level	2	mV	Function al	2mV@50Hz into Line Inp ut w/ 1 inch. driven	
ATO Turn-on time	5	ms	Function al	Amp connected and AC o n, then input signal applie d	
Auto Mute/ Turn- O FF Time	10	minute s	Function al	T before muting, after signal is removed	Auto turn of time (T) must b e 5 > T <15
Power on Delay ti me	3	sec.	Function al	AC Power Applied	
Transients/Pops					
ATO Transient	5	mV-pe ak	10	Speaker Outputs	
Turn-on Transient	50	mV-pe ak	100	Speaker Output	AC Line cycled from OFF to ON
Turn-off Transient	50	mV-pe ak	100	Speaker Output	AC Line cycled from ON to OFF
Efficiency					
Stand-by Input Pow er	12	Watts	15	@ nom. line voltage	Maximum allowable input po wer under nominal Input volt age and frequency, HOT or COLD operation.
Power Cons. @ rat ed power	195	Watts	210	@ nom. line voltage	100 Watts @ 4 Ohms nomin al line voltage

Parameter	Specification	Unit	QA Test Limits	Conditions	Notes
Protection					
Short Circuit Protection	YES	—	Functional	Direct short at output	
Thermal Protection	65 deg. C	—	Functional	@1/8 max unclipped Power	Temperature rise should not exceed 35K rise
DC Offset Protection	YES	—	Functional	DC present at Speaker Output leads	Relay or crowbar (for driver/fire protection)
Line Fuse Rating					External fuse with UL/SEMKO rated holder
120 VAC	2.5	Amps		Type-T or Slo Blo, Fuse Markings T2.5A, 250V	
230 VAC	1.25	Amps		Type-T, Low breaking capacity, Fuse markings T1.25AL, 250V	

SUBWOOFER CONTROLS


Rear Panel

A Few Suggestions

- We recommend that you do not operate your speakers or subwoofer with the bass, treble and loudness controls set to full boost. This will place undue strain on your electronics and speakers and could damage them.
- The volume control setting on your processor/preamp or receiver is not a specific indication of the overall loudness level of the speakers. The only important consideration is the loudness level at which the system can be played, regardless of where the volume control is set.
- Always turn down the volume control setting on your processor/preamp or receiver when changing a cassette or CD, or switching inputs to AM or FM operation. Excessively loud transients (clicks or popping sounds) can damage the satellite speakers and possibly the subwoofer.

Important!

Whenever changing cables, pulling plugs, etc., ALWAYS TURN OFF ALL EQUIPMENT, including the subwoofer.

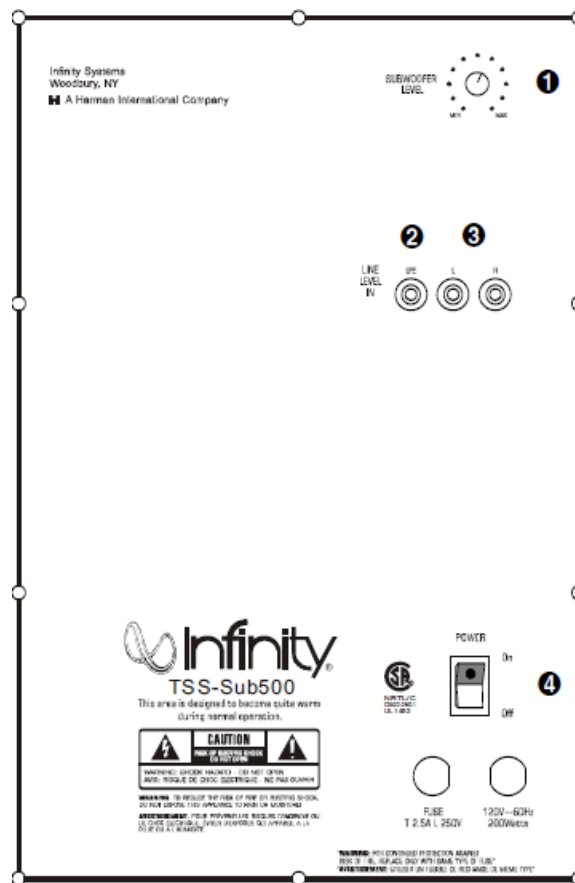


1. Subwoofer Level Control
2. LFE Input
3. Line-Level Inputs
4. Power Switch

SUBWOOFER CONNECTIONS

- If you have a Dolby® Digital or DTS® receiver/processor with a low-frequency-effects (LFE) or subwoofer output
- If your receiver/processor does not contain a Dolby Digital or DTS processor but has a subwoofer output

15' (4.6m) subwoofer cable included

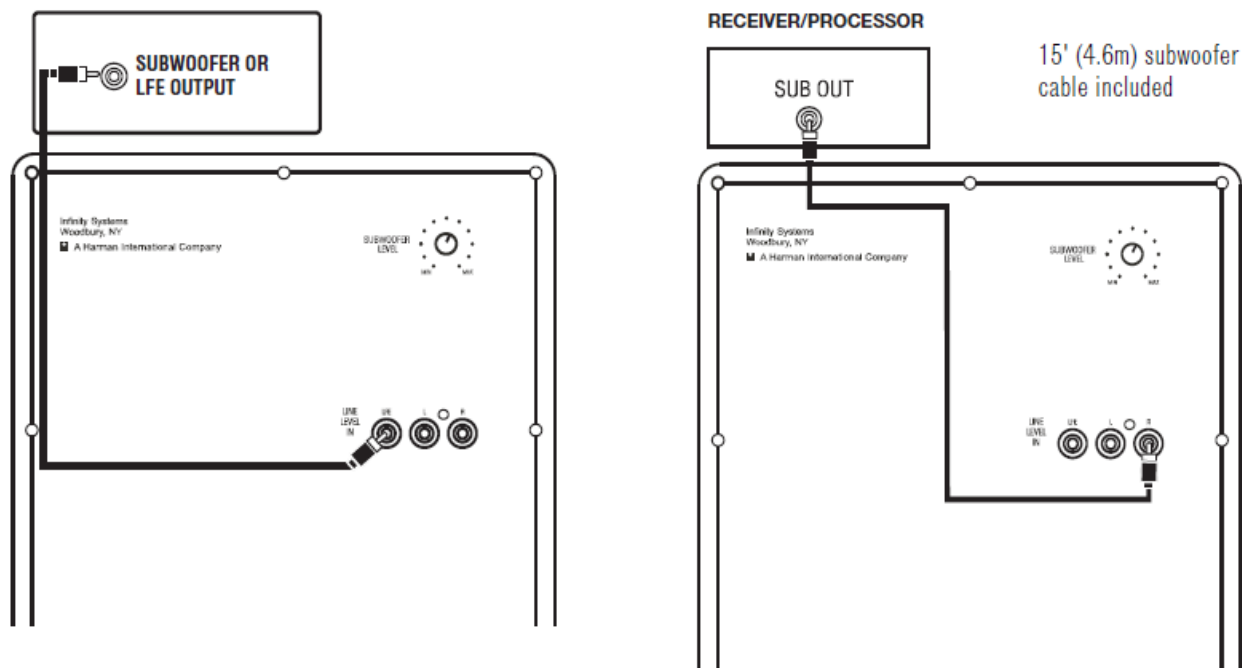

NOTE: If your receiver/processor has only one sub out, you may use either the L or R input.

OPERATION

• Surround Modes

When using the TSS-500 in a Dolby Digital or DTS home theater system, make sure all speakers are set to "Small". When using the system in a Dolby Pro Logic® home theater system, make sure the receiver's center channel mode is set to "Normal."

Some Dolby Digital-equipped receivers/processors offer different setup options for each source or surround mode (e.g., CD-stereo, videotape, Dolby Digital, Pro Logic). In each case, follow your equipment's instructions to ensure that the subwoofer output is turned on and that the speakers are set to "Small" in each mode.

If your receiver has adjustable crossover settings, we recommend the subwoofer crossover be set between 100Hz and 120Hz.

• Power On

Plug your subwoofer's AC cord into a wall outlet. Do not use the outlets on the back of the receiver.

Initially set the Subwoofer Level Control 1 to the "MIN" position.

Turn on the subwoofer by pressing the Power Switch 4 on the rear panel.

Turn on your entire audio system and start a CD or movie soundtrack at a moderate level.

• Auto On/Standby

With the Power Switch 4 in the ON position, the LED on the back will remain lit in green or red to indicate the ON/STANDBY mode of the subwoofer.

RED = STANDBY (No signal detected, Amp Off)

GREEN = ON (Signal detected, Amp On)

The subwoofer will automatically enter the Standby mode after approximately 10 minutes when no signal is detected from your system. The subwoofer will then power ON instantly when a signal is detected. During periods of normal use, the Power Switch 4 can be left on. You may turn off the Power Switch 4 for extended periods of nonoperation, e.g., when you are away on vacation.

• Adjust Level

Turn the Subwoofer Level Control 1 up about halfway. If no sound emanates from the subwoofer, check the AC-

line cord and input cables . Are the connectors on the cables making proper contact? Is the AC plug connected to a “live” receptacle? Has the Power Switch 4 been pressed to the “On” position? Once you have confirmed that the subwoofer is active, proceed by playing a CD or DVD. Use a selection that has ample bass information. Set the overall volume control of the receiver/processor to a comfortable level. Adjust the Subwoofer Level Control 1 until you obtain a pleasing blend of bass. Bass response should not overpower the room but rather be adjusted so there is a harmonious blend across the entire musical range. Many users have a tendency to set the subwoofer volume too loud, adhering to the belief that a subwoofer is there to produce lots of bass. This is not entirely true. A subwoofer is there to

- **TSS-500**

Enhance bass, extending the response of the entire system so the bass can be felt as well as heard. However, overall balance must be maintained or the music will not sound natural. An experienced listener will set the volume of the subwoofer so its impact on bass response is always there but never obtrusive.

- **Final Positioning**


After correctly connecting the TSS-500 system and verifying that both the subwoofer and all satellite speakers are playing, it is time to optimize the system for your particular listening room. Earlier, you placed the subwoofer in its general location. Finding the exact location for optimum performance sometimes only involves moving the speakers up to a few inches in any direction. We urge you, therefore, to experiment with placement, if possible, until your speakers deliver their full potential.

- **MAINTENANCE AND SERVICE**

The satellite and subwoofer enclosures may be cleaned using a soft cloth to remove fingerprints or to wipe off dust.


All wiring connections should be inspected and cleaned or remade periodically .The frequency of maintenance depends on the metals involved in the connections, atmospheric conditions and other factors, but once per year is the minimum.

If a problem occurs, make sure that all connections are properly made and clean. If a problem exists in one loudspeaker, reverse the connection wires to the left and right system. If the problem remains in the same speaker, then the fault is with the loud-speaker. If the problem appears in the opposite speaker, the cause is in another component or cable. In the event that your TSS-500 ever needs service, contact your local Infinity dealer or visit www.infinitysystems.com for a service center near you.

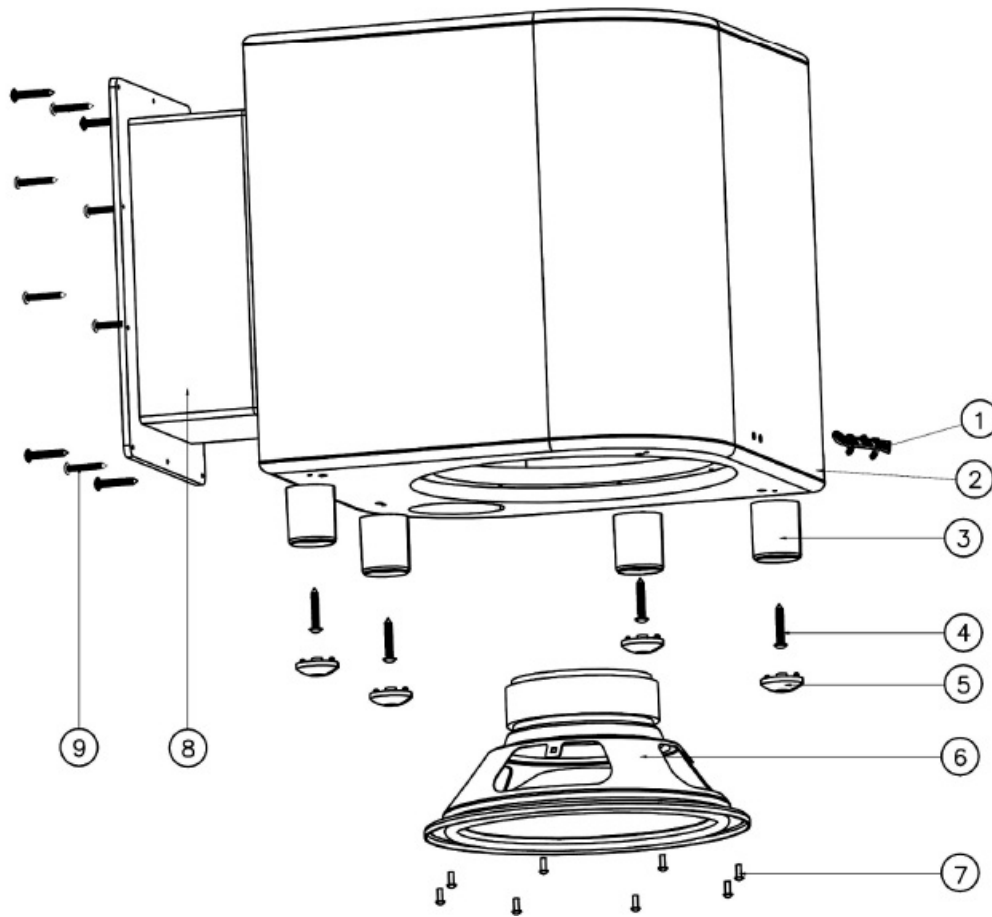

Item No.	Description	Part Number	Qty
1	Infinity Logo	316-ABS-00550-E	1
2	TSS-500 Cabinet	Not for Sale	1
3	Feet (Main, Plastic) Platinum	321-ABS-05055-0AAE	4
	Feet (Main Plastic) Charcoal	321-ABS-05055-0BAE	4
4	Foot Screw	352-HM04070D998-E	4
5	Rubber Foot Pad	320-RUB-05051-0BAE	4
6	10" Woofer OCR= 3.30	20MF10DAG-DW01	1
7	Woofer Screw – Platinum	352-FM04020D605	8
	Woofer Screw – Charcoal	352-FM04020D605-E	8
8	TSS-500 Amplifier	Not for Sale	1
9	Amplifier Screws	352-AM04020D210-E	10

Test Set Up and Procedure

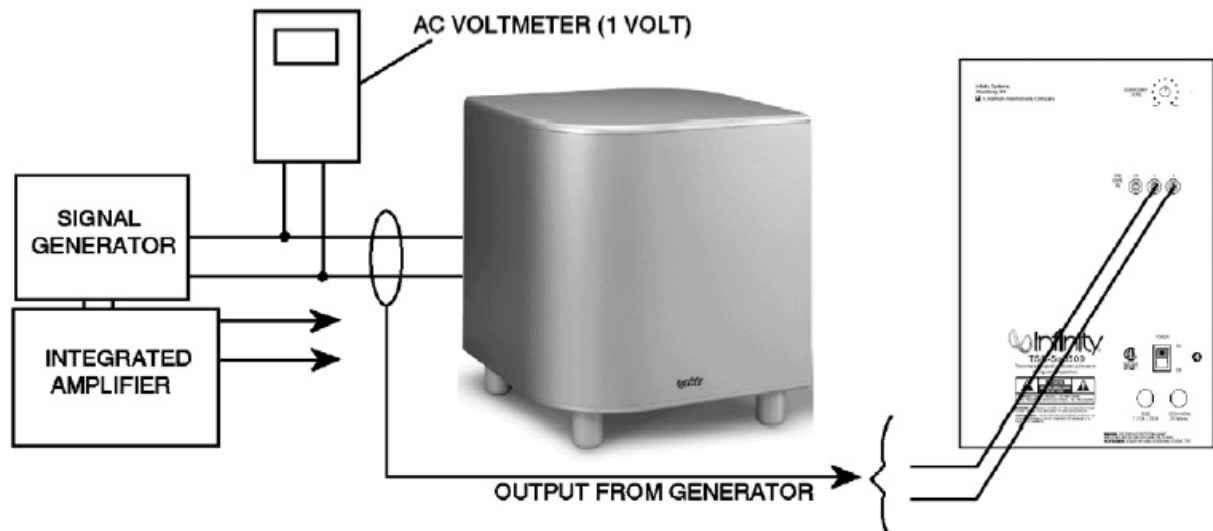

Equipment needed

- Function/signal generator/sweep generator
- Integrated Amplifier
- Multimeter
- Speaker cables

General Unit Function (UUT = Unit Under Test)

1. From the signal generator, connect one line level (RCA) cable to the Subwoofer Line Level Input jacks L/R on the UUT. Use a Y-cable from a mono source if necessary to connect to both inputs. Do not connect to the single LFE input.
2. On the front of the unit, turn the LEVEL control full counterclockwise.
3. Turn on generator, adjust to 100mV, 50 Hz.
4. Plug in UUT; turn the power switch ON. LED should be Red. Turn LEVEL control full clockwise (MAX)
5. LED should now be Green; immediate bass response should be heard and felt from port tube opening.
6. Turn off generator, turn LEVEL control fully counterclockwise, disconnect RCA cable.


Sweep Function

1. Follow steps 3-6 above, using a sweep generator as a signal source.
2. Sweep generator from 20Hz to 300Hz. Listen to the cabinet and drivers for any rattles, clicks, buzzes or any other noises. If any unusual noises are heard, remove woofers and test.

Driver Function


1. Remove woofer from cabinet; detach + and – wire clips.
2. Check DC resistance of woofer it should be 3.3 ohms $\pm 10\%$
3. Connect a pair of speaker cables to driver terminals. Cables should be connected to an integrated amplifier fed by a signal generator. Turn on generator and adjust so that speaker level output is 5.0V.
4. Sweep generator from 20Hz to 1kHz. Listen to driver for any rubbing, buzzing, or other unusual noises.



Block Diagram

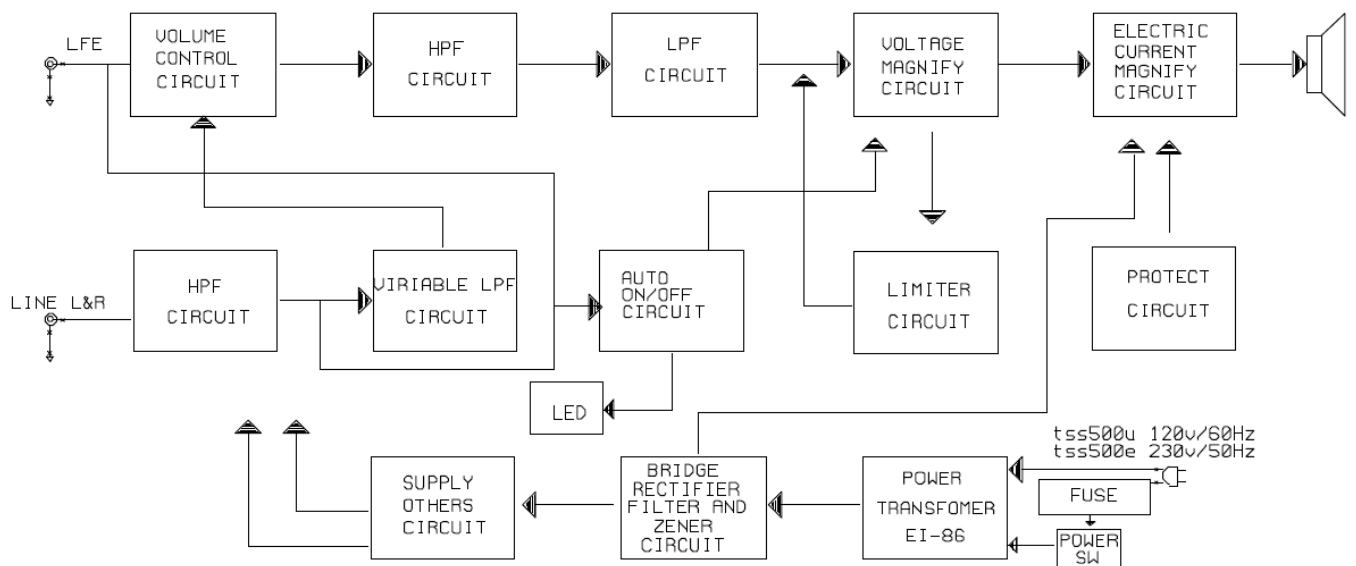





TS S500

  
Troubleshooting Flow Chart


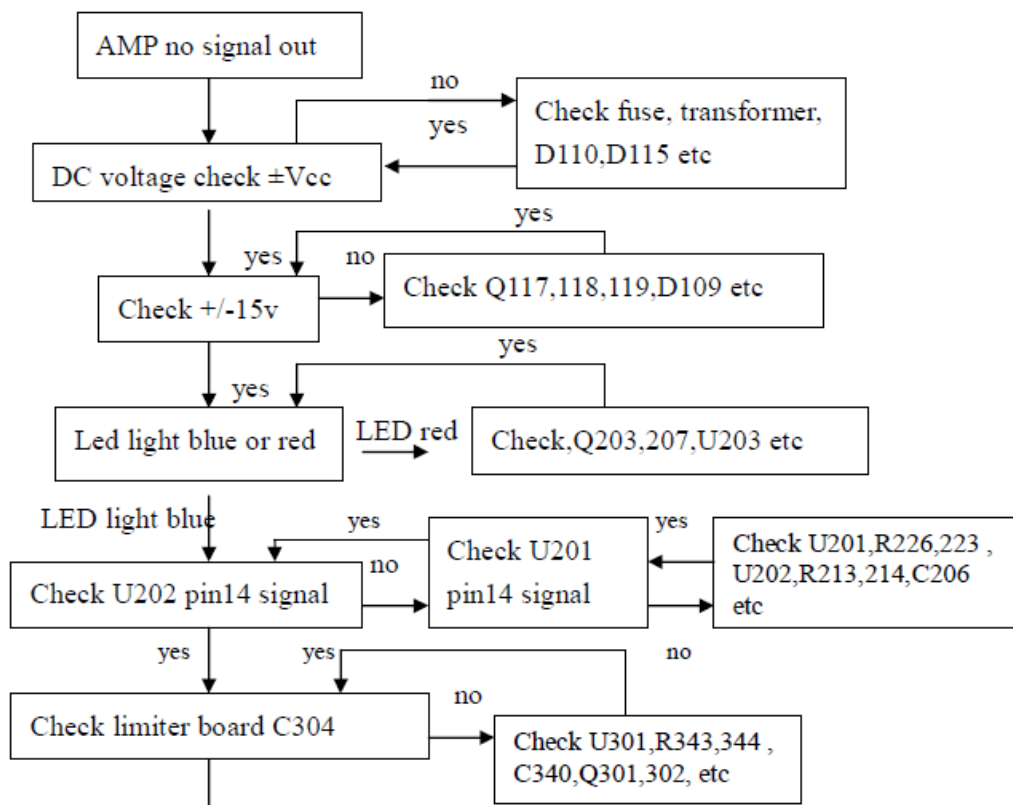


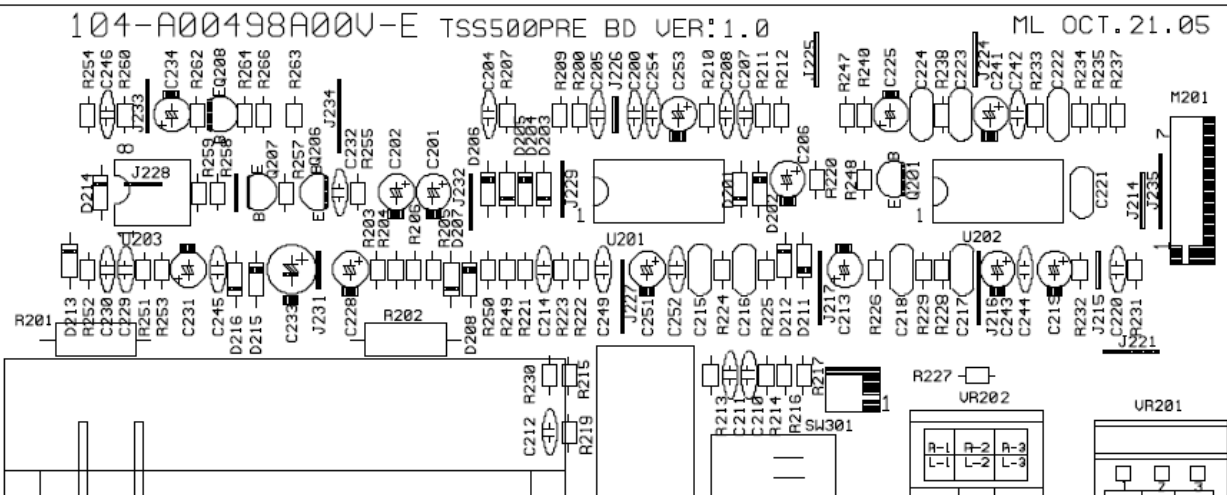


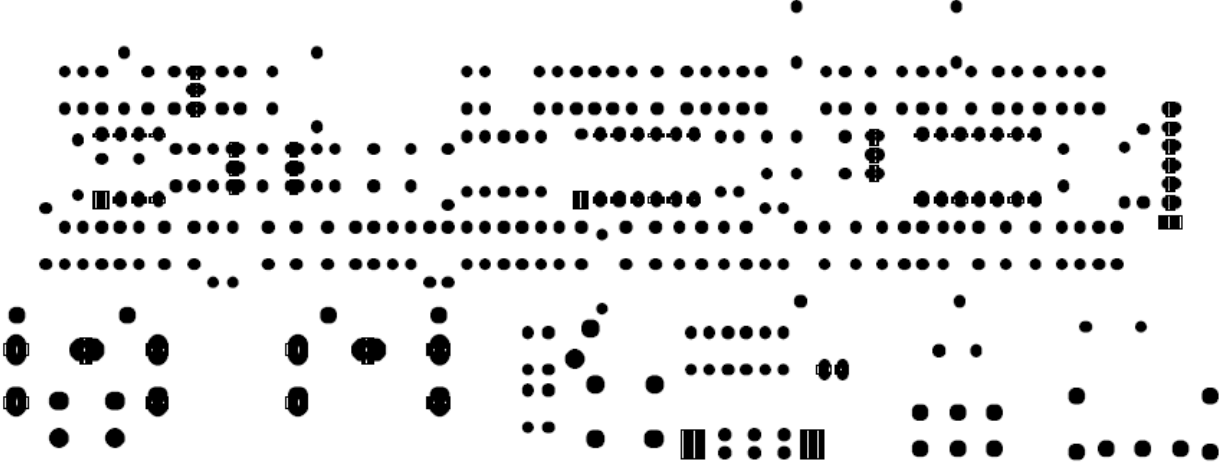

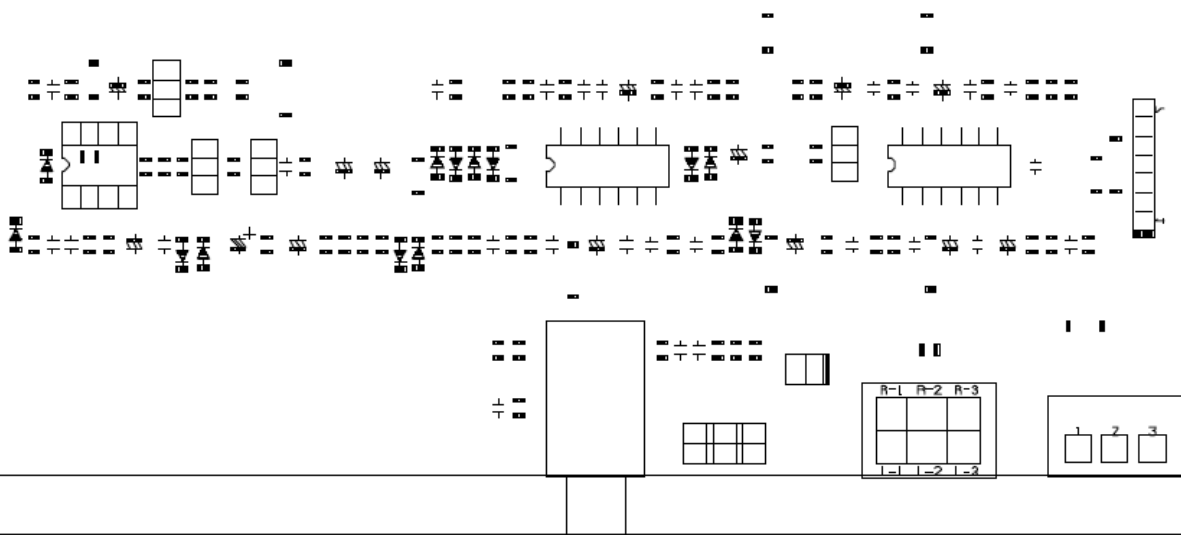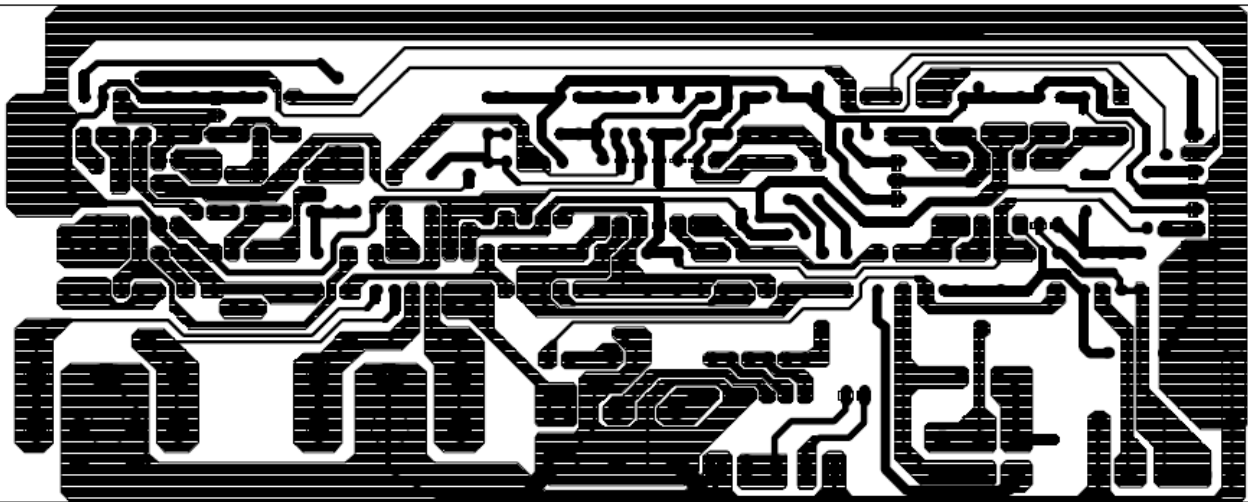

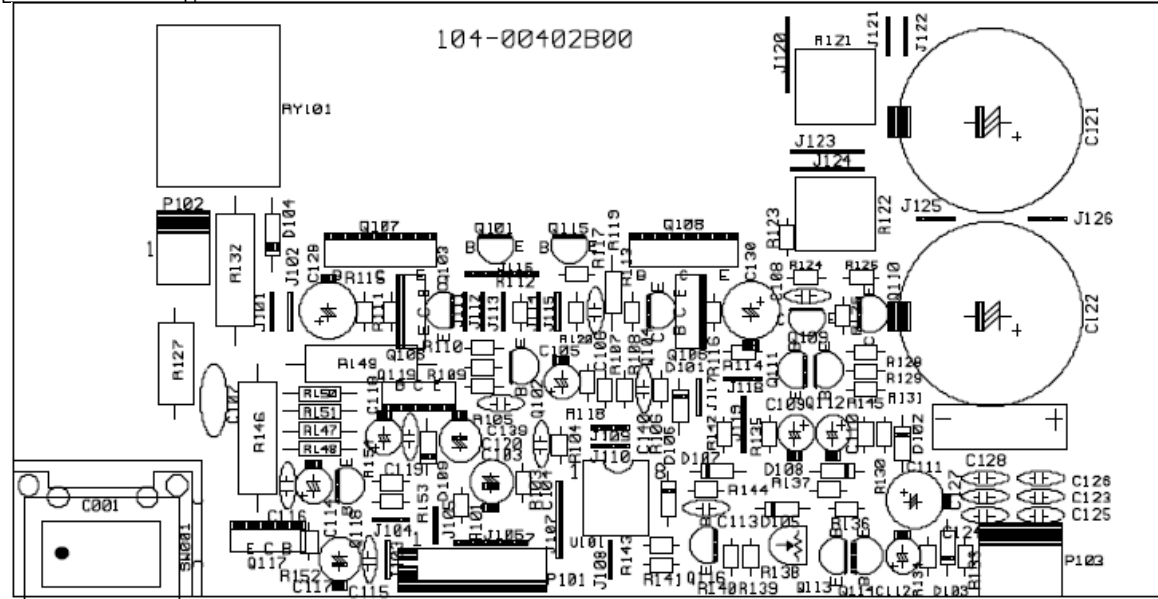

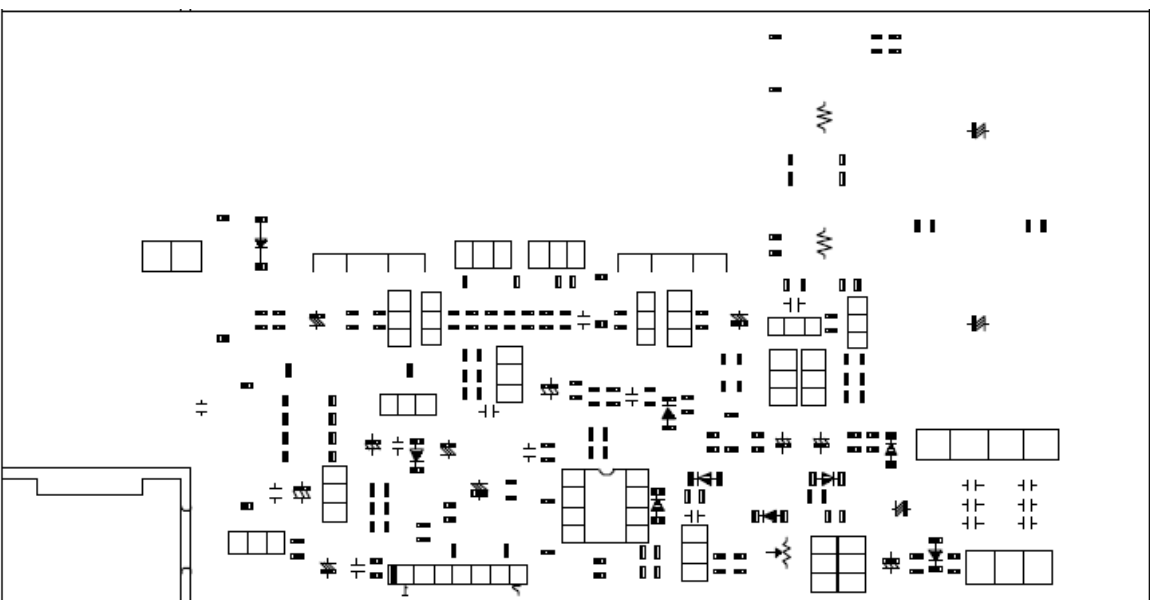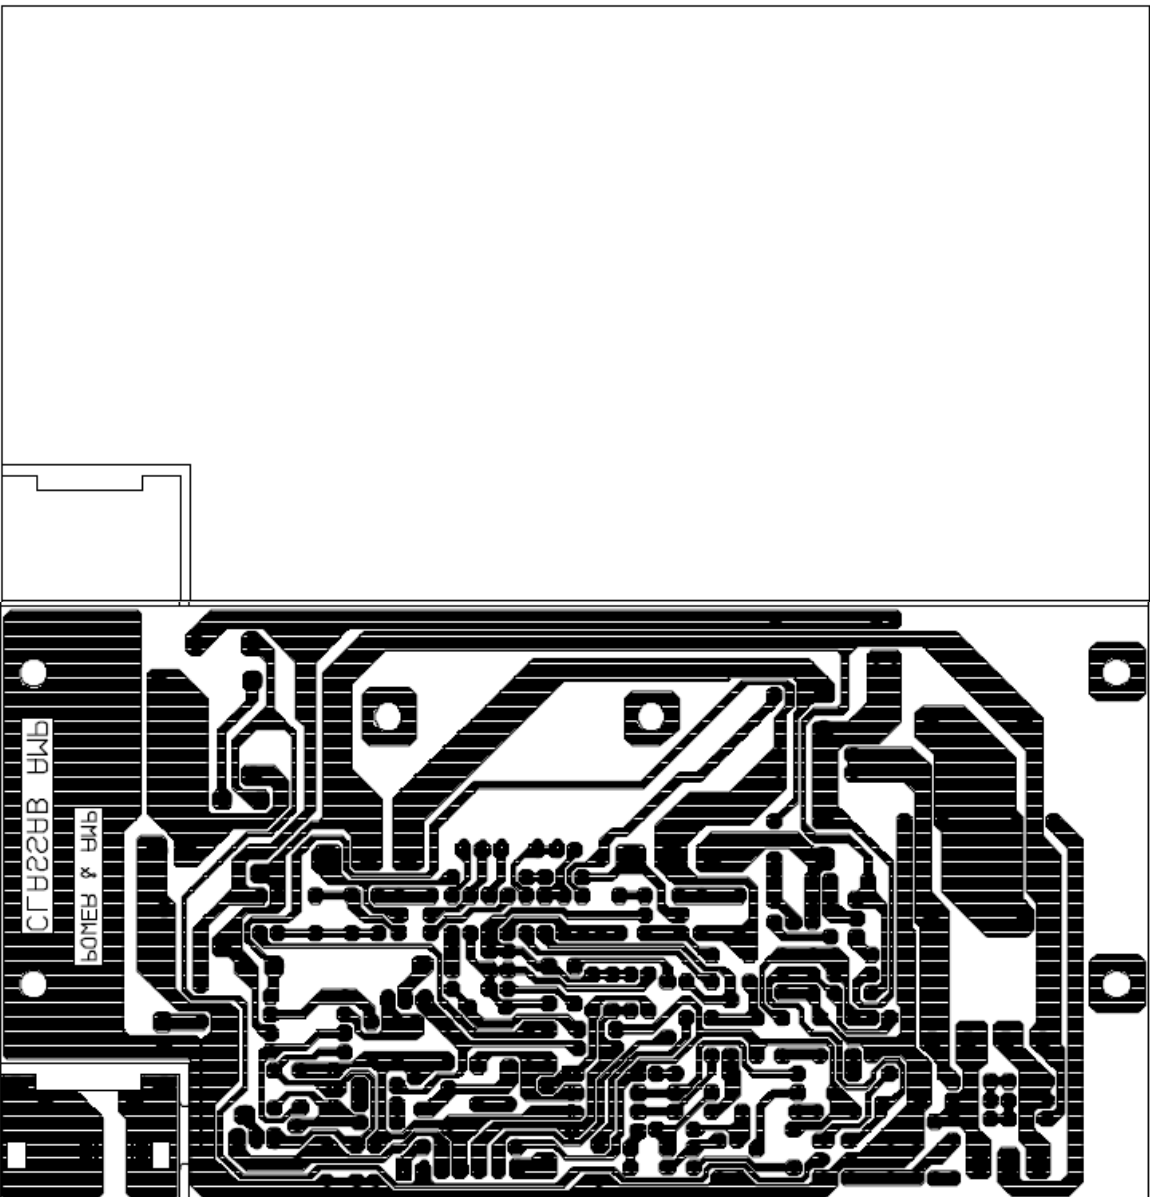

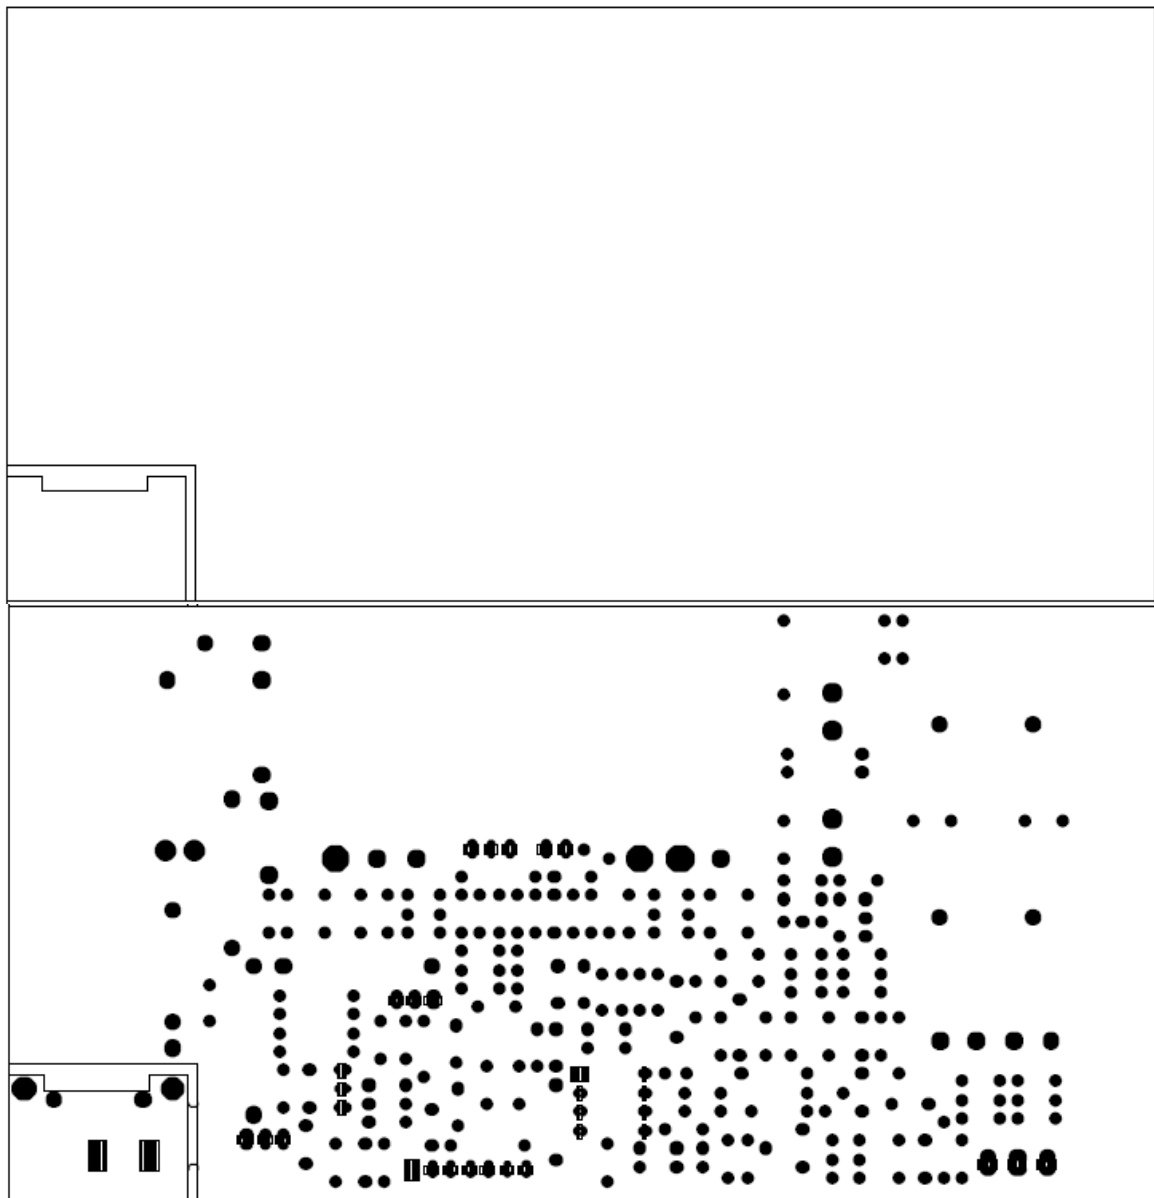TSS-Sub500 (120v) Electrical Parts List			
Part Number	Description	Qty	Reference Designator
PREAMP PCB			
Resistors			
110-16102j26	Resistor 1K 1/6W ±5% CF 26mm	4	R213,214,215,254
110-16103j26	Resistor 10K 1/6W ±5% CF 26mm	13	R212,216,217,220,221,222,225,228,226,232,235,240,248
110-16104j26	Resistor 100K 1/6W ±5% CF 26mm	2	R231,266
110-16105j26	Resistor 1M 1/6W ±5% CF 26mm	1	R259
110-16122j26	Resistor 1.2K 1/6W ±5% CF 26mm	1	R264
110-16124j26	Resistor 120K 1/6W ±5% CF 26mm	1	R233

110-16151j26	Resistor 150Ω 1/6W ±5% CF 26mm	1	R253
110-16153j26	Resistor 15K 1/6W ±5% CF 26mm	1	R234
110-16154j26	Resistor 150K 1/6W ±5% CF 26mm	1	R252
110-16183j26	Resistor 18K 1/6W ±5% CF 26mm	2	R262,227
110-16205j26	Resistor 2M 1/6W ±5% CF 26mm	1	R257
110-16223j26	Resistor 22K 1/6W ±5% CF 26mm	4	R238,247,250,255
110-16273j26	Resistor 27K 1/6W ±5% CF 26mm	2	R223,237
110-16333j26	Resistor 33K 1/6W ±5% CF 26mm	1	R249
110-16472j26	Resistor 4.7K 1/6W ±5% CF 26mm	2	R258,260
110-16473j26	Resistor 47K 1/6W ±5% CF 26mm	2	R219,251
110-16512j26	Resistor 5.1K 1/6W ±5% CF 26mm	3	R211,229 ,230
110-16513j26	Resistor 51K 1/6W ±5% CF 26mm	1	R224
115-h503a104	variable Resistor D16 50K/1 A LEVEL	1	VR201
Capacitors			
130-2b221k503	disc Capacitor 220P 50V ± 10%	9	C207,208,210,211,212,214,220,230,249
130-3f104z503	disc Capacitor 0.1U 50V +80/-20%	7	C232,242,244,245,246,252,254
130-sl470k503	disc Capacitor 47P 50V ± 10%	1	C229
132-103j503	electrolytic 0.01U 50V ± 5%	2	C223,224
132-104j503	electrolytic 0.1U 50V ± 5%	3	C218,221,222
132-223ja03	electrolytic 0.22uF 100V ± 5%	1	C215
132-473j503	electrolytic 0.047U 50V ± 5%	2	C216,217
135-3105m50	electrolytic 1U 50V ± 20%	1	C228
135-3106m50	electrolytic 10uF 50V ± 20%	8	C206,213,219,231,241,243,251,253
135-3107m16	electrolytic 100uF 16V ± 20%	2	C233,234
135-3226m50	electrolytic 22U 50V ± 20%	1	C225
Semiconductors			
192-027c1815gr	Transistor 2SC1815GR NPN	3	Q201,206,207
197-031n4148	diode 100mA 75V SIGNAL 1N4148 ROHM	7	D201,202,207,208,211,212,214
199-15000335	zener diode 3.3V 1/2W 52mm	1	D213

190-06m4558d	I.C OPA 4558D DUAL OP-AMP	1	U203
190-16t1074cn	I .C TL074cm QUAD OP-AMP	2	U201,202
195-10204hgw	LED 204HGW 3c	1	D209
Miscellaneous			
162-50159201	WIRE ASS'Y 2PIN 150mm	1	for D209
174-0rca326p	JACK RCA-326	1	JK202
POWER/MAIN PCB			
Resistors			
110-14472j26	Resistor 4.7K 1/4W $\pm 5\%$ 26mm	2	R147,150
110-14681j26	Resistor 680 Ω 1/4W $\pm 5\%$ 26mm	2	R148,151

Part Number	Description	Qty	Reference Designator
POWER/MAIN PCB			
110-16101j26	Resistor 10 0 Ω 1/6W $\pm 5\%$ CF 26mm	1	R120
110-16102j26	Resistor 1K 1/6W $\pm 5\%$ CF 26mm	1	R124
110-16103j26	Resistor 10K 1/6W $\pm 5\%$ CF 26mm	1	R134
110-16105j26	Resistor 1M 1/6W $\pm 5\%$ CF 26mm	1	R143
110-16123j26	Resistor 12K 1/6W $\pm 5\%$ CF 26mm	2	R135,139
110-16152j26	Resistor 1.5K 1/6W $\pm 5\%$ CF 26mm CF	6	R103,123,136,137,141,142
110-16153j26	Resistor 15K 1/6W $\pm 5\%$ CF 26mm	4	R118,145,152,154
110-16154j26	Resistor 150K 1/6W $\pm 5\%$ CF 26mm	1	R131
110-16181j26	Resistor 18 Ω 1/6W $\pm 5\%$ CF 26mm	2	R111,114
110-16182j26	Resistor 1.8K 1/6W $\pm 5\%$ CF 26mm	1	R153
110-16223j26	Resistor 22K 1/6W $\pm 5\%$ CF 26mm	3	R128,129,133
110-16332j26	Resistor 3.3K 1/6W $\pm 5\%$ CF 26mm	3	R106,107,144
110-16392j26	Resistor 3.9K 1/6W $\pm 5\%$ CF 26mm	2	R105,108
110-16393j26	Resistor 39K 1/6W $\pm 5\%$ CF 26mm	1	R126
110-16470j26	Resistor 47 Ω 1/6W $\pm 5\%$ CF 26mm	4	R112,113,115,116
110-16471j26	Resistor 470 Ω 1/6W $\pm 5\%$ CF 26mm	1	R140
110-16472j26	Resistor 4.7K 1/6W $\pm 5\%$ CF 26mm	3	R110,125,130

110-16473j26	Resistor 47K 1/6W ±5% CF 26mm	1	R101
110-16560j26	Resistor 56Ω 1/6W ±5% CF 26mm	1	R117
110-16563j26	Resistor 56K 1/6W ±5% CF 26mm	1	R104
110-16682j26	Resistor 6.8K 1/6W ±5% CF 26mm	1	R109
110-10821jk2	Resistor 820Ω 1W ±5% 10mm	1	R132
110-122r2j15	Resistor 2.2Ω 1/2W ±5% 15mm	1	R127
110-20331jk2	Resistor 330Ω 2W ±5% 5mm	2	R146,149
113-50r10j10	cement Resistor 0.1Ω 5W ±5%	2	R121,122
114-03302m0	semi-fixed Resistor 3K 0.3W 1±20%	1	R138
Capacitors			
130-2b102k503	disc Capacitor 1000p 50V±10%	1	C116
130-2f104z503	disc Capacitor 0.1u 50V+80/-20%	4	C108,113,115,119
130-3f473m503	disc Capacitor 0.047u 50V±20%	1	C106
130-s1101k503	disc Capacitor 100p 50V SL±10%	2	C139,140
132-104j503	mylar Capacitor 0.1u 50V ±5%	1	C107
132-223ja03	mylar Capacitor 0.022uF 100V ±5%	4	C124,125,126,128
135-3105m50	mylar Capacitor 1U 50V ±20%	2	C105,112
135-3107m16	mylar Capacitor 100uF 16V ±20%	3	C109,117,120
135-3226m50	mylar Capacitor 22U 50V ±20%	2	C114,118
135-3227m10	mylar Capacitor 220U 10V ±20%	2	C129,130
135-3227m16	mylar Capacitor 220U 16V ±20%	1	C111
135-3476m25	mylar Capacitor 47U 25V ±20%	1	C103
132-223ja03	mylar Capacitor 0.022uF 100V ±5%	2	C123,127
135-3107m16	electrolytic 100uF 16V ±20%	1	C110
135-4688m50	electrolytic 6800U/50V ±20% D25X45mm	2	C121,122
Semiconductors			
192-027c1815gr	Transistor 2SA1815GR NPN	5	Q102,111,112,113,118
192-028a1015gr	Transistor 2SA1015GR PNP	2	Q114,116

192-1572n555 1	Transistor 2N5551 NPN	2	Q103,109
192-1582n540 1	Transistor 2N5401 AI-PNP 350V 500MA TO-9 2	2	Q104,110
197-031n4148	diode 100mA 75V SIGNAL 1N4148 ROHM	4	D101,103,105,108
199-15000335	zener diode 3.3V 1/2W 52mm	1	D102
199-15000625	zener diode 6.2V 1/2W 52mm	2	D106,107
199-15001605	zener diode 16V 1/2W 52mm	1	D109
190- 06m4558d	IC OPA 4558D DUAL OP-AMP	1	U101
192-021tip35c	Transistor TIP35C NPN	1	Q107
192-022tip36c	Transistor TIP36C PNP	1	Q108
192-027c1815 gr	Transistor 2SC1815GR NPN	2	Q101,115
192-201d882Y	Transistor KSD882Y PNP	1	Q117

Part Number	Description	Qty	Reference Designator
POWER/MAIN PCB			
192-202b772y	Transistor KSD772Y PNP	1	Q119
192-991d669a	Transistor HI-SINCERITY HSD669A NPN	1	Q106
192-992b649t	Transistor HSB649T PNP	1	Q105
197-00kb1405	diode 4A500V KBL405 BRIDGE	1	D110
197-101n4002	diode IN4002	1	D104
Miscellaneous			
162-10202001	wire 26AWG 1007 200mm RED	1	
171- udhss124d	relay 5A 24V UDH-SS124D	1	RY101
175-1c07v01	wire connector 7PIN PITCH=2.5mm	1	P101
175-1d02v01	wire connector 2PIN PITCH=3.96mm	1	P102
175-1d03v01	wire connector 3PIN PITCH=3.96mm	1	P103
193-3m2520	insulator TO-3P 25x20mm	2	for Q107,108
LIMITER PCB			
110-16103j26	Resistor 10K 1/6W $\pm 5\%$ CF 26mm	8	R301,303,304,308,309,314,340,344


110-16183j26	Resistor 18K 1/6W ±5% CF 26mm	1	R302
110-16223j26	Resistor 22K 1/6W ±5% CF 26mm	2	R310,312
110-16273j26	Resistor 27K 1/6W ±5% CF 26mm	1	R341
110-16333j26	Resistor 33K 1/6W ±5% CF 26mm	1	R305
110-16472j26	Resistor 4.7K 1/6W ±5% CF 26mm	2	R342,343
110-16474j26	Resistor 470K 1/6W ±5% CF 26mm	1	R307
110-16751j26	Resistor 750Ω 1/6W ±5% CF 26mm	2	R311,313
110-16755j26	Resistor 7.5k 1/6W ±5% CF 26mm	1	R306
130-2f104z503	disc Capacitor 0.1u 50V +80/-20%	2	C305,306
132-103j503	Mylar Capacitor 0.01U 50V ± 5%	2	C302,303
135-3226m50	electrolytic 22U 50V ± 20%	2	C301,340
135-3476m25	electrolytic 47U 25V ± 20%	1	C304
192-027c1815 gr	Transistor 2SC1815gr NPN	2	Q301,302
197-031n4148	diode 100mA 75V SIGNAL 1N4148	2	D301,302
162-50289001	CABLE ASS'Y wire's 280mm AWG26 WHT	1	
175-9f40hr2	coupling 40PIN PITCH=2.54mm HR2*40	0.1 5	P301
190-16tl074cn	I .C TL074cm st QUAD OP-AMP	1	U301
MISCELLANEOUS/MECHANICAL			
123-14j70d	Ferrite Core U-16.3*8.2*13(J70)+CASE	1	
130-3f472md0 0	disc Capacitor 4700P 400V ± 20%	1	C001
150-e8604107	Power Transformer EI-86 60HZ 120V TT0869 96580	1	T1
152-u602015	Line Cord SVT FT-2 6FT	1	
154-u25006t0	Fuse 2.5A 250V 20mm	1	
155-520020	Fuse Holder R3-11	1	
162-10082007	WIRE RED 18AWG 80mm 8mm#1015	1	
162-50652003	WIRE 650mm RED=205# 0.5T BLK=110# 0.5 T	1	
176-wjcel	wire connector Pin CE-1	1	
180-prf1003S	switch ROCK RF-1003-BB2-OHA POWER	1	SW100
176-wjce1	wire connector pin CE-1	1	

350-EM04012 D024	4 *12 wood screw black	4	
351-HM04016 A218	M4*16 machine screw black	4	
351-AM03008 A079	M3*8 machine screw black	6	
352-AM03010 D065	3*10 P type tapping screw black	2	
352-AM03008 D040	3*8 B type tapping screw black	8	
354-GM04002	M4 nut black	4	
362-FE-00013	PCB support L TYPE t=1.6mmS.P.C.C 89*9*1 .6T	2	
311-ABS-0002 8	plastic knob 46077-W soft material P.V.C. LE VEL	1	
335-NYL-0000 2	wire clip 4K-4 NO-BB	2	


Part Number	Description	Qty	Reference Designator
MISCELLANEOUS/MECHANICAL			
333-EVA-0078 3	EVA W 198*12*2.0T	2	
333-EVA-0080 7	EVA L 274*12*2.0T	2	
333-EVA-0082 6	EVA W 198*12*1.0T	2	
333-EVA-0083 5	EVA L 274*12*1.0T	2	
320-RUB- 00033	rubber foot pad 25*21*4t	4	
337-CU-00101	copper foil 65L*50W	1	
306-ABS-0017 7	rear Plastic housing 198*298*102mm	1	
162-50552003	WIRE UL1007 #16 550mm#110/#205 0.5T	1	
302-AL-05048- 0BAE	rear board 300*200*2.5T black(RoHS)	1	
323-AL-00106- 0BB	HEAT SINK 117.5*71.5*25 anode is black	1	

Integrated Circuit Diagram


4558 Dual Op Amp
U101,203

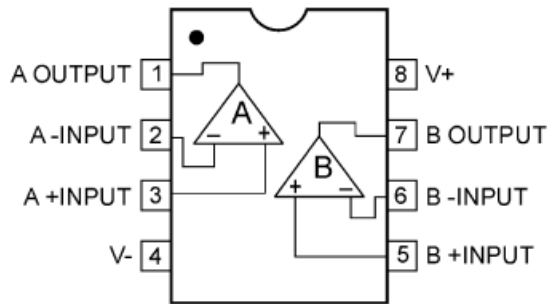


OPAMP, QUAD 14P DIL TL074
U201, 202, 301

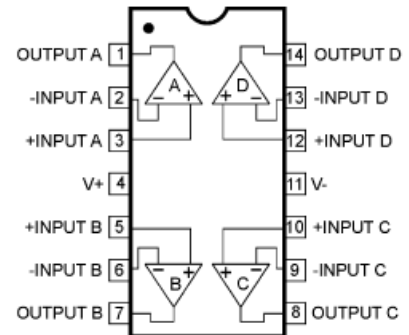


TIP35C, TIP36C
Q107,108

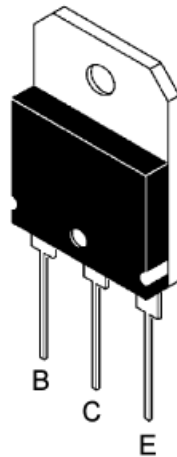

2N5401
Q104, 110

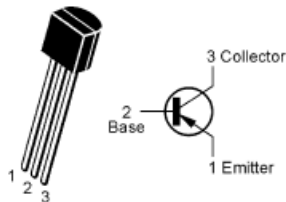


2N5551
Q103, 109

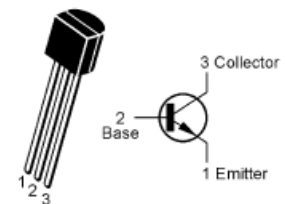


2SD669A, 2SB649A
KSB772, KSD882
Q105, 106, 117, 119




2SA1015
Q114,116

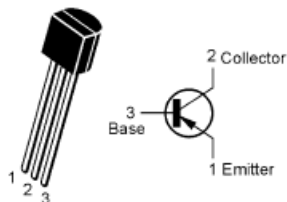

2SC1815
Q101,102,111,112,113,115,118,
201,206,207,301,302

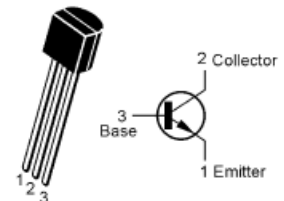

1. Emitter
2. Collector
3. Base

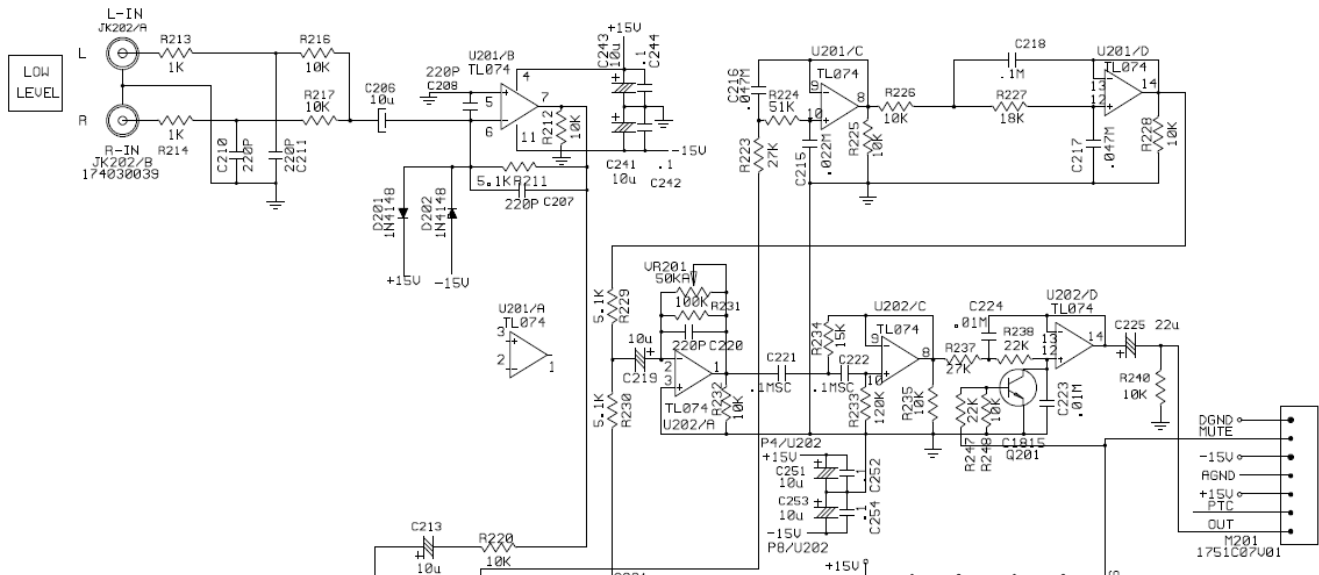

	Infinity TSS-SAT500CHR Powered Subwoofer System [pdf] User Manual TSS-SAT500CHR Powered Subwoofer System, TSS-SAT500CHR, Powered Subwoofer System, Subwoofer System
---	--

References

-  [Manual-Hub.com - Free PDF manuals!](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.