

Infinix Low Voltage System





Contents [\[hide \]](#)

- [1 Communication Cable Connection](#)
- [2 Single System Inverter Setup Instructions](#)
- [3 Battery Parallel Connection](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

Communication Cable Connection


Name	Interface	Wiring definition n	Notes	Standard Netw ork Cable Exa mple
------	-----------	------------------------	-------	--

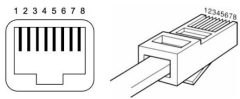Battery	CAN	1B/2A	Use a standard network cable to connect the inverter and battery	
Inverter	BMS	3B/5A		


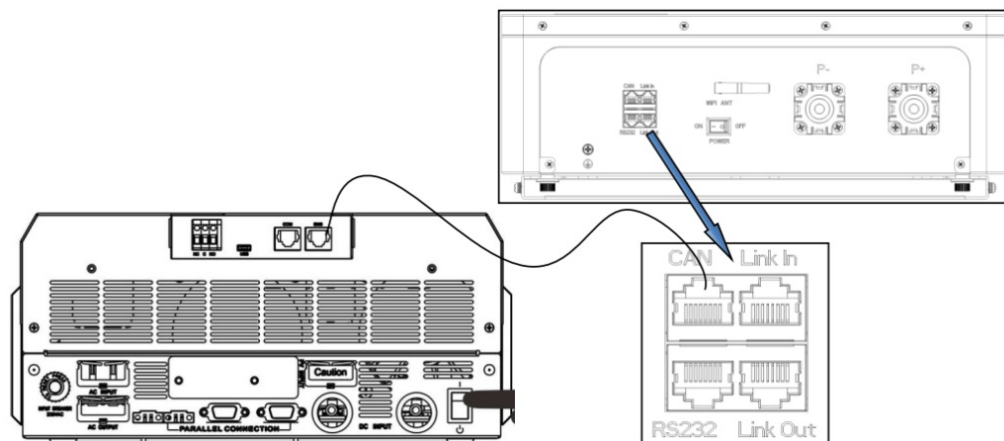


Single System Inverter Setup Instructions


1. Hold down ↑↓ at the same time (or ↵ enter Settings mode)
2. Select to 14 items, select pyl.
3. SOC value displayed on the display screen proves successful communication.

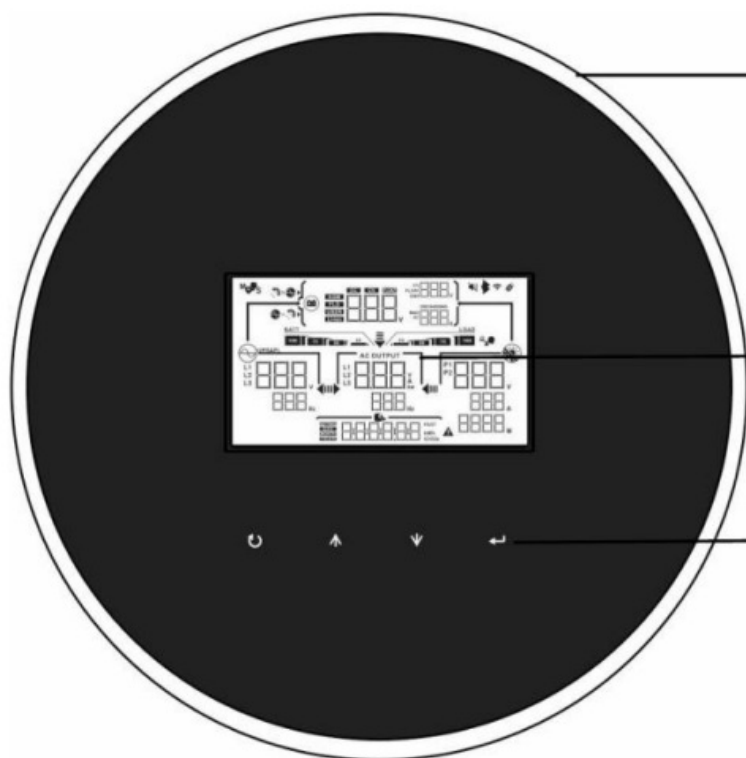

Battery Parallel Connection

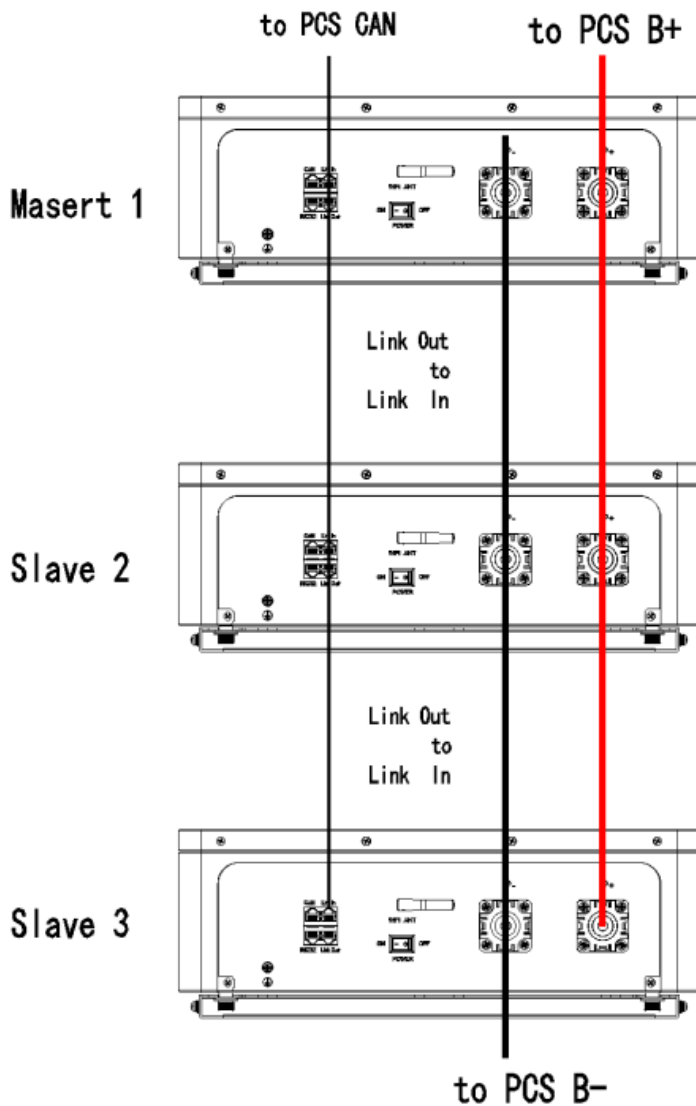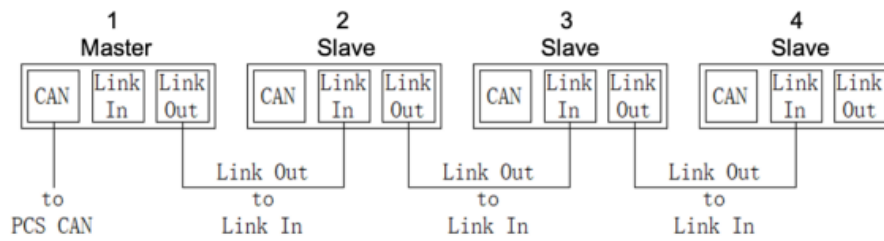

Documents / Resources

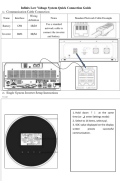	<p>Infinix Low Voltage System [pdf] User Guide</p> <p>Low Voltage System, Voltage System, System</p>
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.