



infobit iWall 409R Windows Software User Manual

[Home](#) » [infobit](#) » infobit iWall 409R Windows Software User Manual 

infobit iWall 409R Windows Software User Manual




Contents

- [1 Choose Connect Mode](#)
- [2 Select screen splicing mode](#)
- [3 Select display mode](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)


Choose Connect Mode

Internet mode:

Plugging RJ45 cable into the host computer and controller. (specific operation refer to the picture)

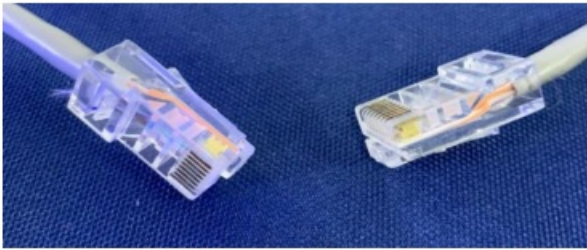


Two sides of connecting cable (RJ45)

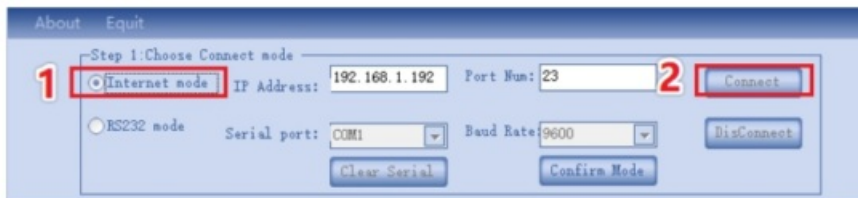


1. Open control program, enter IP address and Port num.
2. Click "connect"


Internet mode Computer IP address setting:

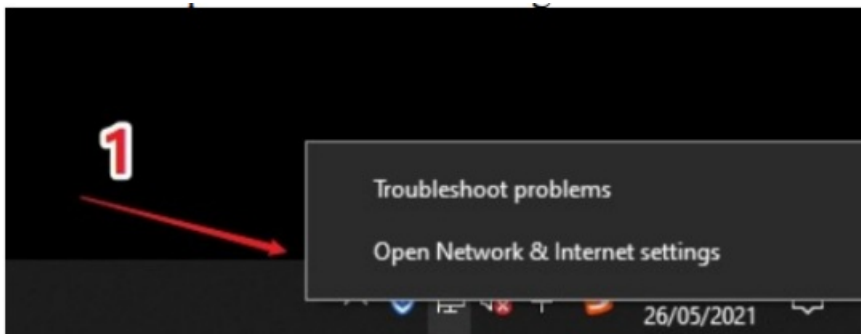

1. Right-click the "Network", click the Open Network&Internet settings

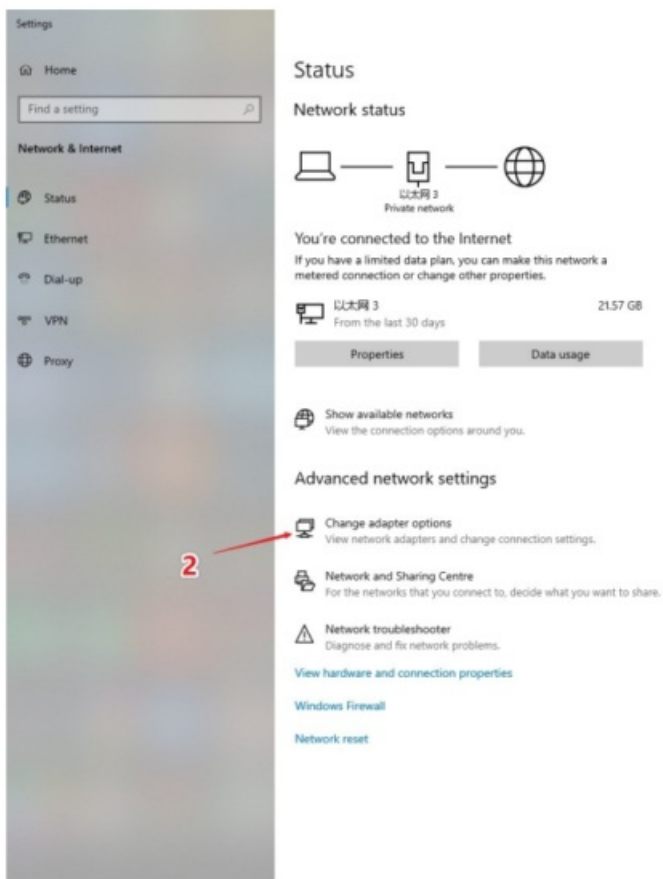


2. Click change network settings

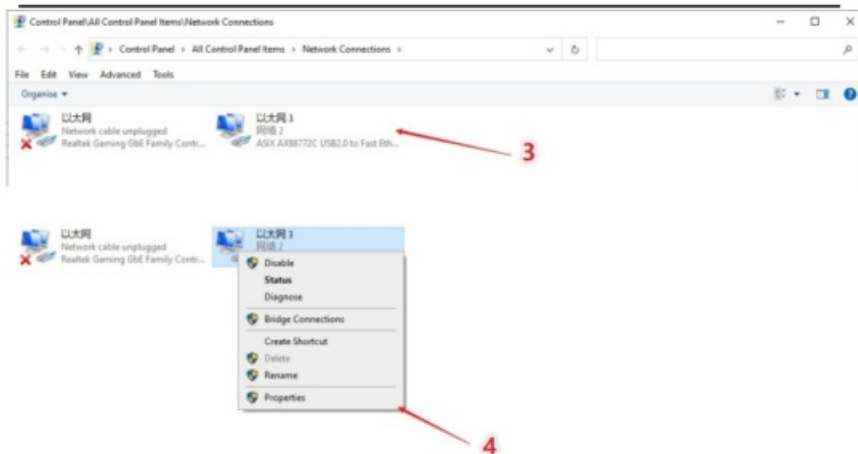


3. Right-click the internet been connect.

4. Select properties

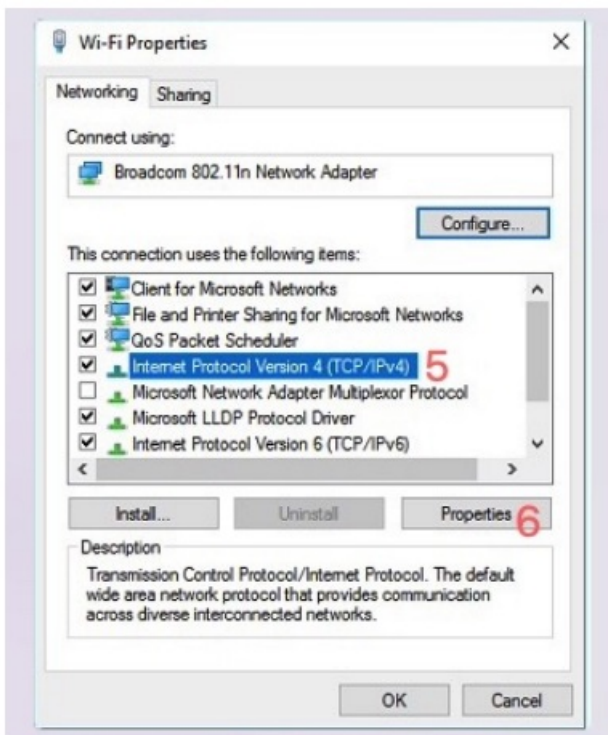

5. Select (TCP/IPv4)


6. Click properties

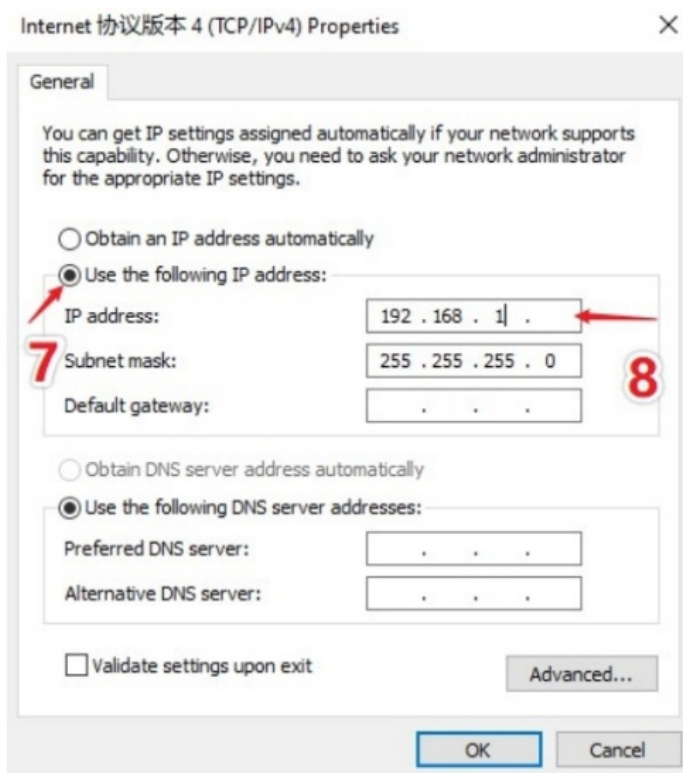

7. Select Use the folloing IP address


8. Change the IP address to 192.168.1.(from2-254)

RS232 mode:

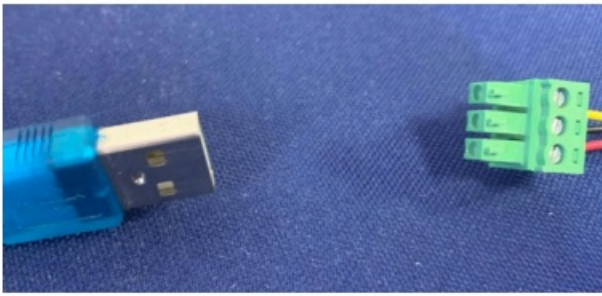

Two sides of connecting cable (Serial mode)

1. Find the corresponding port
 1. Right-click "This PC" .
 2. Select "Properties"
 3. "Device Manager"
 4. figure out which USB interface be plugged

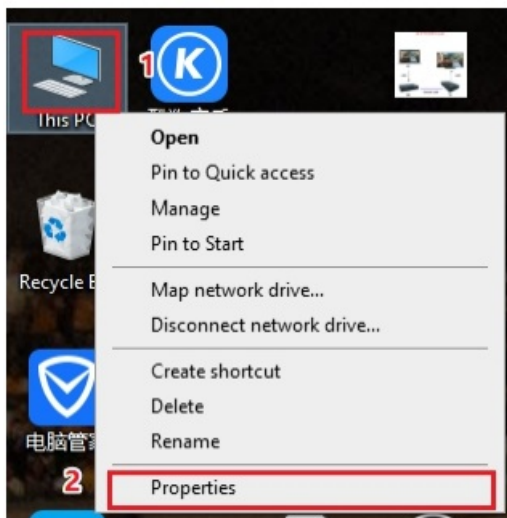


2. Set connection mode



1. Click "Clear Serial".
2. select the plugged COM interface.
3. Click "Confirm Mode"(don't need to choose "Baud Rate")
4. Click "Connect"


Select screen splicing mode

1. Typing or click the button to select screen joint mode.
2. Click ok.

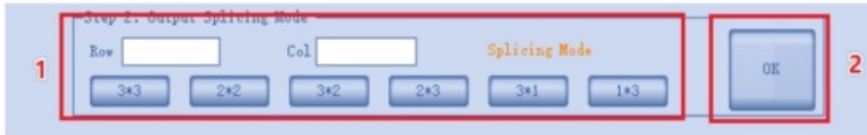


Select display mode

Display mode introduction

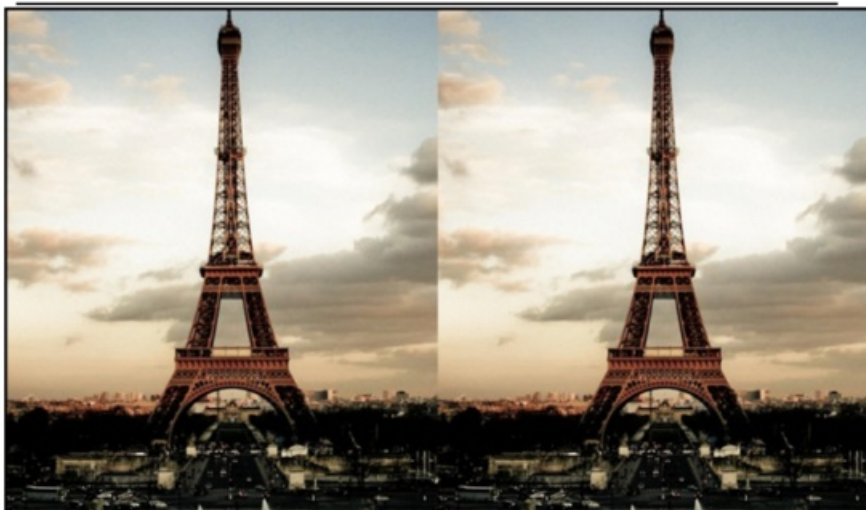



Up-down mode

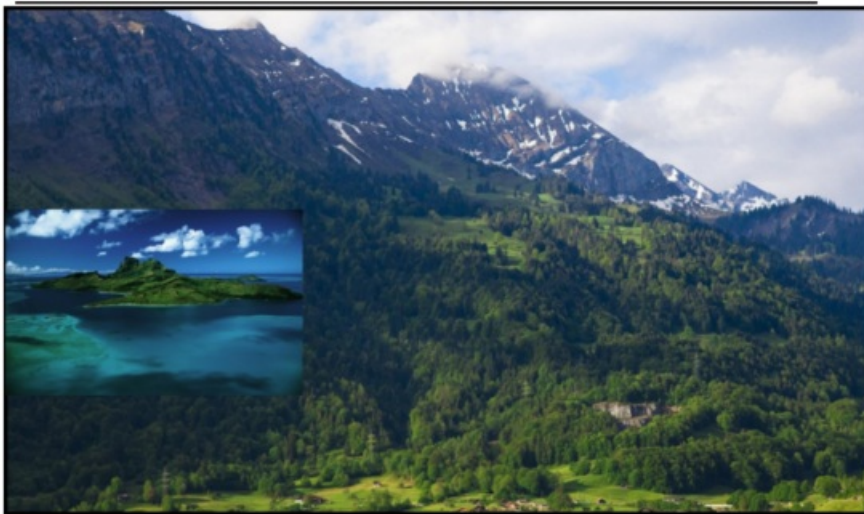

PIP mode




Four window mode

Select “Input window mode” & “Input sources”

A. Left&right mode


1. Select “Input window mode”

2. Drag “input source” and drop into the “Left Screen”
3. Drag “input source” and drop into the “Right Screen”

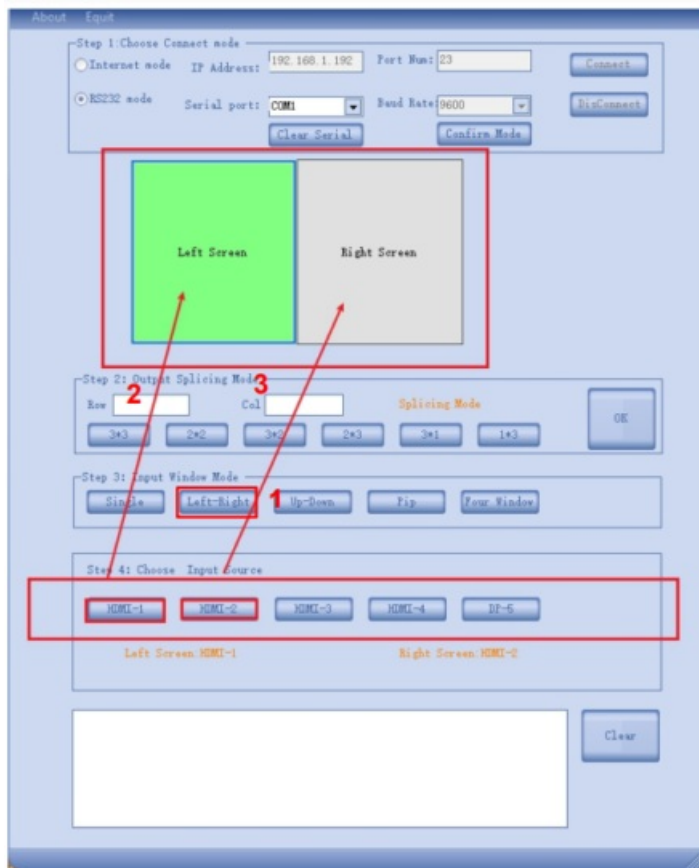

B. PIP mode (Only could be used in Signal mode)

1. Click PIP mode
2. Drag “input source” and drop into the “Little Screen”
3. Drag “input source” and drop into the “Large Screen”

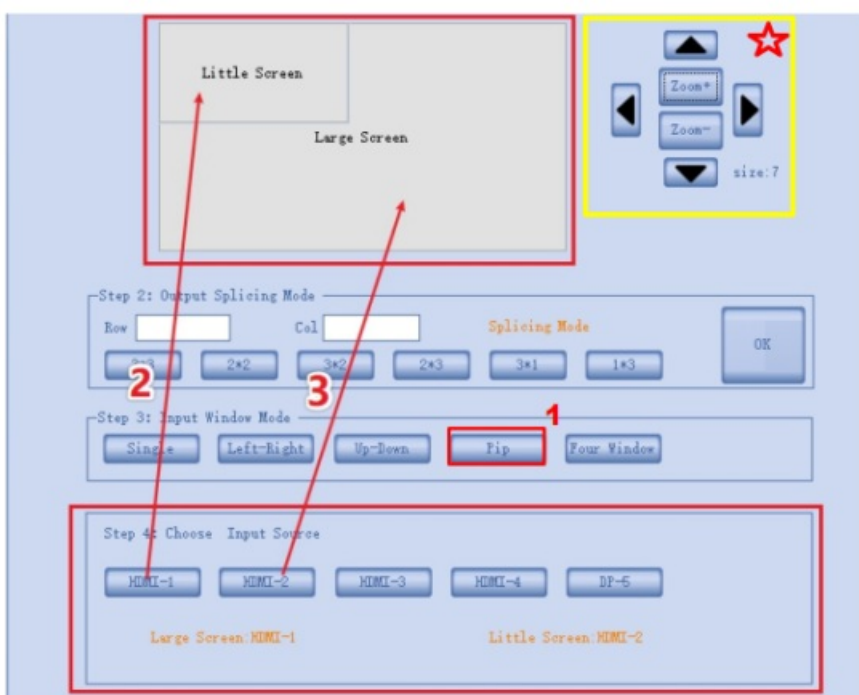



Tips:

The location & size of “sub picture” could be controlled by the marked controller.

<http://www.bitvisus.com/>

info@infobitav.com

Documents / Resources

 iWall 409R Active Optical Cable and Conference Camera	infobit iWall 409R Windows Software [pdf] User Manual iWall 409R, Windows Software, iWall 409R Windows Software
---	--

References

- [<i>infobit AV- 4K Matrix Switchers, Wireless Presentation, Active Optical Cable and Conference Camera- Meeting Room Solutions](#)

Manuals+.