

InFocus IN24 Portable Projector



InFocus IN24 Portable Projector User Guide

[Home](#) » [InFocus](#) » InFocus IN24 Portable Projector User Guide 

Contents

- 1 InFocus IN24 Portable Projector
- 2 Product Usage Instructions
- 3 OR
- 4 FAQ
- 5 Unpack the box
- 6 Put batteries in the remote
- 7 Status Indicator Panel
- 8 Connect source
- 9 Turn on projector and source
- 10 Adjust the picture
- 11 Turn off the projector
- 12 Register with InFocus
- 13 Read the Reference Guide and visit the InFocus web site
- 14 Troubleshooting
- 15 Questions? InFocus is here to help!
- 16 FCC
- 17 Documents / Resources
 - 17.1 References

InFocus

InFocus IN24 Portable Projector



Specifications

- Model: IN24 IN26
- Product Type: Projector
- Power Source: Electrical Outlet
- Remote Control: Yes
- Remote Control Batteries: 2 AA batteries (not included)
- Included Accessories: Projector, Remote, CD-ROM, Product Registration and Reference Guide, Computer Cable, Power Cord

Product Usage Instructions

Unpack the box

Here's what's included:

- Projector
- Remote
- CD-ROM
- Product Registration and Reference Guide
- Computer Cable
- Power Cord

Save the box and packing materials.

Put batteries in the remote

The remote uses 2 AA batteries.

Please dispose of batteries in an environmentally proper manner.

Connect source

Color-coded connections make it easy. You can connect more than one source if needed.

Connect to: Computer

Computer Cable (included)

If you have an Apple computer, you may need a VGA adapter to connect to the computer cable. For model-specific information and more cabling options, see computer connection How-To Guides at www.infocus.com/support/howto

OR

Connect to: DVD or VCR* (using optional cables)

1. Connect video using either an S-Video or a Composite Video cable. Available at www.infocus.com/store part no. SP-SVIDEO-10M or SP-CPSTVID-5M
2. Connect audio using an RCA Audio cable. Available at www.infocus.com/store part no. SP-RCAAUD-5M

* Also for game console or cable box.

If you want better sound, connect the source's audio output to a receiver/amplifier or home theater system with separate speakers.

OR

Connect to: Other kinds of sources

How-To Guides are available at www.infocus.com/support/howto

Turn on projector and source

1. Connect the power cord to the projector and to an electrical outlet. The green power light on the projector will turn on.
2. Turn on the projector. Press power (on the projector or remote). The power light will start blinking for 5-10 seconds.
3. Wait for the lamp to warm up. After a few seconds, the power light will stop blinking and stay on. It can take a minute for the lamp to reach full brightness.

Warning: Do not look directly into the lens when the projector is turned on.

1. Turn on computer or other source. You may need to press a specific key combination to activate your laptop's external video port. On most laptops, hold down the Fn key while pressing a key labeled CRT/LCD, LCD/VGA, a monitor icon, or similar. Key combos for popular models:
 - Apple: F7
 - Gateway: Fn+F3 or Fn+F4

- IBM ThinkPad: Fn+F7
- Dell: Fn+F8
- HP/Compaq: Fn+F4 or Fn+F5
- Toshiba: Fn+F5
- Fujitsu: Fn+F10
- Sony: Fn+F7

Complete laptop activation chart at www.infocus.com/support

Important: If there is still no video, restart your computer (first make sure it's connected to the projector and the projector is turned on).

1. Change source if needed. If needed, press source (on the projector or remote) to view the source. You may have to press it more than once.

FAQ

Q: Where can I buy a full-featured remote and other custom accessories?

A: You can purchase them at www.infocus.com/store.

Q: What should I do with the batteries in the remote when they are no longer usable?

A: Please dispose of batteries in an environmentally proper manner.

Q: How can I troubleshoot the status indicator panel?

A: For details, please refer to the Troubleshooting section in the manual at <https://manual-hub.com>

Please read the safety instructions booklet before setting up the projector.

Unpack the box

Here's what's included:



Projector



 
Remote



CD-ROM
Product Registration
and Reference Guide



Computer Cable




Power Cord

Save the box and packing materials.

Put batteries in the remote

 The remote uses 2 AA batteries.

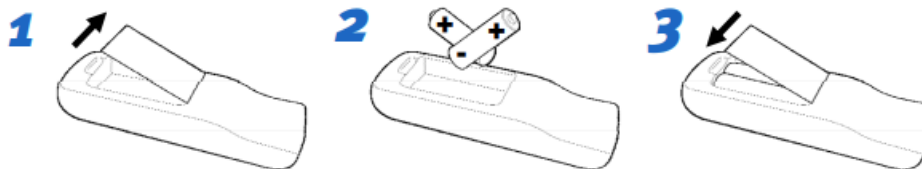


Please dispose of batteries in an environmentally proper manner.

Buy a Full-Featured Remote and Other Custom Accessories

www.infocus.com/store

Status Indicator Panel

 
The top of your projector includes a convenient indicator panel with symbols that light up to show important status. For details, see Troubleshooting.

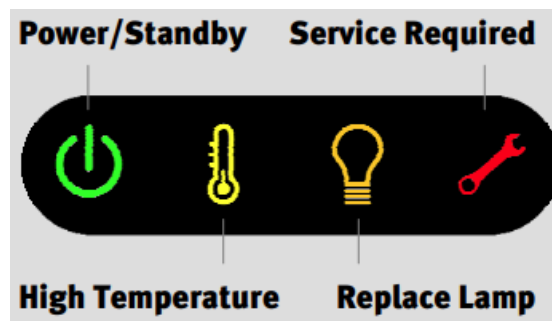

Connect source

Color-coded connections make it easy.
You can connect more than one source if needed.

 Connect to: Computer

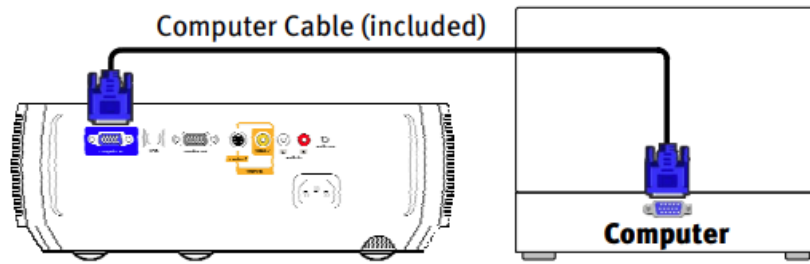


Got an Apple computer?

You may need a VGA adapter to connect to the computer cable. For model-specific information and more cabling options, see computer connection How-To Guides at www.infocus.com/support/howto


Connect to: DVD or VCR* (using optional cables)

 1. Connect video using either an S-Video or a Composite Video cable www.infocus.com/store part no. SP-SVIDEO-10M or SP-CPSTVID-5M
2. Connect audio using an RCA Audio cable www.infocus.com/store part no. SP-RCAAUD-5M

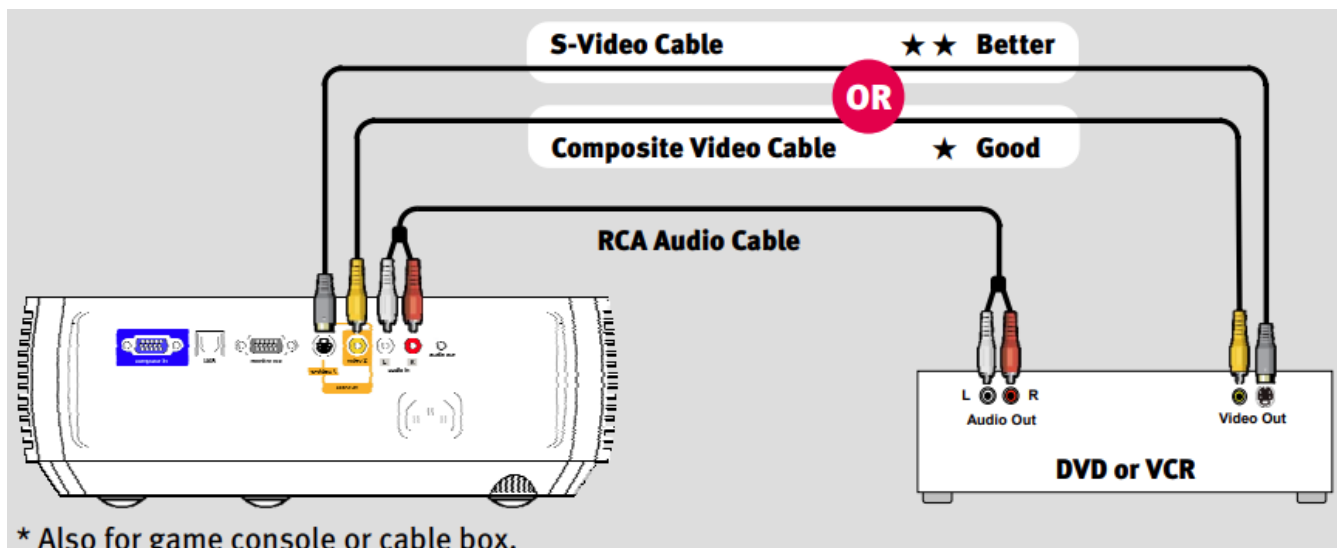

Want better sound?

 Connect the source's audio output to a receiver/amplifier or home theater system with separate speakers.

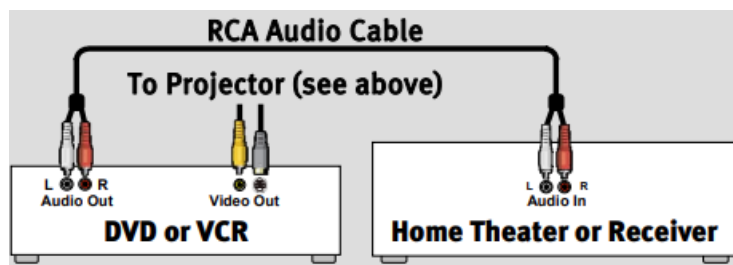

Connect to: Other kinds of sources

How-To Guides are available at www.infocus.com/support/howto

Turn on projector and source

1. Connect the power cord to the projector and to an electrical outlet

The green power light  on the projector will turn on.

2. Turn on the projector

Press power (on the projector or remote).


The power light will start blinking.

3. Wait for the lamp to warm up

After a few seconds, the power light will stop blinking and stay on. It can take a minute for the lamp to reach full brightness.

Warning: Do not look directly into the lens when the projector is turned on.

4. Turn on computer or other source

You may need to press a specific key combination to activate your laptop's external video port. On most laptops, hold down the Fn key while pressing a key labeled CRT/LCD, LCD/VGA, a monitor icon , or similar.

Key combos for popular models:

 
 
- Apple F7
- Dell Fn+F8
- Fujitsu Fn+F10
- Gateway Fn+F3 or Fn+F4
- HP/Compaq Fn+F4 or Fn+F5
- Sony Fn+F7
- IBM ThinkPad Fn+F7
- Toshiba Fn+F5

Complete laptop activation chart at www.infocus.com/support

Important: If there is still no video, restart your computer (first make sure it's connected to the projector and the projector is turned on).


5. Change source if needed

If needed, press source (on the projector or remote) to view the source. You may have to press it more than once.

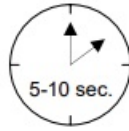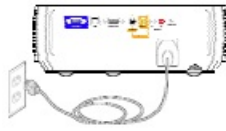


Adjust the picture

 1 Height



- 1 Hold down the release button on top of the projector.
- 2 Lift the front of the projector to the desired height.
- 3 Release the button.

 2 Keystone

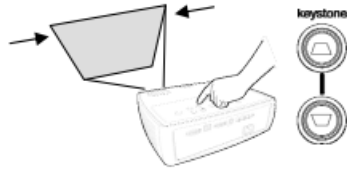

Press the **keystone** buttons to make the picture square.

 
3 Zoom and focus



Adjust zoom first, then focus the center of the image.

Projector location

As distance increases, the image gets larger and moves upwards.

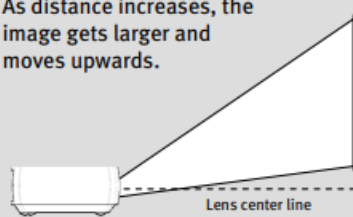

Diagonal Screen Size	Distance to Screen	
	Minimum	Maximum
60" / 1.5 m	7'11" / 2.4 m	8'2" / 2.5 m
80" / 2 m	10'6" / 3.2 m	11'2" / 3.4 m
92" / 2.3 m	12'2" / 3.7 m	12'10" / 3.9 m
150" / 3.8 m	19'8" / 6 m	21' / 6.4 m

**Interactive Screen Size and
Distance Calculator**
www.infocus.com/calculator

**Buy a Screen and Other Custom
Accessories**
www.infocus.com/store

Ceiling mount?

To flip the image, enable **Ceiling** in the **System** menu (press **menu**, then select **Settings > System > Ceiling**).

Using the menus

 
- 1 Press **menu** to show menus
- 2 Press **✓** or **▲** to choose items (or adjust setting)
- 3 Press **select** to confirm menu choice
- 4 Press **menu** to hide menus



Turn off the projector

Press the power button twice

- The first press shows a confirmation message; the second press confirms that you want to power off.
- The power light on the projector will blink while the fan cools the lamp. If you need to unplug the projector, wait until the fan stops and the power light stops blinking and stays on.
- Note: While the power light is blinking, button presses on the projector and remote are ignored.

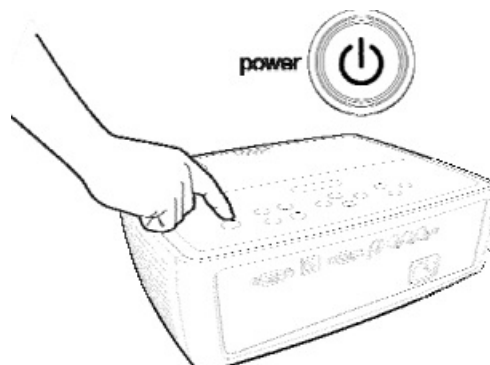

Register with InFocus

It's quick, easy and secure

Activate your warranty to ensure eligibility for service and support. Get special offers and notifications about free product updates.

1. Write down your projector's serial number

It's printed on the label on the back of the projector. You'll need it to register (and if you ever need to contact InFocus support).

Serial number:

2. Go to www.infocus.com/register

Read the Reference Guide and visit the InFocus web site

Insert the CD-ROM, or go to www.infocus.com/support

The Reference Guide is on the CD-ROM in multiple languages. It covers advanced setup and operation, including lamp replacement instructions. The Reference Guide is also available at www.infocus.com/support

Troubleshooting

If there is no picture or the picture is blank

- If the power light is off, make sure the power cord is connected and plugged into a live electrical outlet. If the power light is on but not blinking, press the power button.
- Check video source and cables. Make sure the video source (computer, DVD player, VCR, etc.) is turned on and cables are securely connected between the source and the projector.
- Make sure your computer's video port is enabled. Press the key combination that activates your laptop's external video port (see step 4). If there is still no image, restart your laptop.

source



- Press the Source button. You may need to press it several times to view the correct source.

auto image



- Press the Auto Image button.

If "Signal out of range" is shown, or the picture looks bad

auto image




Press the Auto Image button. If that doesn't help (and the source is a computer), reduce your computer's display resolution or vertical refresh rate.

If the replace lamp light is on




Turn the projector off and wait at least one minute, then turn it on again. If the replace lamp light turns on again, the lamp needs to be replaced. For lamp replacement instructions, see the Reference Guide, which is on the included CDROM or can be downloaded at www.infocus.com/support

If the high temperature light is on

 Turn the projector off and remove anything that may be blocking the air vents on its side. Leave the projector off for at least one minute to let it cool before turning it on again. Important: Continuous operation at high temperature may reduce the lifetime of the lamp and/or projector

If the service required light is on

 Turn the projector off and wait at least one minute, then turn it on again. If the service required light turns on again, the projector needs to be serviced. Visit www.infocus.com/service or call InFocus support to arrange for service.

More troubleshooting options are in the Reference Guide

The Reference Guide is on the included CD-ROM, or download it at www.infocus.com/support

Warning: In the unlikely event of a lamp rupture, particles may be ejected from the projector. Keep out of the area under and around the projector when it is turned on. See the safety instructions booklet for more details.

Questions? InFocus is here to help!

Visit us at:

www.infocus.com/support

InFocus is here to support you with your new purchase. We can help you with...

- Determining screen sizes
- Documentation in other languages
- Connecting your sources (TV, DVD, Cable/Satellite, Game, etc.)
- **Selecting optional accessories**
- **Product warranty protection plans**

USA, Canada, Latin America

Customer Support Telephone

+1 (503) 685-8888

TOLL FREE: 800-799-9911

Mon-Fri, 7 am – 5 pm Pacific

techsupport@infocus.com

Asia Pacific

Customer Support Telephone

Singapore: 800-101-1864

China: 800-828-2268

Australia: 1800-630-957

New Zealand: 0800-449-854

Mon-Fri, 9 am – 5 pm SGT

asia-support@infocus.com

Europe, Middle East, Africa

Customer Support Telephone

+31 (0)36 539 2820

Mon-Fri, 08:30 – 18:00 CET

emea.support@infocus.com

Warning: Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org

Declaration of Conformity

Manufacturer: InFocus Corporation, 27500 SW Parkway Ave. Wilsonville, Oregon 97070-8238 USA
European Office: Louis Armstrongweg 110, 1311 RL Almere, The Netherlands We declare under our sole responsibility that this projector conforms to the following directives and norms: EMC Directive 89/336/EEC, Amended by 93/68/EEC, EMC: EN 55022, EN 55024, EN 61000-3-2, EN 61000-3-3, Low Voltage Directive 73/23/EEC, Amended by 93/68/EEC, Safety: IEC 60950-1:1st Edition

Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Adobe and Acrobat are trademarks or registered trademarks of Adobe Systems Incorporated. InFocus, In Focus, and INFOCUS (stylized), LP, LiteShow, ScreenPlay, LitePort, ASK and Proxima are either registered trademarks or trademarks of InFocus Corporation in the United States and other countries.

FCC

FCC Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment that are not expressly approved by InFocus Corp. may void the user's authority to operate the equipment.

Canada

This Class B digital apparatus complies with Canadian ICES-003.

Agency Approvals Product Models: W240, W260

UL, CUL, NOM, IRAM, GOST, C-tick

Other specific Country Approvals may apply. Please see product certification label.

InFocus reserves the right to alter product offerings and specifications at any time without notice.



[InFocus IN24 Portable Projector](#) [pdf] User Guide IN24 Portable Projector, IN24, Portable Projector, Projector

References

-  [InFocus | Projectors | Displays | A Brighter AV World](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.