



## Inhand InGateway902 Edge Computing Installation Guide

[Home](#) » [Inhand](#) » Inhand InGateway902 Edge Computing Installation Guide

*Inhand InGateway902 Edge Computing  
Installation Guide*



## InHand Networks Edge Computing Gateway IG902 Quick Installation Manual

InHand Networks  
[www.inhandnetworks.com](http://www.inhandnetworks.com)

Version: V1.0  
February, 2019

Copyright © 2019. All rights are reserved by InHand Networks and its licensors. Without the written permission of the Company, no unit or individual is allowed to excerpt, reproduce or transmit in any form part or all of the

contents in the manual.

## Contents [ [hide](#)

- 1 1. Preface
- 2 2. Packing List
  - 2.1 2.1. Panel
  - 2.2 2.2. Structure and Dimensions
- 3 3. Installation
  - 3.1 3.1.Installing and Uninstalling the Device on a DIN-Rail
  - 3.2 3.2.Installing and Uninstalling the Device in Wall-mounted Mode
  - 3.3 3.3. Installing a SIM Card
  - 3.4 3.4.Installing an Antenna
  - 3.5 3.5.Installing the Power Supply
  - 3.6 3.6.Installing the Ground Protection
  - 3.7 3.7. Connecting the Network Cable
  - 3.8 3.8.Connecting Terminals
- 4 4. Configuring Network Connection for a Wireless Gateway
  - 4.1 4.1.Connecting to the Gateway
  - 4.2 4.2.Logging in to the Gateway
  - 4.3 4.3.Performing Dial-up on the Gateway
- 5 5. Quick Start Guide
  - 5.1 5.1.Restoring the Default Settings
  - 5.2 5.2. Importing and Exporting Configuration
  - 5.3 5.3.Logs and Diagnosis Records
- 6 6. Panel Indicators
  - 6.1 6.1.LED Indicator
  - 6.2 6.2.Signal Status Indicator
- 7 Documents / Resources
  - 7.1 References
- 8 Related Posts

## 1. Preface

This document describes how to install and operate the edge computing gateway IG900 series products (IG902-B and IG902-H) of Beijing InHand Networks Technology. Before using these products, confirm the product model and the number of accessories inside the package, and purchase a SIM card from the local network operator.

IG902-B is used as an example. Refer to the actual product during operation.

## 2. Packing List

Each edge computing gateway product is delivered with accessories (such as standard accessories) frequently used at the customer site. Check the received product against the packing list carefully. If any accessory is missing or damaged, contact the InHand sales personnel promptly.

InHand provides customers with optional accessories based on the characteristics of different sites. For details, see the optional accessories list.

### Standard accessories:

Accessory	Quantity	Description
Gateway	1	Edge computing gateway
Product document	1	Quick installation manual and user manual (Obtained by scanning a QR code)
Guide rail installation accessory	1	Used to fix the gateway
Power terminal	1	7-pin industrial terminal
Network cable	1	1.5 m long
Antenna	1	3G or 4G specification
Product warranty card	1	Warranty period: 1 year
Certificate of conformance	1	Certificate of conformance for the edge computing gateway

### Optional accessories:

Accessory	Quantity	Description
AC power cord	1	Power cord for American English Australian or European Standard
Power Adapter	1	VDC Power Adapter
Antenna	1	Wi-Fi Antenna
	1	GPS Antenna
Serial Port	1	Gateway serial port line for debugging

The following sections describe the panel, structure, and dimensions of the edge computing gateway.

## 2.1. Panel



Figure 2-1 IG902



### Caution

The IG900 series product is applicable to multiple panel appearances, as they have the same installation method. Refer to the actual product during operation.

## 2.2. Structure and Dimensions

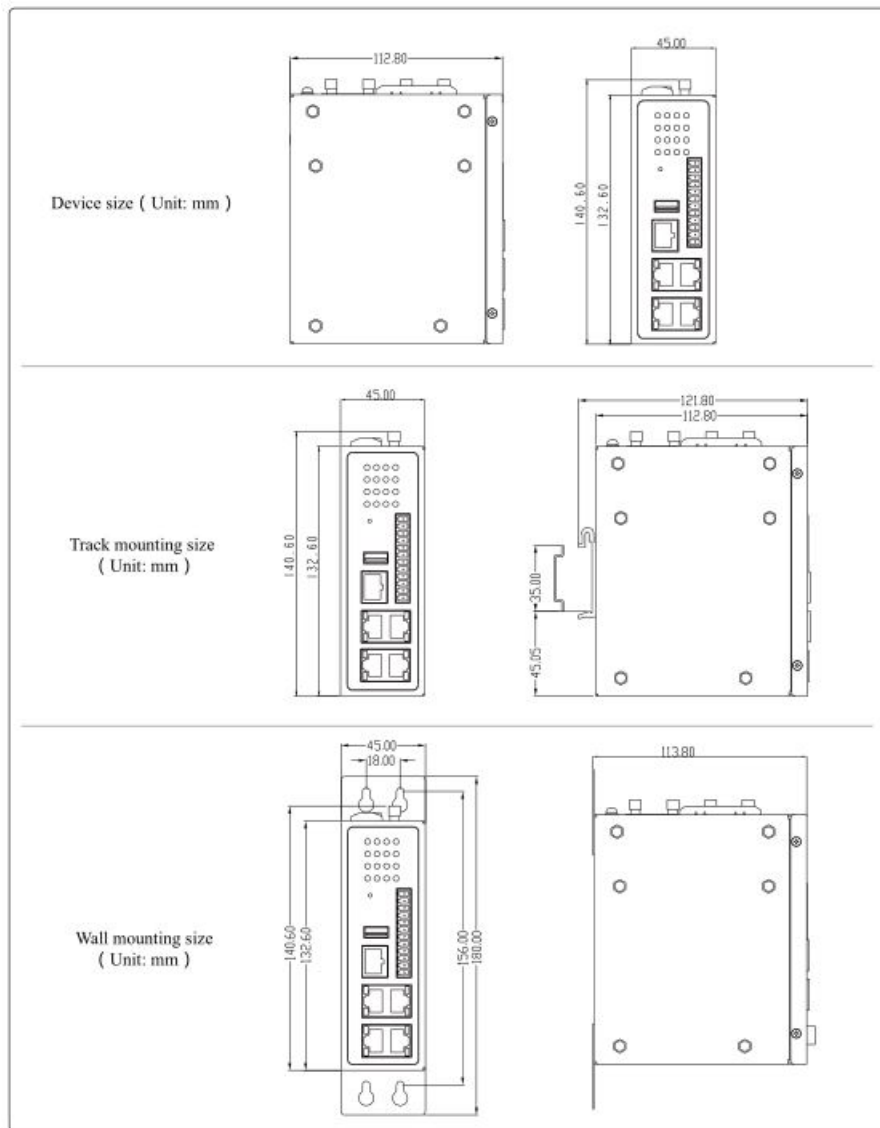


Figure 2-2 Structure size

### 3. Installation

Precautions:

- Power supply requirements: 24 V DC (1248 V DC). Pay attention to the voltage class. The rated current is 0.6 A (1.20.3 A).
- Environment requirements: operating temperature 25°C to 75°C; storage temperature 40°C to 85°C; relative humidity 5% to 95% (non-condensing). The temperature on the device surface may be high. Install the device in a restricted area and assess the surrounding environment.
- Avoid direct sunlight and keep away from thermal sources or areas with strong electromagnetic interferences.
- Install the gateway product on an industrial DIN-rail.
- Check whether the required cables and connectors are installed.

#### 3.1.Installing and Uninstalling the Device on a DIN-Rail

##### 3.1.1. Installing with a DIN-Rail

Procedure: Step 1: Select an installation place and reserve enough space for installation. Step 2: Insert the upper

part of the DIN rail seat onto the DIN rail. Grab the lower end of the device and revolve it upward in the direction indicated by arrow 2 with gentle force, to insert the DIN rail seat onto the DIN rail. Check that the device is installed reliably on the DIN rail, as shown in Figure 3-1 on the right.

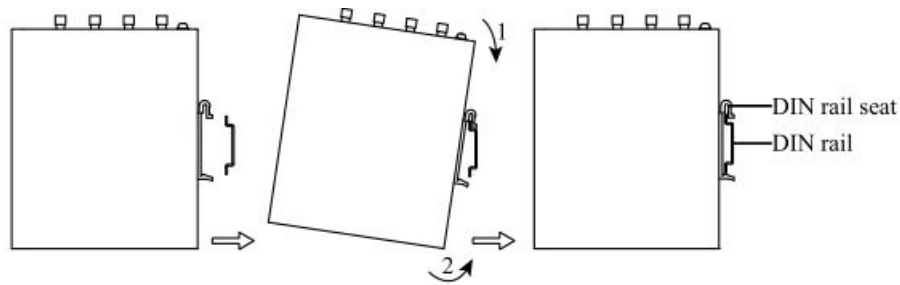


Figure 3-1 DIN rail installation schematic diagram

### 3.1.2. Uninstalling with a DIN-Rail

#### Procedure:

Step 1: Press the device downward in the direction indicated by arrow 1 in Figure 3-2 to create a gap near the lower end of the device so that the device isolates from the DIN rail.

Step 2: Revolve the device in the direction indicated by arrow 2, and grab the lower end of the device and move the device outward. Lift the device when its lower end isolates from the DIN rail. Then, take off the device from the DIN rail.

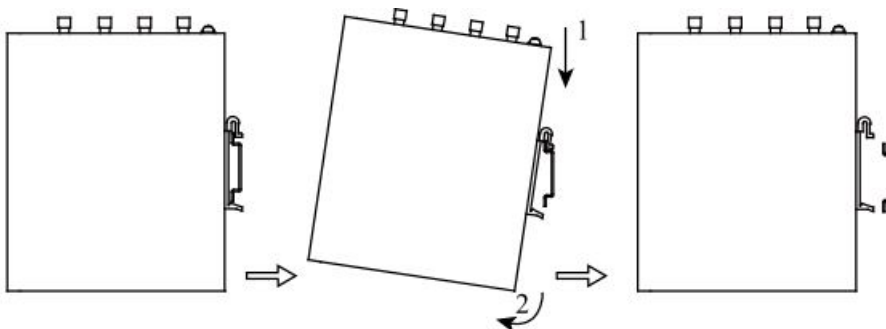


Figure 3-2 DIN rail disassembly schematic diagram

### 3.2. Installing and Uninstalling the Device in Wall-mounted Mode

#### 3.2.1. Installing in Wall-mounted Mode

#### Procedure:

Step 1: Select an installation place and reserve enough space for installation.

Step 2: Install the wall mounting bracket on the back of the device by using a screwdriver, as shown in Figure 3-3.

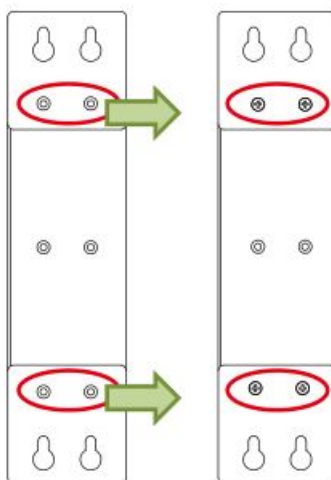


Figure 3-3 Wall mounted installation diagram

Step 3: Take out the screws (packaged with the wall mounting bracket), fasten the screws in the installation positions by using the screwdriver, and pull down the device to make it secure, as shown in Figure 3-4.



Figure 3-4 Wall mounted installation diagram

### 3.2.2. Uninstalling in Wall-mounted Mode

Procedure: Hold the device with one hand and unfasten the screws that fix the upper end of the device with the other hand, to remove the device from the installation place.

### 3.3. Installing a SIM Card

IG902 supports Dual SIM card. Unfasten the screws on the cover of the SIM card holder by using a screwdriver and insert a SIM card.



Figure 3-5 Install SIM card

### 3.4.Installing an Antenna

Revolve the movable part of the metal SMAJ interface with gentle force until it cannot be revolved, in which state the outer thread of the antenna connection cable is invisible. Do not wring the antenna with force by grabbing the black plastic cover.



Figure 3-6 Installing an Antenna

### Note

- IG900 supports dual antenna: ANT antenna and AUX antenna. The ANT antenna sends and receives data. The AUX antenna only increases the antenna signal strength and cannot be used independently for data transmission.
- Only the ANT antenna is used in normal cases. It is used with the AUX antenna only when signal is poor and signal strength must be improved.

### 3.5.Installing the Power Supply

#### Procedure:

- Step 1: Remove the terminal from the gateway.
- Step 2: Unfasten the locking screw on the terminal.
- Step 3: Connect the power cable to the terminal and fasten the locking screw.



Figure 3-7 Installing the Power Supply

### 3.6.Installing the Ground Protection

#### Procedure:

**Step 1:** Unfasten the ground screw cap.

**Step 2:** Put the ground loop of the cabinet ground cable onto the ground post.

**Step 3:** Fasten the ground screw cap.



#### Caution

Ground the gateway to improve its interference resistance. Connect the ground cable to the ground post of the gateway based on the operation environment.

### 3.7. Connecting the Network Cable

Connect the gateway to a PC directly by using the Ethernet cable.



Figure 3-8 Network connection

### 3.8.Connecting Terminals

Terminals provide the RS232 and RS485 interface modes. Connect cables to the corresponding terminals before using the interfaces. During installation, remove the terminals from the device, unfasten the locking screws on the terminals, connect cables to the corresponding terminals, and fasten the screws. Sort the cables in order.



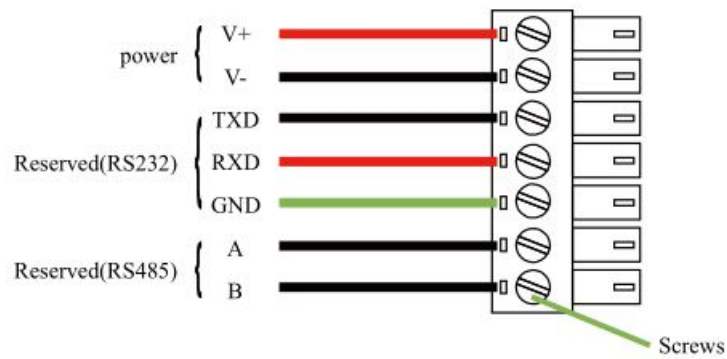


Figure 3-9 Terminal line

## Note

This section is only applicable to IG900 with industrial interfaces.

## 4. Configuring Network Connection for a Wireless Gateway

### 4.1.Connecting to the Gateway

Set the IP address of the management PC and the IP addresses of the GE interfaces of the gateway to be in the same network segment. The gateway has two GE interfaces: GE0/1 and GE0/2. The initial IP address of GE0/1 is 192.168.1.1, and that of GE0/2 is 192.168.2.1. Both interfaces have the same subnet mask 255.255.255.0. The following describes how to connect GE0/2 to the management PC in the Windows operating system.

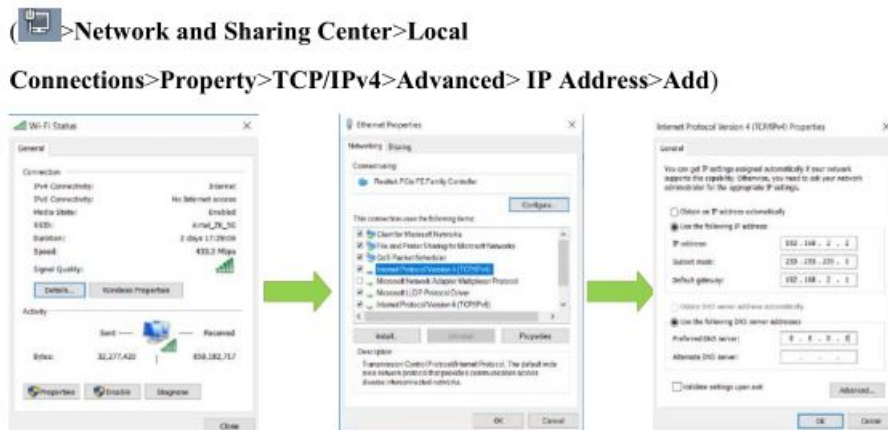


Figure 4-1 Gateway Settings

### 4.2.Logging in to the Gateway

Connect the PC to the gateway directly by using the network cable, start the web browser, enter <https://192.168.2.1> in the address bar, and press Enter to jump to the web login page. Enter the user name (default: adm) and password (default: 123456), and click OK or press Enter to access the web configuration page.

Figure 4-2 Login gateway Web management interface

### 4.3.Performing Dial-up on the Gateway

#### 4.3.1. Configuring Gateway Dial-up

IG902 supports two dial-up modes: single card and dual card. The single card mode is used by default, in which only SIM card 1 is used.

To use the dual card mode, you need to set related parameters. On the page shown in the following figure, choose Show Advanced Options>Dual SIM Enable, select the primary card, and save the settings.

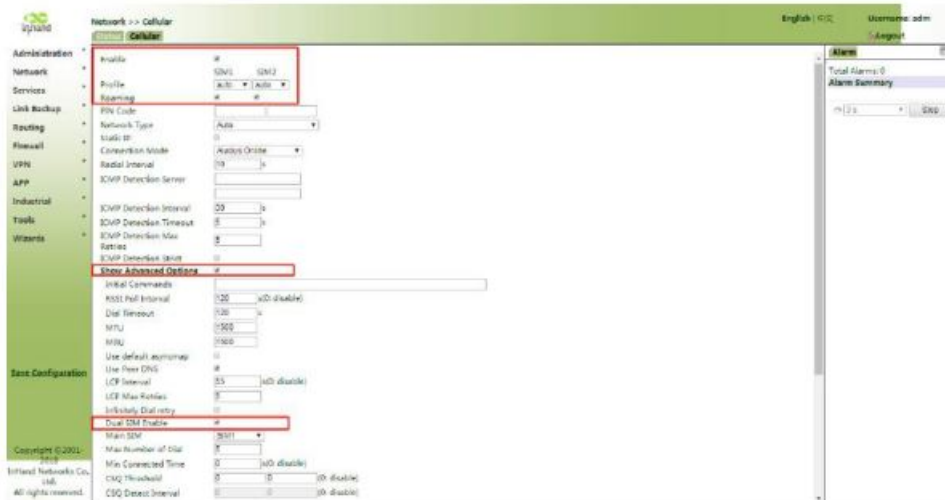


Figure 4-2 Dial interface advanced options

#### 4.3.2. Verifying the Gateway Dial-up Status

Choose Network>Cellular in the navigation tree to access the Status page. The page displays the network connection status, that is, the IP address obtained by the gateway. You can also verify the dial-up status on a web page.



Figure 4-4 the Gateway Dial-up Status



#### Caution

By default, the DNS of the PC connected to GE0/1 cannot use the IP address of GE0/1; otherwise, public domain names cannot be accessed. You can enable the DHCP server or configure another DNS for public domain name access.

## 5. Quick Start Guide

## 5.1.Restoring the Default Settings

### 5.1.1. Web Page Mode

Log in to the web page and choose Administration>Config Management in the navigation tree to access the Config Management page. Click Restore default configuration and click OK. Then, restart the system to restore the default settings.

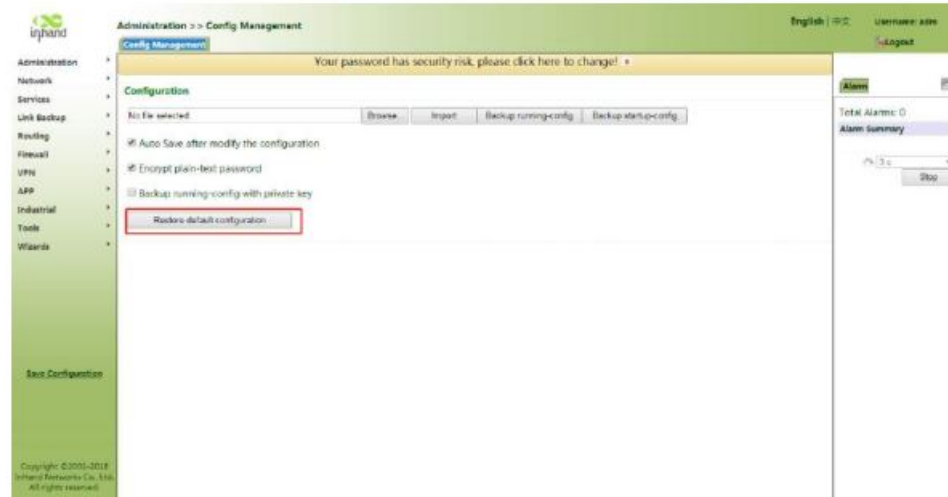


Figure 5-1 Restore default configuration

### 5.1.2. Hardware Mode

Restore the default settings in hardware mode as follows:

Step 1: Find the Reset button on the device panel. For details, see section 2.1 “Panel.”

Step 2: Press and hold the Reset button with a fine pin within 10 seconds after the device is powered on.


Step 3: Release the Reset button after the ERR indicator is turned on.

Step 4: Press and hold the Reset button again when the ERR indicator is turned off several seconds later.

Step 5: Release the Reset button when the ERR indicator blinks. The default settings are restored successfully if the ERR indicator is turned off later.

## 5.2. Importing and Exporting Configuration

Log in to the web page and choose Administration>Config Management in the navigation tree to access the Config Management page.

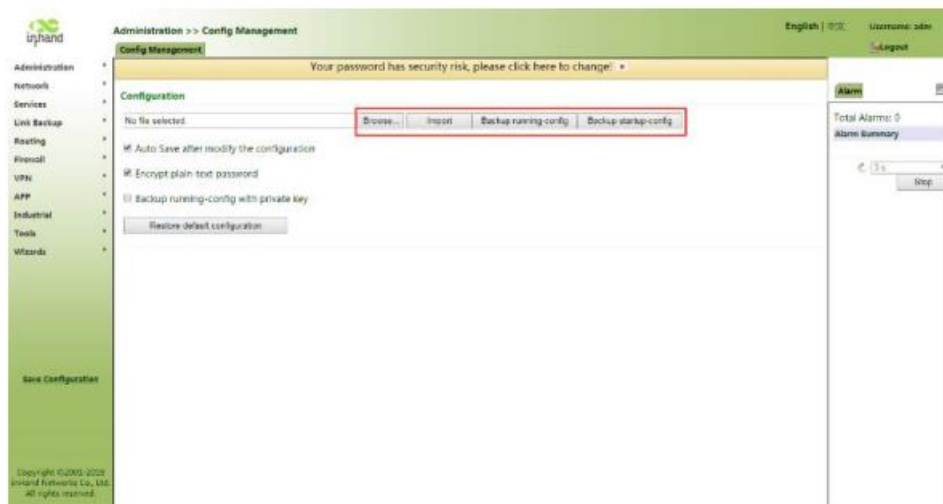

- Click Browse to select the configuration file. Then, click Import. After the configuration file is imported, restart the system (Administration>Reboot) to make the configuration take effect.
- Click Back Up running-config to export the currently applied configuration parameter file. Save the file. The exported file is in the .cnf format, and the default file name is running-config.cnf.
- Click Back Up startup-config to back up the configuration parameter file that is applied upon device startup. The exported file is in the .cnf format, and the default file name is startup-config.cnf.

### 5.3.Logs and Diagnosis Records

Log in to the web page and choose Administration>Log in the navigation tree to access the Log page. Click the corresponding buttons to download logs and diagnosis records.


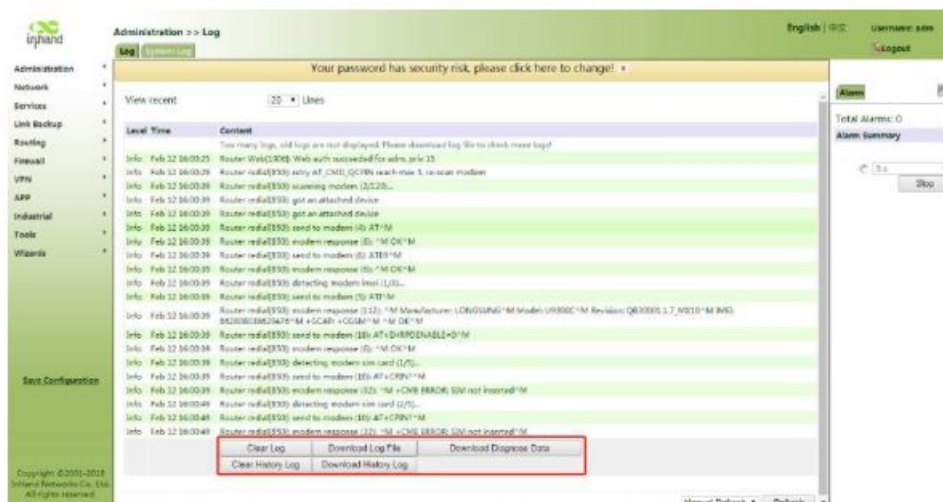


Figure 5-3 System log

## 6. Panel Indicators

### 6.1.LED Indicator

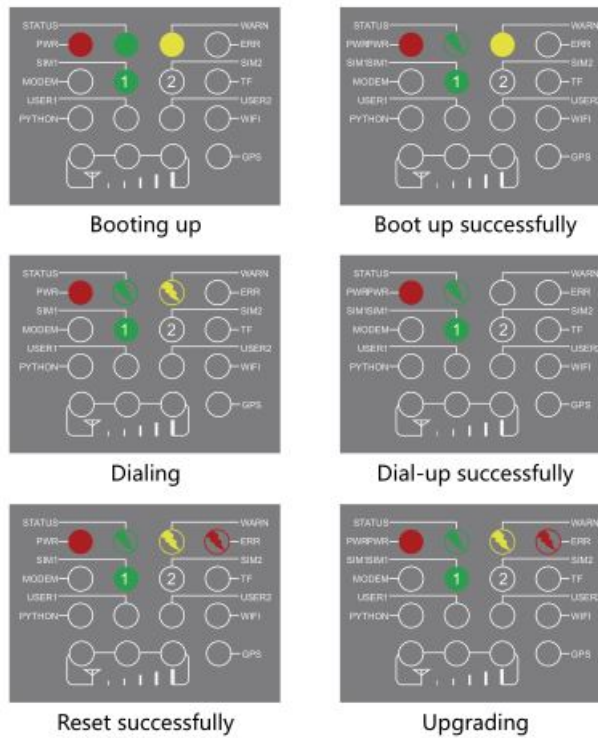

## Note

Two SIM card indicators are provided. The indicator for SIM card 1 is turned on during the startup process and when startup is successful. In the last four situations, the indicator for the used SIM card is turned on. The following figure shows the indicator for SIM card 1.

## 6.2.Signal Status Indicator



**Signal: 1–9,** there might be a signal problem. Check whether the antenna is installed properly and whether the signal quality in the operating area is good.

**Signal: 10–19,** indicating that signal and device operation are normal.

**Signal: 20–31,** indicating good signal.

## Documents / Resources

	<p><a href="#">InHand InGateway902 Edge Computing</a> [pdf] Installation Guide</p> <p>InGateway902 Edge Computing, IG902</p>
--	--

## References

- [Edge Routers](#) | [Cellular Routers & Gateways](#) | [IoT Solutions](#) | [5G](#) | [InHand Networks](#)

