



Ink machines X2 Powerpack for Scorpion Instructions

[Home](#) » [Ink machines](#) » Ink machines X2 Powerpack for Scorpion Instructions 

Ink machines X2 Powerpack for Scorpion Instructions



Contents

- [1 The X2 devices](#)
- [2 Charging](#)
- [3 Pairing X2 Powerpacks](#)
- [4 Backward compatibility](#)
- [5 X2 powerpack overview](#)
- [6 InkMachines App](#)
- [7 Settings and basic navigation](#)
- [8 Overview of the work page](#)
- [9 Safety and hygiene](#)
- [10 Trouble shooting](#)
- [11 Technical specification](#)
- [12 Operating Requirements and Conditions](#)
- [13 Declaration of Conformity \(DoC\)](#)
- [14 Warranty](#)
- [15 Documents / Resources](#)
- [16 Related Posts](#)

The X2 devices

The X2 powerpack can be used independently with the on-board buttons or paired to other devices for additional functionality.

The new X2 devices are capable of direct unit to unit communication which means that you can pair one or several powerpacks directly to a foot switch and/or the smartphone app that will act as a main unit. The system can then be expanded with the TPS-500 X2 main unit and future devices for additional functionality. The TPS-500 X2 main unit is required for full functionality to run machines with cable and to enable the use of the Neorail as well as the use of a charger bay.

Charging

The X2 powerpack can be charged with a USB-C cable from various sources. The TPS 500 X2 with charger bay is recommended as it will provide 2 tailored powerpack slots and 2 USB-C ports for simultaneous charging of other X2 devices. If the charger bay is not available you can use our travel charger or a regular computer with a USB-C cable to charge.

Pairing X2 Powerpacks

The Powerpacks will be paired automatically to the TPS-500 X2 main unit when they are placed on the charger bay. If the charger bay or main unit is not available the pairing can be performed by holding the pair button on the corresponding devices for example a powerpack and a footswitch for 5 sec until the lights start pulsing. They will then pair within a few seconds.

Repeat the process if you have more powerpacks to form a system with one foot switch and several powerpacks. On the TPS500 X2 unit the OK button is used as pair button. To unpair / reset a device and making it independent again, hold the pair button for about 12 sec until the lights flash rapidly a few times. The mentioned features can also be performed with the smartphone app. It is possible to have several separate systems in the same studio or room without interference.

Backward compatibility

 
The X2 powerpacks are backward compatible with the old TPS-500 system but the smartphone app can't be used in this case.

Pairing to the old TPS-500 can only be done by placing them on the charger bay. The current software of the old TPS-500 does not support the on-board buttons of the X2 powerpacks. To enable the on-board buttons when paired to the old system you need to upgrade the software of the old TPS-500 main unit. The update can be done with a PC and the original USB cable that came with the TPS-500. Update here:

<https://trinity.xnk.nu/inkmachines/>

If you no longer want to have the X2 powerpack paired to the old TPS-500 and want to use it independently or pair it directly to a X2 footswitch or the app you first need to unpair / reset the powerpack by holding the on-board pair button for 12 sec until the leds on the device flash.

X2 powerpack overview

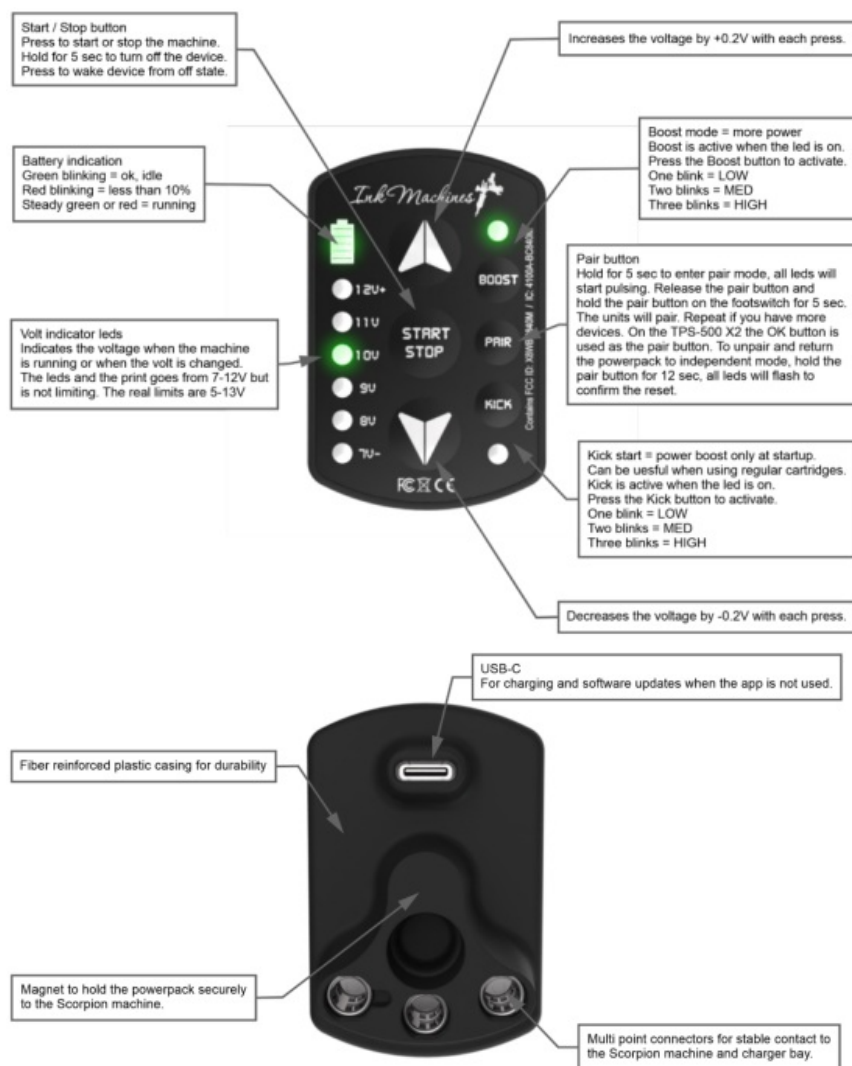

InkMachines App

 
Get the app:



If you have an Apple iPhone 6 or later or an iPad from 2012 or later: Go to Apple App Store, search for InkMachines and install the app. For smartphones with Android 8 or later: Go to Google Play, search for InkMachines and install the app

Pairing X2 devices with the app


1. First time you use the app you will be asked to add devices. Make sure the device you wish to pair is on and press 'Add devices'

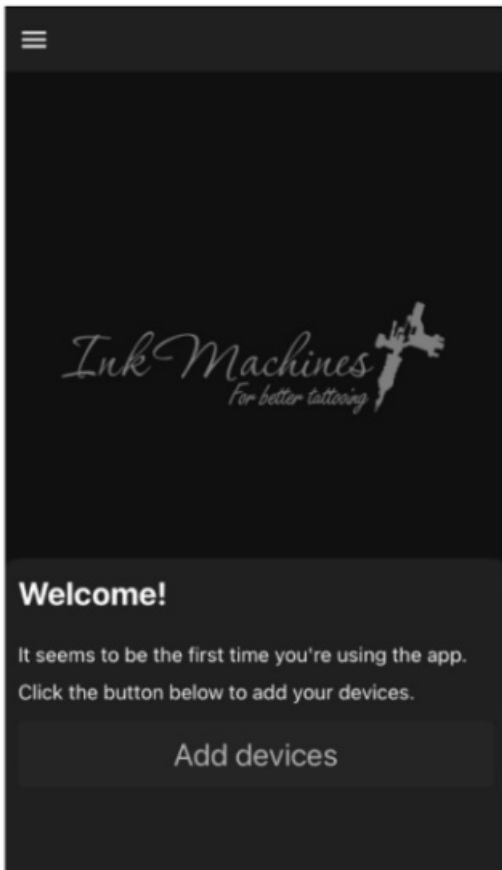


2. The app will go in to pair mode and start to search for other devices that's in pair mode. Press and hold the physical pair button on the device you wish to add.



 
3. The device will appear in the app Press the device to add.

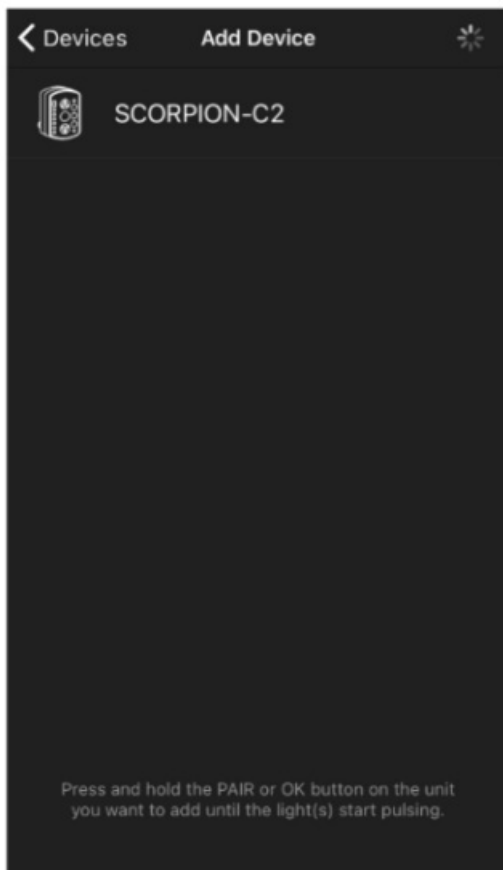

 
4. Confirm by pressing Yes.

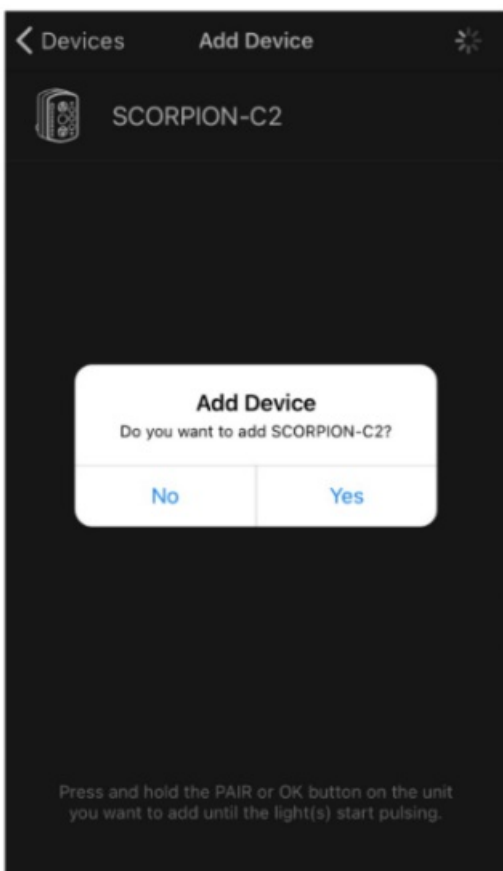

 5. The device will now appear in the app under

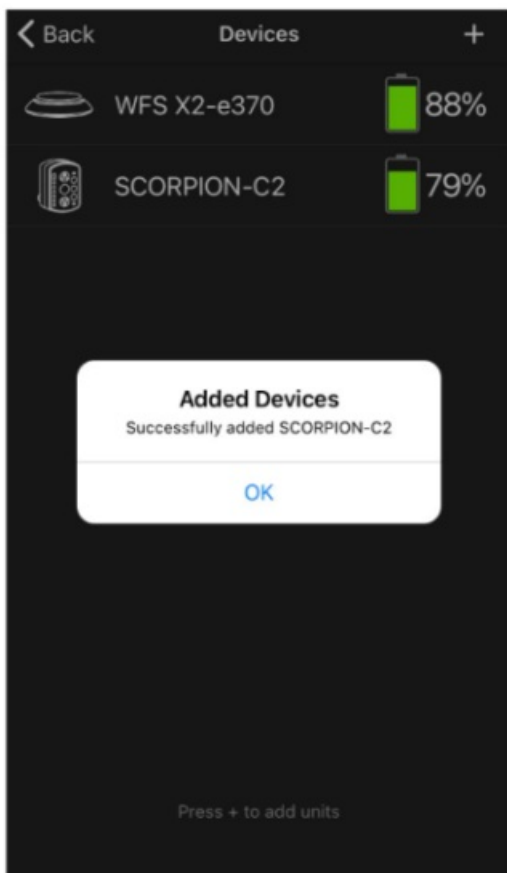

 6. Repeat the process if you wish to add more Devices. devices by pressing the + at the top right.

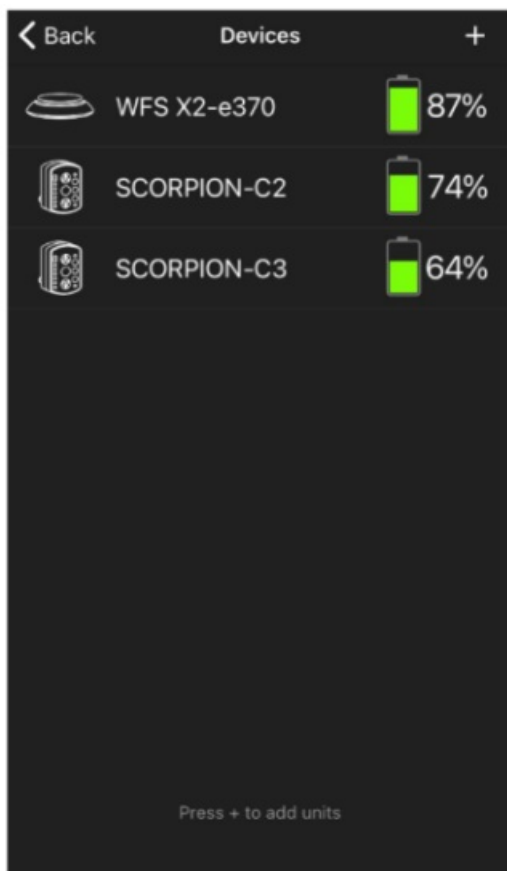


Settings and basic navigation

7. When a powerpack is added you can Press “Back” to access to the run page(s). To select the powerpack you want to control (when two or more powerpacks are paired) you can tilt the powerpack (recommended) and the run page will automatically change. You can also manually swipe pages to select device. To access the


settings page press the 3 lines in the upper left corner.



 
8. To make changes to any device press

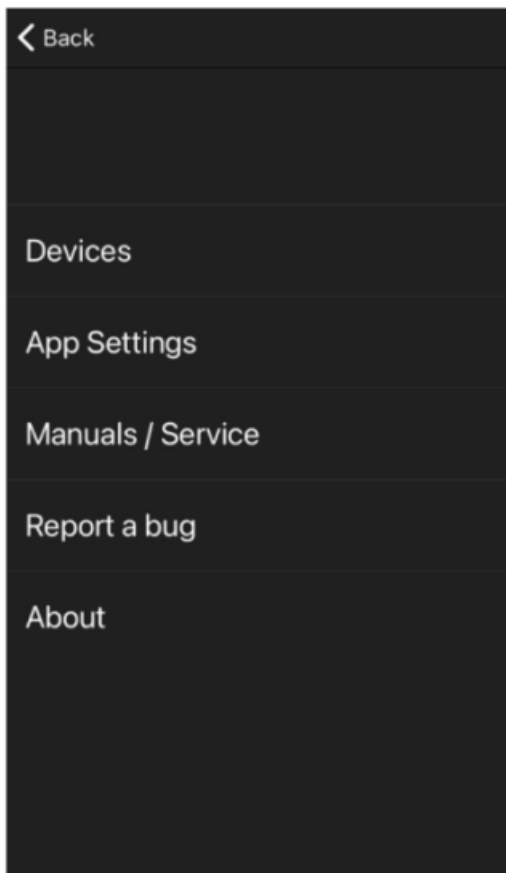

 
9. Press the device you want to make change "Devices". to to access the settings of each device.

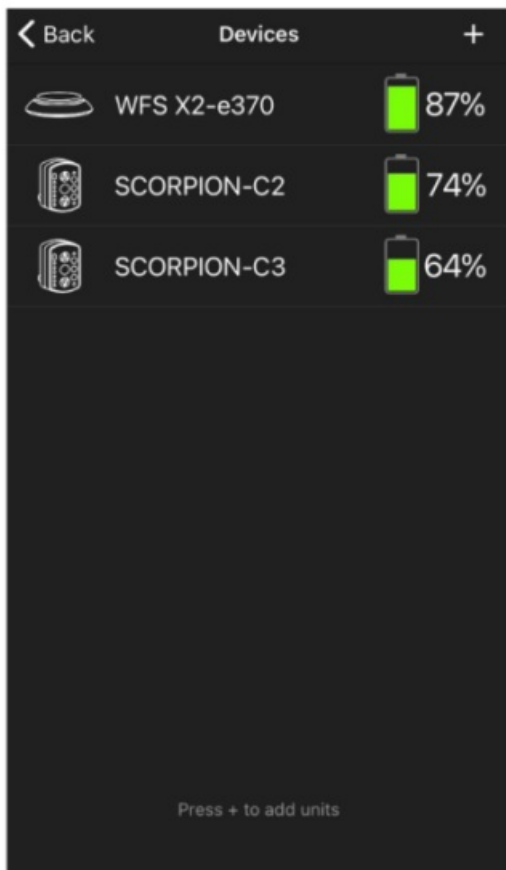

 
10. The following setting are available on the powerpack settings page.

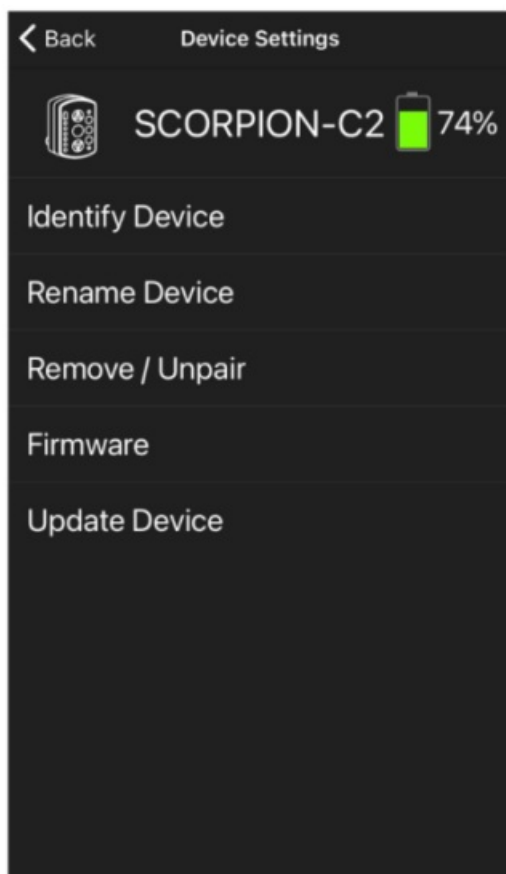

 
11. The following settings are available on the foot switch settings page.

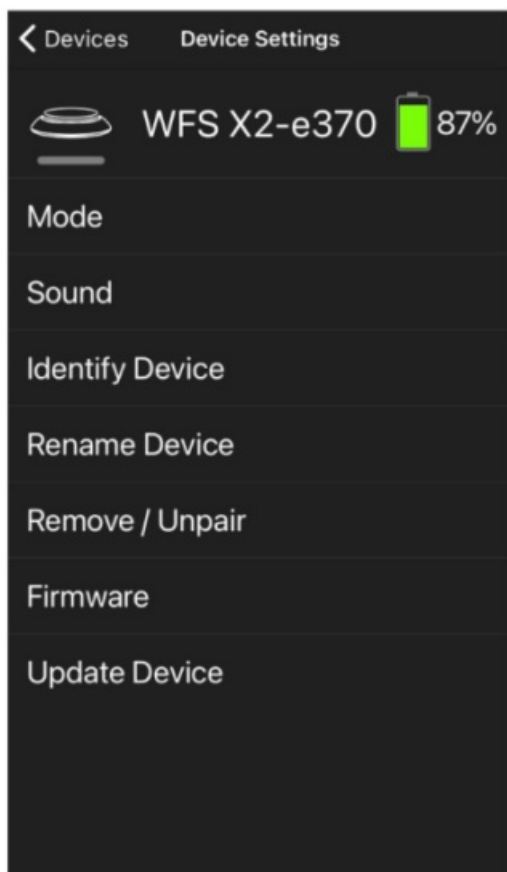

 12. The following settings are available on the TPS-500 X2 settings page.

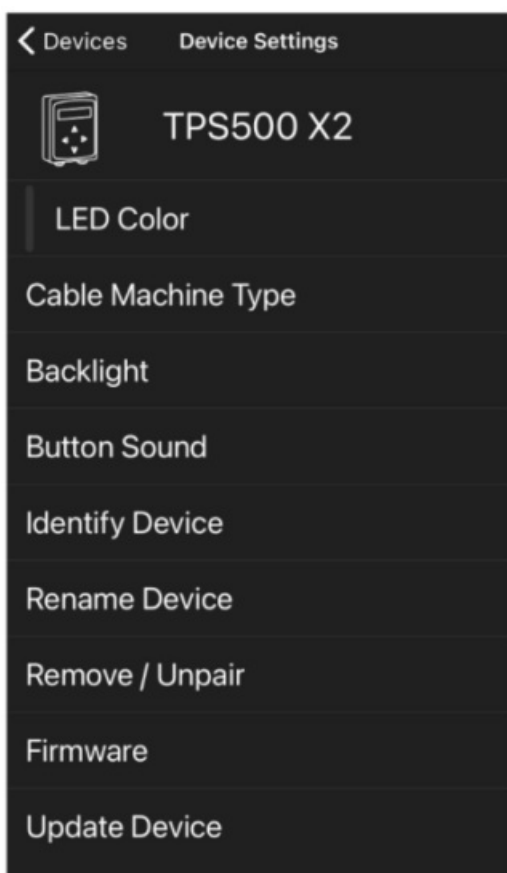

Overview of the work page

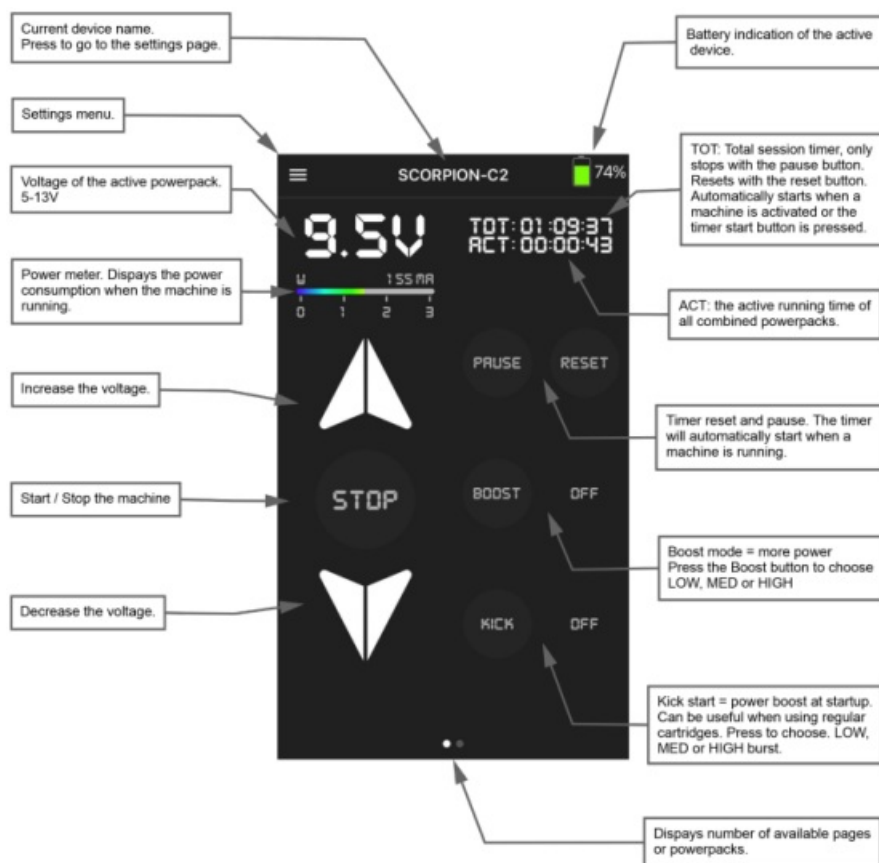

Changing or replacing a smartphone or ipad.

The system only allows one smartphone or ipad to be paired at the time. If you have the X2 foot switch paired to one or more powerpacks plus a smartphone and you want to replace the current smartphone to use for example an ipad the pairing structure can be maintained.

1. Close the app (double click and swipe it up on an iphone) on the smartphone before you start the app on the new smartphone or ipad.
2. Only pair the foot switch to the new smartphone. The powerpacks that is paired to the footswitch will now be imported to the new smartphone or ipad and no additional pairing is required.

Safety and hygiene

Responsibility

It is the operations responsibility to follow regulations and to provide a safe environment for their customers. Always follow local regulations concerning the tattoo operation.

The manufacturer does not have responsibility for any kind of material or personal damage or infection caused by the operation. Negligence or misuse of the machine or the components attached to the machine is the operations responsibility.

The manufacturer does not have responsibility for any contamination or infection.

Fluids

The product should not come in direct contact with fluids. If fluids will get in contact with the electronic it can

damage the product and the warranty will be void.

Only for professional use

InkMachines only provide products for professional tattoo artists and the product may only be used by professionals with knowledge about contamination and how to maintain a clean working environment with sterile equipment.

For each client and session always use:

- sterile grips
- new sterile needles
- new rubber gloves
- new plastic barriers for tattoo equipment; around the machine and the Powerpack.

Cleaning



It's important for the tattoo operation to keep a clean and hygienic environment to avoid contamination and infection.

Do NOT use alkaline or acid cleaning agents with strong bases (high or low pH). Only use pH neutral cleaning agents and 70% alcohol disinfectants on the units. Use a dampened piece of paper or to wipe off surfaces of the units before and after use.



Preparation

To prepare the tattoo machine before starting a new session. Always clean the tattoo machine according to the machine manual before attaching the Powerpack. Always use a sterile grip and bag the whole machine including the powerpack, use medical tape min 5mm below the grip seal to fix and seal the plastic bag to the sterile grip.



Trouble shooting

First check the tattoo machine

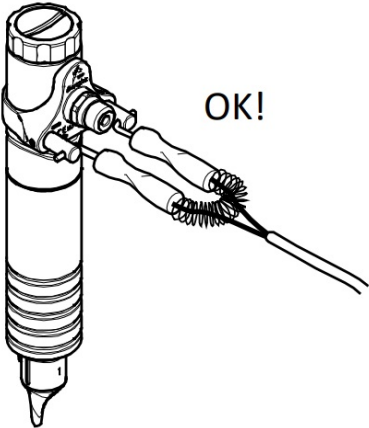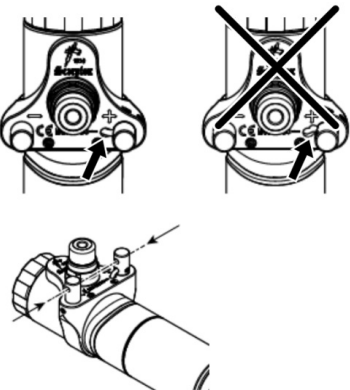Instruction	If the Tattoo machine still not functioning
<p>1. Check that the machine runs with the clip cord binding posts. Test the machine with a clip cord and make sure the machine is working properly.</p> 	<p>Consult the corresponding machine manual. Go to 2.</p>
<p>2. Check the motor cable location. It should be straight according to the picture. And the screw should hold the end of the cable. Align and tighten.</p> 	<p>If the machine does not run by the clip cord binding posts it will not run with a power pack. Consult the Scorpion X2 manual or Contact InkMachines for further instructions, see www.inkmachines.com</p>

X2 Powerpack

Instruction	If the Powerpack still not functioning properly
1. Make sure that the powerpack is charged and the lights are on.	Charge on bay or with USB-C. The on board lights should indicate that the powerpack is charging.
2. Make sure the machine starts with the onboard start / stop button.	Check that the machine runs with a clip cord cable to rule out any problem related to the machine.
3. Reset the powerpack by holding the pair button for about 12 sec until the onboard lights flashes repeatedly and then retry.	If its still not working go to 4.
4. Hard Reboot the device. Insert the USB-C from a power source and make sure the powerpack is charging. Hold the Start / Stop button for about 12sec and then release the button. Remove the USB-C cable. The Powerpack should now reboot.	Contact InkMachines for further instructions, see www.inkmachines.com

Technical specification

X2 Powerpack for Scorpion

Volt output	5 – 13 Volt DC
Radio	2.4 GHz BLE
Machine Compatibility	Scorpion / Scorpion X2
Battery capacity	LiPo 2700mAh / 10Wh
HMI	Accelerometer, led lights, buttons
Charging	TPS charger bay or USB-C
Operating temperature	10 – 35°C Indoor use only.
Weight	77 grams
Dimensions L x W x H	56 x 38 x 35 mm

Operating Requirements and Conditions

This equipment complies with U.S. Federal Communications Commission (FCC) guidelines respecting safety levels of radio frequency (RF) exposure for Portable devices.

Contains FCCID: X8WBC840M

RF Exposure – This device has been tested for compliance with FCC RF exposure limits in a portable configuration. This device must not be used with any other antenna or transmitter that has not been approved to operate in conjunction with this device.

This equipment has very low levels of RF energy that is deemed to comply without testing of specific absorption rate (SAR).

CAUTION: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and

2. this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada license exempt RSS standard

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

Declaration of Conformity (DoC)

We

Name: InkMachines Sweden AB

Address Grusåsvägen 8 352 45 VÄXJÖ, Sweden

declare under our sole responsibility that the product;

Product name /model: Powerpack X2

Type: Wireless power supply device for Tattoo Machines

to which this declaration relates is in conformity with the essential requirements and other relevant requirements with the relevant EU legislation.

Directives

- Radio Equipment Directive (RED): 2014/53/EU
- Restriction of the use of certain Hazardous Substances (RoHS): 2011/65/EU

References to the relevant harmonized standards used:

- RED, article 3.2 (Radio spectrum) EN 300 328 V2.2.2
- RED, article 3.1b (EMC) ETSI EN 301 489-17 V3.2.4
- RED, article 3.1a (Safety) EN 62368-1:2014+AC:2015 EN 62479:2010
- RoHS EN IEC 63000:2018

Place and date of issue (of this DoC): 2021-08-20

Signed by:

A handwritten signature in purple ink, appearing to be 'Chen Zhen', is written over a faint, light blue grid background.

Name

Title of Authority: CEO

Warranty

This product includes a 12 months warranty from the date of purchase. The warranty applies to factory faults and not to wear of any components caused by normal or abnormal use.

If this product becomes defective during the Warranty period, InkMachines shall have the option, in its sole discretion, to either repair the product or replace the product. Shipping costs to the repair destination is not covered.

The warranty is void if:

- 1. The TPS-500 X2 user interface, main unit or Powepacks has been opened.
- 2. The TPS-500 X2 or any of its units or components have been autoclaved or cleaned in an ultrasonic cleaner.
- 3. Powerpacks have been used on any other machine brand than InkMachines.
- 4. Components have been damaged by misuse or carelessness.
- 5. Components have been manipulated.
- 6. Alkaline or acid cleaning agents with strong bases (high or low pH) have been used on the products.
- 7. If fluids have been dripped or sprayed on the units.

InkMachines entire aggregate liability for losses and damages for any cause related to or arising out of the purchase and/or use of the product will in no event exceed the purchase price paid for the product. In no event will InkMachines be liable: (a) any indirect, special, incidental, consequential or punitive loss or damage, or other economic loss of any kind, in any case, even if advised of, or if InkMachines could reasonably foresee, the possibility thereof. The limitations, exclusions and disclaimers in this agreement shall apply irrespective of the nature of the cause of action, demand, or proceeding including but not limited to, breach of contract, negligence, tort, strict liability or any legal or equitable theory.

Documents / Resources

	Ink machines X2 Powerpack for Scorpion [pdf] Instructions X2, Powerpack for Scorpion
---	---