



## inkasus B0C6FGK22X Handheld Retro Game Console With 400 Classical FC Games User Manual

[Home](#) » [inkasus](#) » inkasus B0C6FGK22X Handheld Retro Game Console With 400 Classical FC Games User Manual 

### Contents

- [1 inkasus B0C6FGK22X Handheld Retro Game Console With 400 Classical FC Games](#)
- [2 INSTALLATION](#)
- [3 ACCESSORIES](#)
- [4 BATTERY INSTALLATION](#)
- [5 BATTERY NOTICE](#)
- [6 CARE AND MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

# Inkasus

**inkasus B0C6FGK22X Handheld Retro Game Console With 400 Classical FC Games**



## THANK YOU

Thanks for purchasing play vision portable, play vision portable product designed for many hours of game-playing fun. This product is small and portable, so you can take it anywhere! Please read the following contents prior to connecting and playing to ensure proper use and care.

## INSTALLATION



## ACCESSORIES



AV Cable

 


USB Cable



Lithium Batteries  
available

## BATTERY INSTALLATION

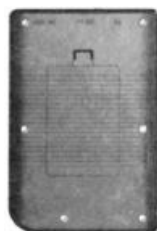 


1. Make sure the unit is turned OFF.
  2. Remove cover on bottom of unit.
  3. Remove exhausted batteries and dispose of them properly.
  4. Replace battery cover.
- **Note:** Be sure the batteries in both the handset and console are fresh or the unit will not function properly!

## BATTERY NOTICE

1. Do not short circuit battery contacts.
  2. Do not dispose of batteries in fire.
  3. Remove the batteries from the unit if it will not be used for an extended period of time.
- **NOTE:** Manufacturer assumes no liability whatsoever caused by leaking or corroding batteries.

## VIDEO OUT-CONNECTING TO A TV

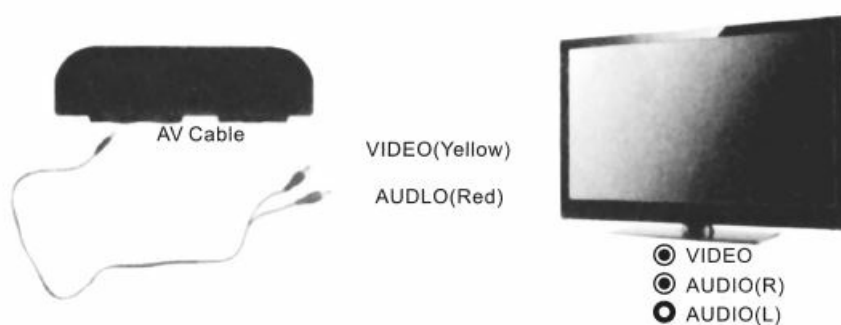

### NOTE:

1. Before connect to a TV make sure that your TV and the unit are turned off.
2. Switch the channel on TV to the Audio/Video channel.

## RESET FUNCTION

Whenever press the Reset button, it will return to the selection screen. If the game crash, please press the Reset button to restart.

## VOLUME CONTROL FUNCTION

Turn the Volume Control at the side of the unit to increase/decrease the volume.

## CARE AND MAINTENANCE

1. Do not disassemble or try to repair PVP GAME play vision portable or any of its components.
2. Do not store your PVP GAME play vision portable in a humid place, on the floor or any location where it may collect dirt, dust etc.
3. Do not drop, hit or otherwise abuse PVP GAME play vision portable or its components.
4. Make sure all connections to the PVP GAME play vision portable are made carefully and inserted into the correct locations only.
5. Do not spill liquids on your PVP GAME play vision portable or its components.
6. To clean your PVP GAME play vision portable with a soft slightly damp cloth. Always allow all the components to dry completely before using again.
7. To avoid the screen from heavy pressing or being touched by hard articles. Always clean the screen with soft and dry cloth, such as the one for spectacles.
8. Keep the kids away from cable or connecting wire or it may circle around their neck and cause the accident once the kids overexert the wires and make the unit drop down to floor.

 
## FOLLOW THE PRECAUTIONS BELOW WHENEVER USING YOUR PVP GAME PLAY VISION PORTABLE

- When using your play vision portable, do not sit or stand too close to the television screen, Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well-lit room.
- Be sure to take a 10 to 15 minutes break at least every hour while playing.

## TROUBLESHOOTING

| PROBLEM                            | SOLUTION   |
|------------------------------------|--|
| No picture on the LCD or TV screen | <ul style="list-style-type: none"><li>*Have Batteries been installed correctly?</li><li>*Is the play vision portable turned on?</li><li>*Is the TV turned on?</li><li>*Is the TV set to AV input?</li><li>*Are the play vision portable and TV connected properly?</li><li>*Check whether the battery capacity is too low.</li></ul> |
| No game sound                      | <ul style="list-style-type: none"><li>*Have any of the cables become loose or disconnected?</li><li>*Is the TV volume too low, or off?</li><li>*Check whether the battery capacity is too low.</li></ul>   |
| Picture is blinking or distorted   | Power off the play vision portable and try again.  |
| No power                           | <ul style="list-style-type: none"><li>*Have Batteries been installed correctly?</li><li>*Check whether the battery capacity is too low.</li></ul>  |

Information contained herein is subject to change without prior notice.

|   |   |
|---|---|
|  | <p><a href="#">inkasus B0C6FGK22X Handheld Retro Game Console With 400 Classical FC Games</a> [pdf]</p> <p>User Manual</p> <p>B0C6FGK22X Handheld Retro Game Console With 400 Classical FC Games, B0C6FGK22X, Handheld Retro Game Console With 400 Classical FC Games, Game Console With 400 Classical FC Games, Console With 400 Classical FC Games, With 400 Classical FC Games, Classical FC Games, FC Games</p> |
|---|---|